

Haier

Grand View Air Fryer



INSTRUCTIONS FOR SAFE USE (GB).....	P2
INSTRUCTIONS POUR UNE UTILISATION EN SÉCURITÉ (FR)....	P5
HINWEISE FÜR DIE SICHERE BENUTZUNG (DE).....	P8
ISTRUZIONI PER UN USO SICURO (IT).....	P11
INSTRUCTIES VOOR VEILIG GEBRUIK (NL).....	P14
INSTRUÇÕES PARA A UTILIZAÇÃO SEGURA (PT).....	P17
INSTRUCCIONES PARA UN USO SEGURO (ES).....	P20
INSTRUKTIONER FOR SIKKER ANVENDELSE (DK).....	P23
INSTRUKSJONER FOR SIKKER BRUK (NO).....	P26
INSTRUKTIONER FÖR SÄKER ANVÄNDNING (SE).....	P29
OHJEET TURVALLISKÄYTTÖÄ VARTEN (FI).....	P32
ИНСТРУКЦИИ ПО БЕЗОПАСНОМУ ИСПОЛЬЗОВАНИЮ (RU)..	P35
ΟΔΗΓΙΕΣ ΑΣΦΑΛΟΥΣ ΧΡΗΣΗΣ (GR).....	P38
INSTRUKCJE BEZPIECZNEGO UŻYTKOWANIA (PL).....	P41
NÁVOD K BEZPEČNÉMU POUŽITÍ (CZ).....	P44
POKYNY PRE BEZPEČNÉ POUŽITIE (SK).....	P47
GÜVENLİ KULLANIM TALİMATLARI (TR).....	P50

<https://go.he.services/haier-um>

INSTRUCTIONS FOR SAFE USE

This appliance is intended for domestic and indoor use only as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

WARNING To eliminate suffocation hazard for young children, discard all packaging materials immediately after removing the product.

Paper package for accessories may be present inside the appliance depending on the models you purchased. Remove all package before using the appliance to avoid fire hazard.

This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

Keep the appliance and its cord out of reach of

children less than 8 years.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Haier service engineer must replace the power cord.

Use only attachments, consumables or spares recommended or supplied by Haier. The use of accessories or attachments not recommended by Haier may cause injuries.

Only use the appliance in accordance with the power specification on the rating plate.

WARNING Risk of scalding! Never touch the inside of the appliance while in use and after operation. The heating element is subject to residual heat after use. Please always use the handle to carry the basket.

Only extract the basket while resting flat on a counter (or any level, heat-resistant surface).

Do not block any ventilation openings. Hot steam is released through air outlets. Keep your hands and face away from the hot steam and openings. Also be careful of hot steam and air when you remove the basket from the appliance.

Do not operate the appliance by means of an external timer or separate remote-control system.

Do not let any water or other liquid enter the appliance to prevent electric shock.

Do not pull or carry the appliance by the power cord. Always unplug the appliance from the socket by pulling the plug instead of the cord. Do not place the power cord over sharp edges or near hot surfaces. Do not use an extension cord.

Do not plug in the appliance or operate it with wet hands.

Never immerse the appliance, cord, plug or main unit in water or other liquid.

Risk of fire! The food may burn, therefore do not use the appliance near or below combustible material, such as curtains.

Do not place the appliance against the wall or other appliances. Keep a free space of at least 10cm on the back and sides of the appliance. Do not place anything on top of the appliance while in use.

WARNING Risk of injury! A misuse of the appliance can potentially lead to injury.

Pay attention to clean surfaces

which are intended to come into contact with food! Please note the information on cleaning in the instructions.

Do not use the appliance for any other purpose than described in this User Guide.

The pan, the basket and accessories inside the appliance become hot during use. Be careful when you handle them.

Do not overfill above the maximum line indicated in the basket. Prevent food from touch with heating elements. Excessive or oversized food, paper, cardboard, plastic or metal foil packages must not be cooked which may cause risk of fire.

Use the recommended cooking time for food, excessive cooking time could lead the food to burn.

Only connect the appliance to an earthed wall socket. Always make sure that the plug is inserted into the wall socket properly.

Use on worktop only. Do not place the appliance near the edge of a worktop.

Do not operate the appliance on an inclined surface and move it when working.

Do not operate the appliance without basket installed.

Do not leave the appliance unattended while in use. Keep extreme caution when using an appliance which contains hot oil or other hot liquid.

Allow the appliance to cool down before cleaning or any maintenance.

Regularly clean the basket, otherwise the residue stuck to it may smoke or burn.

Unplug from the socket after using and before cleaning the appliance or any maintenance task.

Do not continue to use your appliance if it appears faulty.

HAIER SERVICE: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Haier service engineer.



The surfaces are liable to get hot during use. Do not touch.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance,

please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via
Comolli,16, 20861 Brugherio (MB) Italy

EU 2023/826	
Power Consumption Off Mode	N.A.
Power Consumption StandBy Mode	0.3W
Power Consumption StandBy Mode with info display	1W
Power Consumption Networked StandBy	N.A.
Time to reach Off Mode/ StandBy/StandBy with display/ Networked StandBy	3min

Haier

Part no. : xxxxxxxx