 



Steps to get started.

- 1 Lift and extend the radio antenna.
- 2 Turn on Woodland Mini.
- 3 Wait a short time whilst DAB+ radio stations are found.

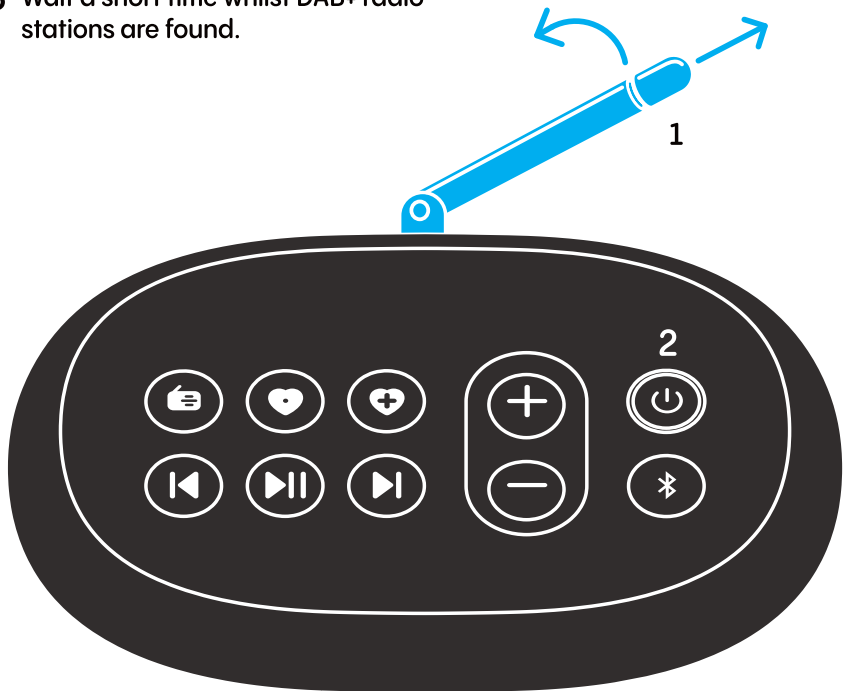

Charging.

 - 1 Connect the USB-A plug into a USB power source.
- 2 Plug the USB-C in to the charging port on the back of Woodland Mini.
- 3 When the power symbol ⚡ appears Woodland Mini will be receiving power and charging the battery if required.

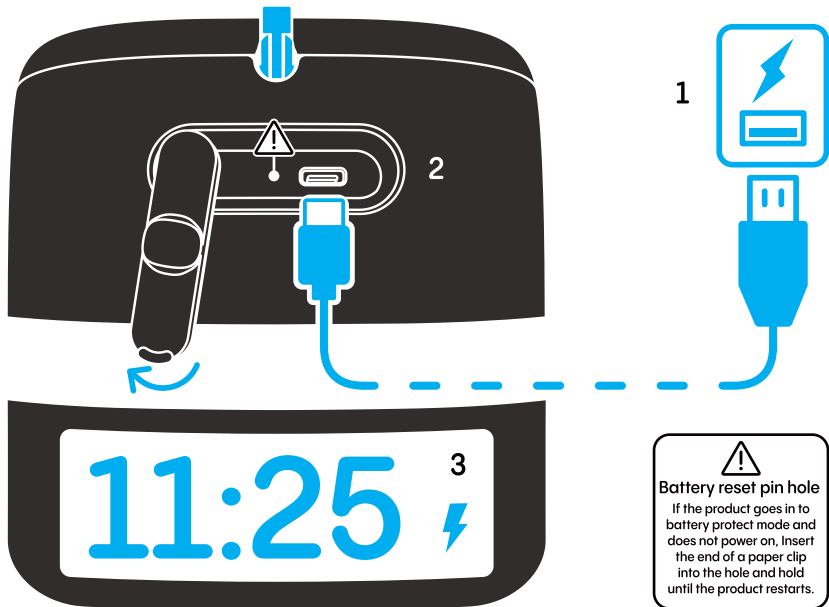

Battery reset pin hole
If the product goes in to battery protect mode and does not power on, insert the end of a paper clip into the hole and hold until the product restarts.

Controls.

Button	Tap	Hold for 2s
	Standby off / on	Turn off / on
	Tune to DAB or FM	DAB+/FM Station scan
	Recall radio preset 1	Save radio preset 1
	Open preset list to recall	Open preset list to save
	Bluetooth mode	Bluetooth pairing
	Adjust volume	Adjust volume
	DAB+ - Station navigation DAB+/FM - Preset list navigation FM - Station seek Bluetooth - Skip track	DAB+ - Preset list fast navigation FM - Auto seek Bluetooth - Navigate track
	DAB+/FM - Select station DAB+/FM - Recall or save preset DAB+/FM - Mute Bluetooth - Play/Pause	Change display information

To factory reset Woodland Mini hold down & together for 5 seconds until Factory Reset appears.

SK

Kroky pre prvé kroky.

- 1 - Zdvihnite rádiovú anténu a vysuňte ju.
- 2 - Zapnite Woodland.
- 3 - Počkajte chvíľu, kým sa nájdú DAB+ rozhlasové stanice.

Nabíjanie.

- 1 - Pripojte konektor USB-A k zdroju napájania USB.
- 2 - Pripojte konektor USB-C k nabíjacímu konektoru na zadnej strane Woodlandu.
- 3 - Keď sa objaví blesk, Woodland sa nabíja.

CZ

První kroky.

- 1 – Zvedněte a vysuňte anténu rádia.
- 2 – Zapněte Woodland.
- 3 - Počkejte chvíli, než se najdou rozhlasové stanice DAB+.

Nabíjení.


- 1 - Připojte konektor USB-A k USB zdroji napájení.
- 2 - Připojte konektor USB-C k nabíjecímu portu na zadní straně Woodlandu.
- 3 - Když se objeví blesk, Woodland se nabíjí.

For more help or support
please visit us at:
support.pure-audio.com



Warning

Woodland Mini is IP67 rated only when the rear USB rubber cover is correctly secured and in place.

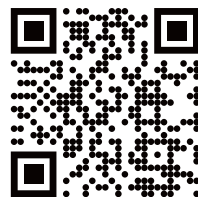

Scan me on your
smartphone camera for
more information.

Joyful Listening.



Getting Started with
Woodland Mini