

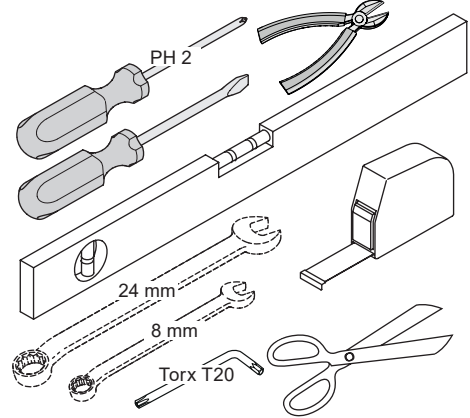
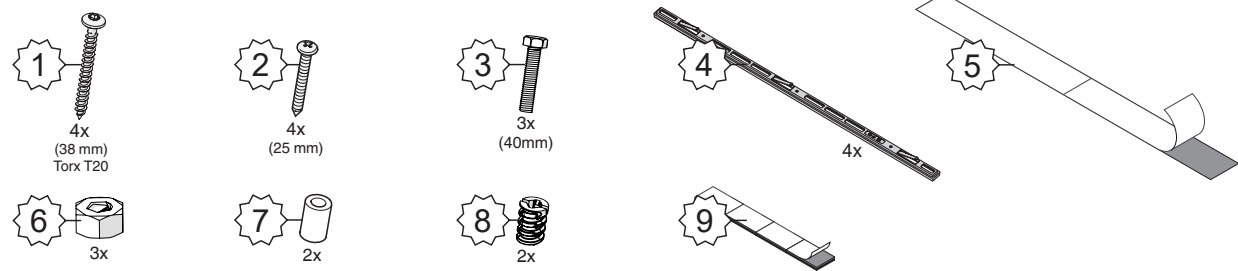
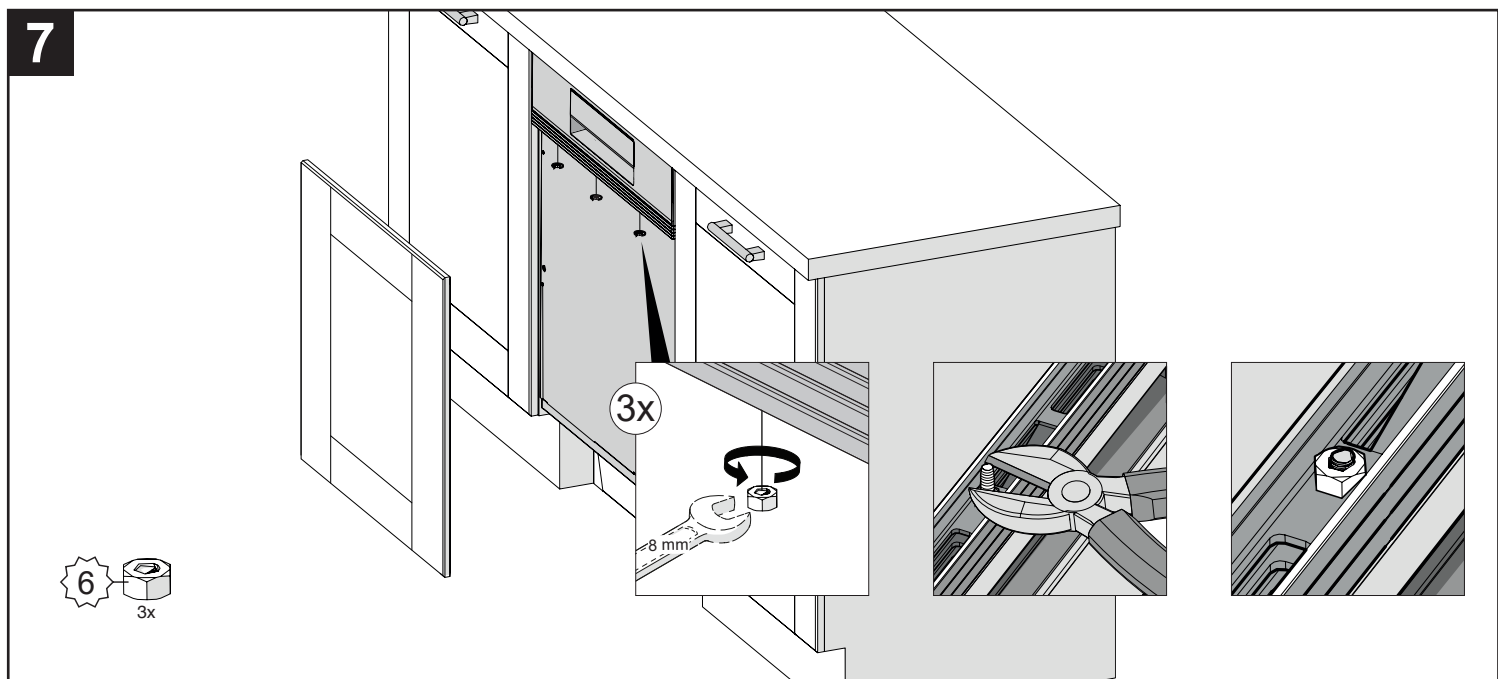
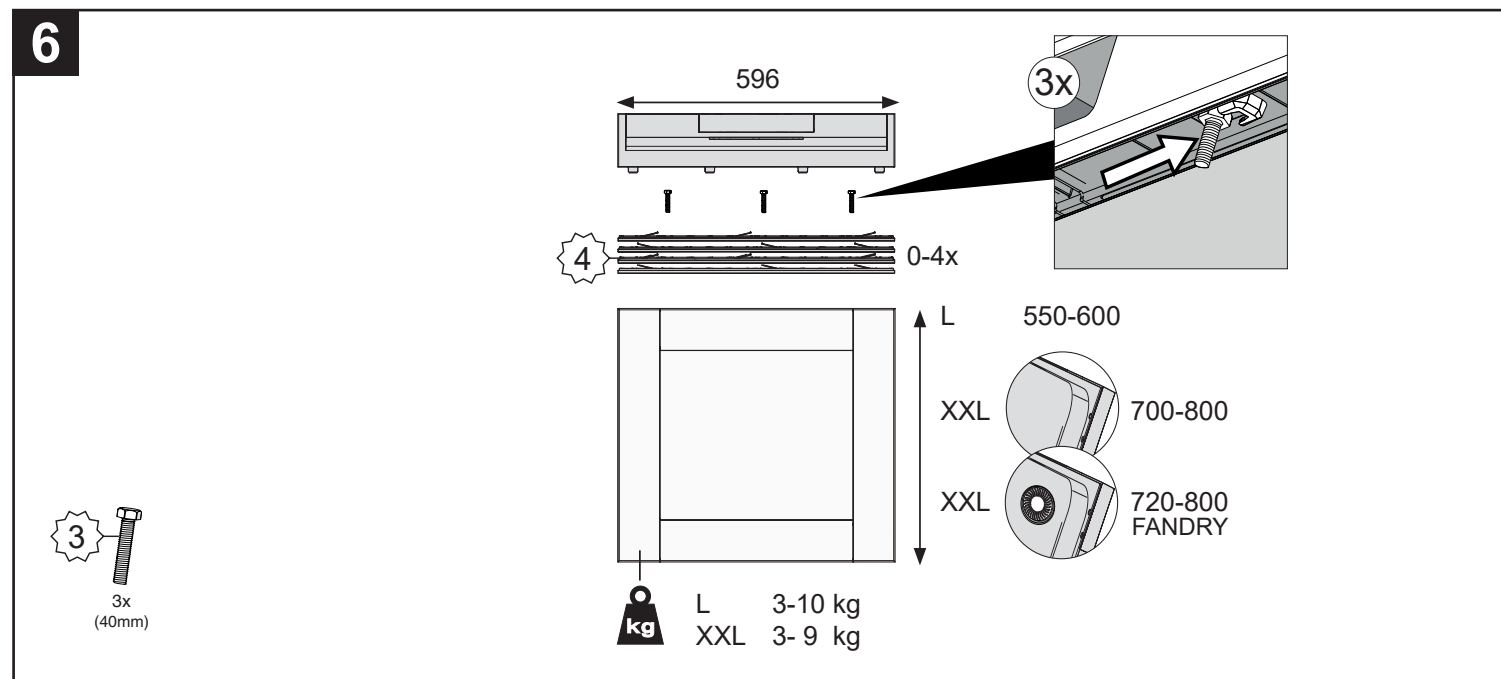
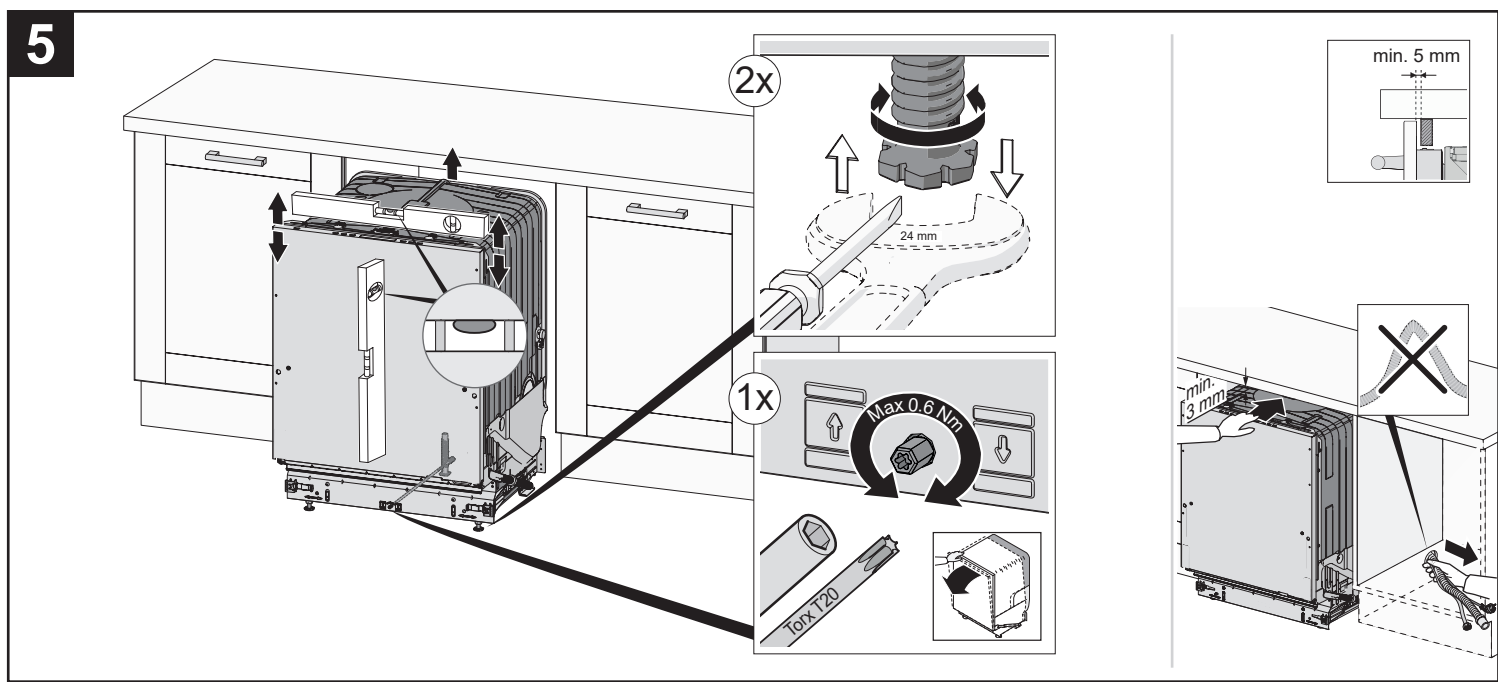
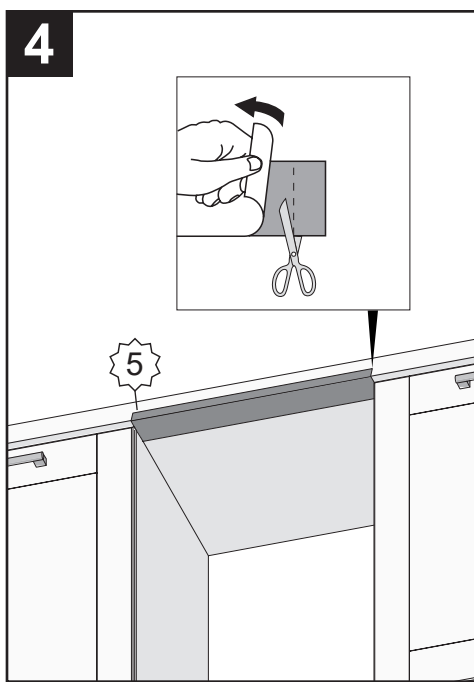
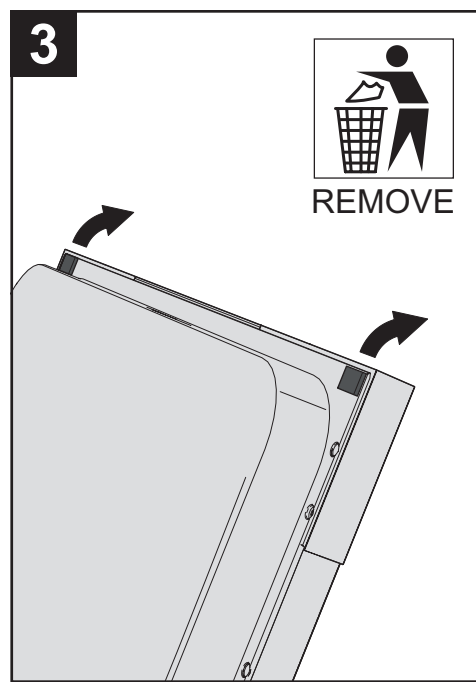


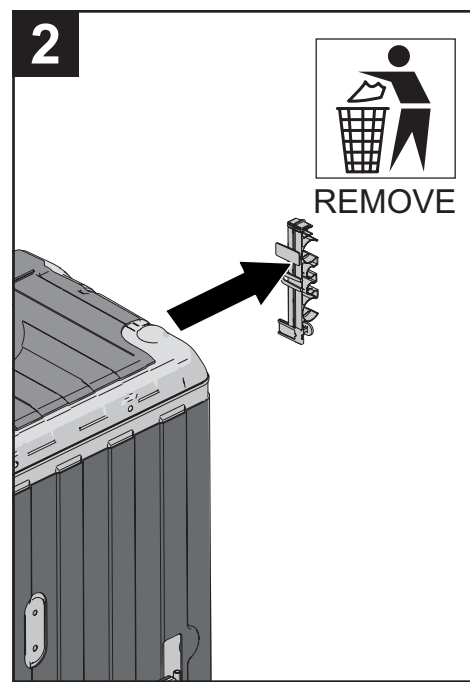

***** EN Only certain models.
If the following parts are not supplied with your dishwasher, they are not intended for your specific model.

AR	في موديلات معينة.	KK	Тех белгілі бір модельдер.	RU	Только в некоторых моделях.
BG	Само определени модели.	MK	Само kaj одредени модели.	SK	Iba niektoré modely.
CS	Pouze některé modely.	LT	Tik tam tikri modeliai.	SL	Samo nekateri modeli.
DA	Kun visse modeller.	LV	Vienīgi noteiktiem modeļiem.	SQ	Vetëm disa modele të caktuara.
DE	Nur bei bestimmten Modellen.	NL	Alleen bepaalde modellen.	SR	Samo neki modeli.
ES	Sólo se aplica a determinados modelos.	NO	Bare enkelte modeller.	SV	Endast vissa modeller.
ET	Ainult teatud mudelitel.	PL	Dotyczy tylko wybranych modeli.	UK	Тільки в деяких моделях.
FA	فقط بعضی از مدل ها.	RO	Numai la anumite modele.	CN	仅限部分型号。
FI	Vain tietyt mallit.				
FR	Uniquement pour certains modèles.				
HR	Samo na nekim modelima.				
HU	Csak bizonyos modellek esetében.				
IT	Solo per alcuni modelli.				

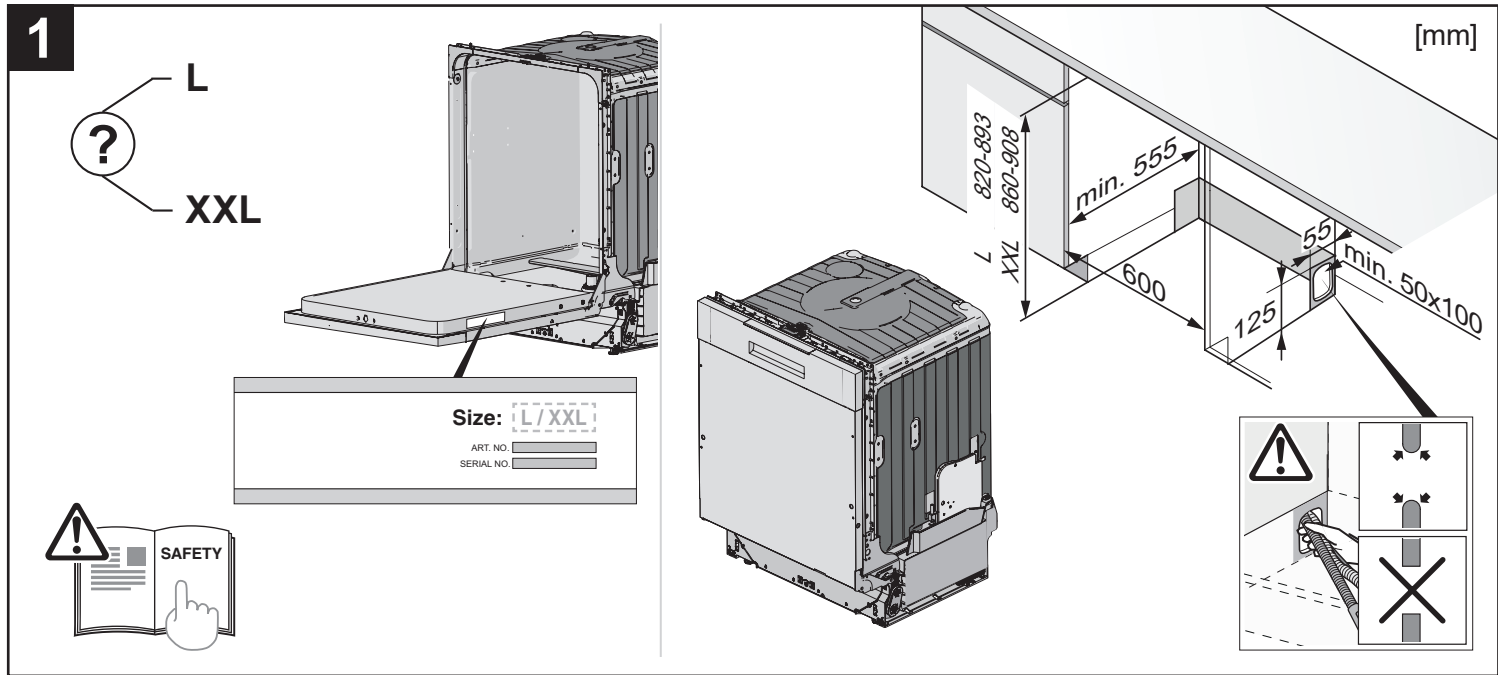

888209-01

We reserve the right to make changes.

