

THOMSON

RK200CD

PORTABLE CD PLAYER WITH RADIO & CASSETTE PLAYER



OPERATING INSTRUCTIONS

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.**

WARNING

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

Warning: Do not touch the lens.

DO NOT THROW BATTERIES IN FIRE !

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.
- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Take attention to the environmental aspects of battery disposal.
- Use the apparatus only in moderate climates.
- Do not expose the apparatus to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

 


The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

In case of malfunction due to electrostatic discharge the apparatus has to be reset by disconnecting it from mains supply.

THE MARKING INFORMATION IS LOCATED AT THE BACK OF APPARATUS.

LOCATION OF CONTROLS

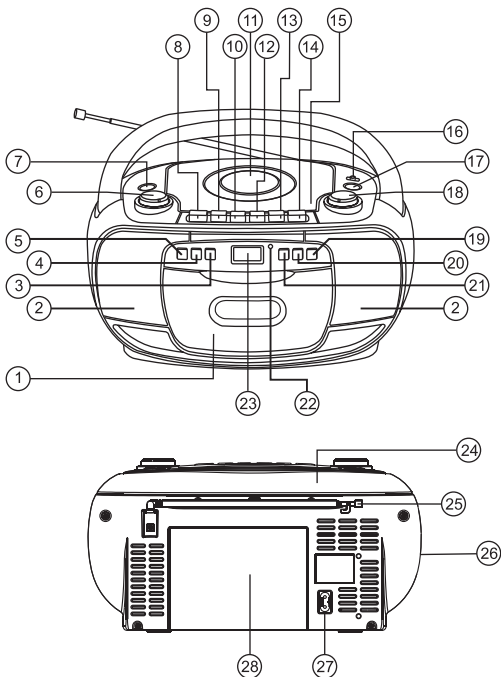

1. CASSETTE DOOR
2. SPEAKER
3. CD BACK BUTTON ◀◀
4. CD STOP BUTTON ■
5. CD PROGRAM / CLOCK-ADJ. BUTTON
6. VOLUME CONTROL
7. POWER BUTTON ⏻
8. CASSETTE PAUSE ||
9. CASSETTE STOP/EJECT ■ ▲
10. CASSETTE F.FWD ▶▶
11. CD DOOR
12. CASSETTE REWIND ▶▶
13. CASSETTE PLAY ◀
14. CASSETTE RECORD ●

15. OPEN/CLOSE CD BUTTON
16. BAND SWITCH
17. FUNCTION BUTTON
18. TUNING CONTROL
19. CD PLAY MODE BUTTON
20. CD NEXT BUTTON ▶▶
21. CD PLAY / PAUSE BUTTON ▶||
22. FM STEREO INDICATOR
23. LCD DISPLAY
24. CARRYING HANDLE
25. TELESCOPIC ANTENNA
26. AUX. IN JACK
27. AC SOCKET
28. BATTERY COMPARTMENT

POWER SUPPLY

USING HOUSE CURRENT

Before use, check that the rated voltage of your unit matches your local voltage.

Note: Plug is used as the disconnect device.

 
 
The disconnect device shall remain readily operable.

USING BATTERIES

Disconnect the AC power cord from the AC inlet of the unit.


Battery power is cut automatically by the cord while it is connected.

battery door

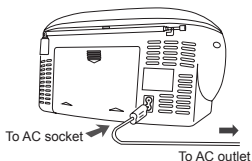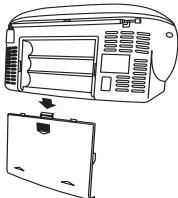

When the volume decrease, or the sound distorts, replace all of the batteries with new ones.

 Insert six UM-2
(size C) batteries.



TURN ON / OFF THE SYSTEM

 
Press the POWER  button to turn the audio on.

To change the audio mode between RADIO, AUX, TAPE and CD, press the FUNCTION button while the power is on.

The audio mode is displayed.

Turn off the unit by pressing the POWER  button.

" OFF " word will be shown on the display and then resume the current time.

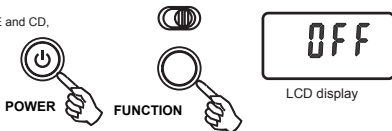

AUX. IN

An external (auxiliary) audio source (i.e., personal CD player or MP3 player) can be connected to this unit and heard through the speakers.

 
- 1) Plug one end of cable into the AUX IN socket on the unit.
- 2) Plug the other end of the cable into the Headphone or Line Out socket of the external source.

- 3) Press the FUNCTION button to select AUX.

Continue to operate CD or MP3 player as usual.

Selections will be heard through the unit's speakers.

Unit will be automatically off after 4.5 hours without further operation.

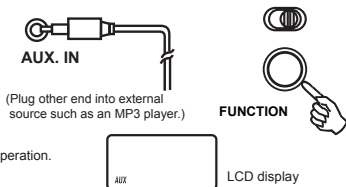

ADJUSTING THE SOUND

 
TO ADJUST THE VOLUME



CLOCK ADJUSTMENT

The clock is displayed on LCD display at standby mode.

1. Press and hold the PROGRAM / CLOCK-ADJ. button.
2. Press the ►►► NEXT or ◀◀◀ BACK to select 12 hours or 24 hours display.
3. Press the PROGRAM / CLOCK-ADJ. button, the hour digit flash.
4. Press the ►►► NEXT or ◀◀◀ BACK to adjust hour digit.
5. Press the PROGRAM / CLOCK-ADJ. button, the minute digit flash.
6. Press the ►►► NEXT or ◀◀◀ BACK to adjust minute digit.
7. Press the PROGRAM / CLOCK-ADJ. button again, the correct time is shown on display.


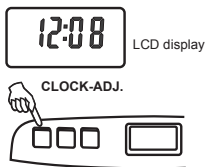


LISTENING TO THE RADIO


1. Turn on the unit by pressing the POWER button.



  
2. Press the FUNCTION button to select RADIO.

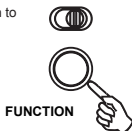

 3. Select a band.



 
4. Tune in to a station.

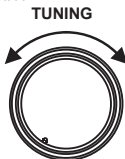

5. Adjust the sound.



 FOR BETTER RECEPTION

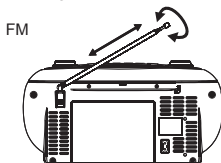

AFTER LISTENING

Turn off the unit by pressing the POWER button.

COMPACT DISC PLAYBACK

1. Turn on the unit by pressing the POWER  button.



POWER

2. Press the FUNCTION button to select CD. The symbol " _ " flashes for searching CD disc.



LCD display



FUNCTION

3. Open the CD door by pushing Open / Close CD button.



4. Insert a disc with the label side facing up.

5. Close the CD door.
The disc will rotate and the total tracks of the disc will show on the display.



6. Press the PLAY/PAUSE  button. Track number "01" & the symbol " ► " will be shown.



LCD display



TO INTERRUPT PLAYBACK

Press the Play/ Pause  button and the symbol " ► " will be flashed. Press the button again to resume playback.



LCD display



TO STOP PLAYBACK

Press the STOP  button and the display shows the total tracks of the disc.



TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the   skip buttons according to the desired skip direction.
- Play/back resumes from the selected track.
- When the  button is pressed once during play, the previous track starts again.
- When the  button is pressed once during play, the next track plays.

SEARCHING FOR A PASSAGE WITHIN A TRACK

- Keep the  or  button pressed during playback, and release the button as soon as you recognise the desired passage. Then normal CD playback will resume from this point.



Unit will be automatically off after 30mins without further operation (in stop mode / CD door open).

REPEAT , REPEAT ALL AND MIX PLAYBACK

Press PLAY MODE button during stop mode. CD plays with a single track repeat, all tracks repeat or randomly.

PLAY MODE



FOR NORMAL COMPACT DISC PLAYBACK

Mode sequence REPEAT >> REPEAT ALL >> MIX >> CLEAR.

During Repeat 1 mode, display shows



During Mix mode, display shows



LCD display

During Repeat 2 mode, display shows



LCD display

PROGRAMMED PLAYBACK

 
PROGRAMMED PLAYBACK

Programmed playback enables tracks on a disc to be played in the desired order. Up to 20 tracks can be programmed.

1. Press the "PROGRAM" button.
2. Press the "NEXT" and "BACK" buttons to select the desired track number.
3. Press the "PROGRAM" button again to memorize the track.
4. Repeat steps 2 and 3 until all desired tracks are programmed.
5. Press the "PLAY/PAUSE" button to start.
"▶", "PROG" & track number are shown on the CD display.
6. Press the "STOP" button once to stop programmed playback.

7. Press the "PLAY/PAUSE" button to resume programmed playback.
8. Open the CD door, turn off the CD player or press the "STOP" button twice to clear the programmed memory.

Note : Programming can only be made when the player is in stop mode.



LCD display

Note on CD-R/RW discs

- Because of non-standardized format definition/ production of CD-R/RW, playback quality and performance are not guaranteed.
- Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.
- It is recommended to record only audio files on CD-R/RW discs for easy reading.

TAPE PLAYBACK

1. Turn on the unit by pressing the POWER  button.



POWER

2. Press the FUNCTION button to select TAPE.



FUNCTION



LCD display

3. Insert the cassette.



4. Press the  PLAY button.



PLAY

TO STOP PLAYBACK

Press the STOP / EJECT button.

TO INTERRUPT PLAYBACK

Press the PAUSE button.

To resume play, press the PAUSE button again.

TO FAST WIND

Press the REWIND or F.FWD button. Press the STOP / EJECT button to stop winding at the desired position.

RECORDING

USE ONLY NORMAL (TYPE I) TAPE FOR RECORDING.

1. Insert the cassette tape.



2. Press the PAUSE  button.



3. Press the RECORD  button.



4. Prepare to play the source to be recorded and play it. Press the FUNCTION button to select CD or RADIO.

Recording from a CD



PLAY THE CD

Recording from the radio



TUNE INTO A STATION

5. Press the PAUSE  button.



TO STOP RECORDING

Press the STOP / EJECT button.

TO INTERRUPT RECORDING

Press the PAUSE button.

To resume recording, press the PAUSE button again.

TO ERASE A RECORDED TAPE

1. Press the FUNCTION button to select TAPE.
2. Insert a tape with the side you want to erase facing you.
3. Press the RECORD button to start erasing.

MAINTENANCE

CLEANING CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.



CLEANING THE UNIT

 
Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

IMPORTANT NOTE

If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

CLEANING THE CD LENS

If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.

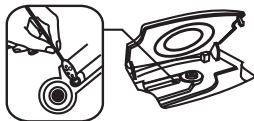

WARNING

Should the CD door be opened before the reading of the CD is completed, a jamming noise may occur. This is resolved by closing the CD door.

SPECIFICATIONS

CASSETTE SECTION

Track format:	2 track stereo
Recording system:	AC bias
Erasing system:	Magnetic erase 6 poles
Tape speed:	4.75 cm / sec.
F.F. & REW time:	170 sec. (F-60 tapes)
Frequency response:	125 Hz - 8000 Hz (Normal tape)

CD SECTION

Channels:	2 channels
S / N ratio:	60 dB
Wow & Flutter:	undetectable
Sampling frequency:	44.1 kHz 8 x over sampling
Quantization:	1 bit DA converter
Pick up light source:	Semi - conductor laser
Pick up wave length	790 nm

RADIO SECTION

Tuning ranges:	FM 88 - 108 MHz AM 540 - 1600 kHz AM Built - in ferrite bar FM Rod antenna
Antennas:	

GENERAL

Output power:	1.2 W + 1.2 W (RMS)
Power consumption:	9.5 W
Aux In Jack:	3.5 MM
Speaker:	3 " 8 OHM
Power source:	AC : 230V ~ 50Hz DC : 9V (6 x 1.5V LR14/ "C"/UM2)

Dimensions:	294(L) x 206(D) x 153(H)mm
Weight	1.72 KGS

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :

Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.

Don't throw the electrical and electronical appliances into the usual dustbin.

- Bring them to a collecting point.
- Some parts contained in these appliances may be dangerous for health and environment.

Imported by BIGBEN INTERACTIVE SA
396, Rue de la Voyette
CRT2 - FRETIN
CS 90414
59814 LESQUIN Cedex - France
www.bigben.eu



MADE IN CHINA



Importateur : Bigben Interactive FRANCE

396, Rue de la Voyette, C.R.T. 2 Fretin,
CS 90414 - 59814 LESQUIN Cedex

Bigben Interactive DEUTSCHLAND GmbH

Walter Gropius Str. 28, 50126 Bergheim, Deutschland

Bigben Interactive BELGIUM

Avenue Ernest Solvay, 1480 Tubize, Belgique

Bigben Interactive NEDERLAND b.v.

Franciscusweg 249-3B, 1216 SG Hilversum, Nederland

Bigben Interactive SPAIN S.L.

C/ Musgo 5, 2ª planta, 28023 Madrid, Spain

Bigben Interactive ITALIA s.r.l

Corso Sempione 221, 20025 Legnano - MI, Italia

FABRIQUÉ EN CHINE / MADE IN CHINA

HOTLINE

FRANCE, du lundi au vendredi (sauf jours fériés) :
9h00-19h00 ou support@thomsonaudiovideo.eu

 **N°Cristal 09 69 32 59 62**

APPEL NON SURTAXE

DEUTSCHLAND, Montag bis Sonntag von 8:00 bis 24:00 Uhr

09001-84 30 44* (0,49€/Min. aus dem deutschen Festnetz, Anrufe aus allen
Mobilfunknetzen nicht möglich) oder support@bigben-interactive.de

*Minderjährige müssen vorher einen Erziehungsberechtigten um Erlaubnis fragen.

BELGIQUE / NEDERLAND, klantenservice@bigben-interactive.nl
customerservice@bigben-interactive.be

ESPAÑA, sat@bigbeninteractive.es

ITALIA, support@bigbeninteractive.it

www.bigben.eu

THOMSON is a trademark of TECHNICOLOR SA or its affiliates used under license to
Bigben Interactive.