

12030051400-A MANUAL, LuxeMate Q8100
60P 白色模造紙 / 單色黑 / 雙面印刷 / 成型尺寸 : 135x95 mm
PDD-Kathy 2019/08/19

完成面積須為135mm x 95mm
折法以印刷廠能製作為準

 
封面W:135mm

正面印刷

封面H:95mm



LuxeMate Q8100 2.4Ghz Wireless Keyboard & Mouse Combo



Quick Guide

Copyright© 2019 KYE SYSTEMS CORP.

KYE Systems Corp.
#492, Sec. 5, Chongjin Rd., Sandong Dist.,
New Taipei City 24160, Taiwan
Tel: 886-2-2995-6645
Fax: 886-2-2995-6649
Email: info@kysystem.com.tw
http://www.kysystem.com.tw

KYE International Corp. (USA & Canada)
12675 Colony Street, Chino, CA 91710, USA
Tel: 1-626-226-2678
Tel: 1-800-756-4115 (Toll Free Line)
Fax: 1-626-226-2679
http://www.kysystemusa.com
http://www.geniushop.com




Figure

- 1 Remove the battery cover from the mouse. Install two AAA batteries into the mouse.



- 2 Remove the battery cover from the keyboard. Install two AAA batteries into the keyboard.

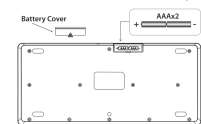

Replace Batteries

If the mouse or keyboard does not work properly, then the battery may be low. Please check the battery level. Warning: do not mix or use different types of batteries at the same time.

Notes on Battery Usage

- When you use the battery, carefully read and strictly observe the Safety instructions and the notes described below.
- Different battery types and surrounding temperatures may affect the battery performance.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
- If you are using a non-rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time, according to local regulations, you can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
- The battery or wireless device may freeze when using for an extended period of time. This is normal and not a malfunction. If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
- Always keep the terminals in a clean state.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to local regulations.

3

Plug the receiver into your computer



- 1 Connect both devices, wait 5-10 seconds and you are ready to begin



Mouse Button Assignments

1. Left Button: Provides traditional mouse functions like click, double click and drag.
2. Magic-Roller: Scroll the button to surf the Internet and Windows documents.
3. Right Button: Provides traditional mouse right click function.
4. DPI: 800 / 1200 / 1600

Keyboard function key definition

	Fn + F1	Media Player
	Fn + F2	Volume -
	Fn + F3	Volume +
	Fn + F4	Mute
	Fn + F5	Previous Track
	Fn + F6	Next Track
	Fn + F7	Play/Pause
	Fn + F8	Stop/Playing
	Fn + F9	Web / Homepage
	Fn + F10	Email
	Fn + F11	My computer
	Fn + F12	My favorite

Русский	Определение функциональных клавиш клавиатуры
	Fn + F1 проигрыватель Windows Media
	Fn + F2 понижение уровня звука
	Fn + F3 повышение уровня звука
	Fn + F4 отключение звука
	Fn + F5 назад
	Fn + F6 далее
	Fn + F7 воспроизведение и пауза
	Fn + F8 остановка воспроизведения
	Fn + F9 веб-браузер
	Fn + F10 электронная почта
	Fn + F11 Мой компьютер
	Fn + F12 Мои любимые

Deutsch	Tastaturfunktionstastendefinition
	Fn + F1 Media Player
	Fn + F2 Lautstärke -
	Fn + F3 Lautstärke +
	Fn + F4 Stumm
	Fn + F5 Vorheriger
	Fn + F6 Nächster
	Fn + F7 Wiedergabe/Pause
	Fn + F8 Wiedergabe stoppen
	Fn + F9 Webbrowser
	Fn + F10 Email
	Fn + F11 Mein Computer
	Fn + F12 Mein Favorit

Français	Définition de la touche de fonction du clavier
	Fn + F1 Lecteur multimédia
	Fn + F2 Volume -
	Fn + F3 Volume +
	Fn + F4 Silence
	Fn + F5 Précédent
	Fn + F6 Suivant
	Fn + F7 Lecture/Pause
	Fn + F8 Arrêt de la lecture
	Fn + F9 Navigateur
	Fn + F10 Email
	Fn + F11 mon ordinateur
	Fn + F12 mon préféré

Italiano	Definizione del tasto funzione tastiera
	Fn + F1 Media Player
	Fn + F2 Volume -
	Fn + F3 Volume +
	Fn + F4 Muto
	Fn + F5 Precedente
	Fn + F6 Prossimo
	Fn + F7 Riproduzione/Pausa
	Fn + F8 Ferma Riproduzione
	Fn + F9 Web Browser / Home
	Fn + F10 E-mail
	Fn + F11 Il mio computer
	Fn + F12 Il mio preferito

Español	Definición de la tecla de función del teclado
	Fn + F1 Reproductor multimedia
	Fn + F2 Volumen -
	Fn + F3 Volumen +
	Fn + F4 Silencio
	Fn + F5 Anterior
	Fn + F6 Siguiente
	Fn + F7 Reproducir/Pausar
	Fn + F8 Pausar reproducción
	Fn + F9 Navegador de Internet
	Fn + F10 Correo electrónico
	Fn + F11 Mi computadora
	Fn + F12 Mi favorito

Portuguê	Definição da tecla de função do teclado
	Fn + F1 Tecedor de Mídia
	Fn + F2 Volume -
	Fn + F3 Volume +
	Fn + F4 Mudo
	Fn + F5 Anterior
	Fn + F6 Próximo
	Fn + F7 Play / Pausa
	Fn + F8 Parar Reprodução
	Fn + F9 Navegador Web
	Fn + F10 E-mail
	Fn + F11 Meu computador
	Fn + F12 Meu favorito

Česky	Definice funkcí klávesy na klávesnici
	Fn + F1 Media Player
	Fn + F2 Hlasitost -
	Fn + F3 Hlasitost +
	Fn + F4 Ztlumení zvuku
	Fn + F5 Předchozí
	Fn + F6 Další
	Fn + F7 Přehráv. / Pauza
	Fn + F8 Ukáončení přehrávání
	Fn + F9 Internetový prohlížeč
	Fn + F10 Email
	Fn + F11 Můj počítač
	Fn + F12 Můj oblíbený

Magyar	Billentyűfunkciók meghatározása
	Fn + F1 Média lejátszó
	Fn + F2 Hangosít -
	Fn + F3 Hangosít +
	Fn + F4 Zsilumelés
	Fn + F5 Előző
	Fn + F6 Következő
	Fn + F7 Lejátszás / Szünet
	Fn + F8 Lejátszás leállítás
	Fn + F9 Webböngésző
	Fn + F10 E-mail
	Fn + F11 A számítógépem
	Fn + F12 A kedvencem

Polski	Definicja klawisza funkcyjnego klawiatury
	Fn + F1 Odtwarzacz multimedialny
	Fn + F2 Głośność -
	Fn + F3 Głośność +
	Fn + F4 Cisza
	Fn + F5 Wstecz
	Fn + F6 Następnie
	Fn + F7 Odtwarzanie / Pauza
	Fn + F8 Zatrzymanie odtwarzania
	Fn + F9 Przeglądarka internetowa
	Fn + F10 E-mail
	Fn + F11 Mój komputer
	Fn + F12 Mój ulubiony

Slovenko	Definicija funkcije tipke na tipkovnici
	Fn + F1 Predvajalnik medijev
	Fn + F2 Glasnost -
	Fn + F3 Glasnost +
	Fn + F4 Utišaj
	Fn + F5 Prejšnja
	Fn + F6 Naslednja skladba
	Fn + F7 Predvajanje/zustavi
	Fn + F8 Zastavljanje predvajanja
	Fn + F9 Vebovni prebrskovalnik
	Fn + F10 E-pošta
	Fn + F11 Moj računalnik
	Fn + F12 Moj najljubši

Slovenina	Definicija funkcijskega ključeva ključavnice
	Fn + F1 Media Player
	Fn + F2 Hlastost -
	Fn + F3 Hlastost +
	Fn + F4 Stišenje
	Fn + F5 Predhodnjaci
	Fn + F6 Naslednjaci
	Fn + F7 Prehvat/Preustit
	Fn + F8 Zastavljanje prehrivanja
	Fn + F9 Webovni prehladač
	Fn + F10 e-mail
	Fn + F11 Moj počítač
	Fn + F12 Moj oblíbený

Srpski	Definicija tipkovnice za funkciju tipkovnicu
	Fn + F1 Media player
	Fn + F2 Jačina zvuka -
	Fn + F3 Jačina zvuka +
	Fn + F4 Priključenje
	Fn + F5 Prethodno
	Fn + F6 Sledeće
	Fn + F7 Reprodukacija/Pauza
	Fn + F8 Prekid reprodukcije
	Fn + F9 Pregledat veb
	Fn + F10 E-pošta
	Fn + F11 moj računalo
	Fn + F12 moj favorit

反面印刷

Română	Definiția cheii funcției tastaturii
	Fn + F1 Player Media
	Fn + F2 Volum -
	Fn + F3 Volum +
	Fn + F4 Oprire sunet (Mute)
	Fn + F5 Înapoi
	Fn + F6 Înainte
	Fn + F7 Redare / Pauză
	Fn + F8 Oprire redare
	Fn + F9 Browser web / Home
	Fn + F10 E-mail
	Fn + F11 Calculatorul meu
	Fn + F12 Preferatul meu

Български	Дефиниции на клавишните функции на клавиатурата
	Fn + F1 Медия плейър
	Fn + F2 Ниво на звука -
	Fn + F3 Ниво на звука +
	Fn + F4 Без звук
	Fn + F5 Предишна
	Fn + F6 Следваща
	Fn + F7 Възпроизвеждане/пауза
	Fn + F8 Спиране на възпроизвеждането
	Fn + F9 Уеб браузър
	Fn + F10 Е-мейл
	Fn + F11 Моят компютър
	Fn + F12 Моят фаворит

Українська	Визначення клавішної функції клавіатури
	Fn + F1 Медіа плейер
	Fn + F2 Гучність -
	Fn + F3 Гучність +
	Fn + F4 Без звуку
	Fn + F5 Попередній
	Fn + F6 Наступний
	Fn + F7 Відтворення/Пауза
	Fn + F8 Зупинити відтворення
	Fn + F9 Веб-браузер
	Fn + F10 Електронна пошта
	Fn + F11 Мій комп'ютер
	Fn + F12 Мій улюблений

Eesti	Klaviatuuri funktsiooniklahvi määratlus
	Fn + F1 Meediapleier
	Fn + F2 Helisügavus -
	Fn + F3 Helisügavus +
	Fn + F4 Vaigistamine
	Fn + F5 Eelmine
	Fn + F6 Järgmine
	Fn + F7 Taasesitus/paus
	Fn + F8 Seiskamine
	Fn + F9 Veebi veebileht
	Fn + F10 E-post
	Fn + F11 Muu arvuti
	Fn + F12 Muu lemmik

Latviešu	Tastatūras funkcijas taustiņu definīcija
	Fn + F1 Multivides atskaņotājs
	Fn + F2 Garsas -
	Fn + F3 Garsas +
	Fn + F4 Klusums
	Fn + F5 Priekšējais
	Fn + F6 Tālāk
	Fn + F7 Atskaņot/pauze
	Fn + F8 Apturēt atskaņošanu
	Fn + F9 Tīmekļa pārlūkis
	Fn + F10 E-pasts
	Fn + F11 Mans dators
	Fn + F12 Mans mīļākais

Latviski	Klaviatūros funkcijos klavišo apibrėžimas
	Fn + F1 Medijos grotuvas
	Fn + F2 Garsas -
	Fn + F3 Garsas +
	Fn + F4 Nutildyti
	Fn + F5 Ankstesnis
	Fn + F6 Kitas
	Fn + F7 Grod/Pauzė
	Fn + F8 Sustabdyti grojimą
	Fn + F9 Interneto naršyklė
	Fn + F10 El. paštas
	Fn + F11 Mano kompiuteris
	Fn + F12 Mano mėgstamiausias

عربي	تعريفات أزرار وظائف لوحة المفاتيح
	Fn + F1 مشغل الوسائط
	Fn + F2 مستوى الصوت -
	Fn + F3 مستوى الصوت +
	Fn + F4 إيقاف الصوت (Mute)
	Fn + F5 السابق
	Fn + F6 التالي
	Fn + F7 تشغيل/توقف
	Fn + F8 إيقاف التشغيل
	Fn + F9 متصفح ويب / الصفحة الرئيسية
	Fn + F10 البريد الإلكتروني
	Fn + F11 حواسبتي
	Fn + F12 مفضلي

Հայերեն	Պերդադեպի ֆունկցիայի կլաշի նշանակություն
	Fn + F1 Մեդիա խաղիչ
	Fn + F2 Դիպե՛րեղներ -
	Fn + F3 Դիպե՛րեղներ +
	Fn + F4 Դիպե՛րեղ փառ
	Fn + F5 Անցյալը
	Fn + F6 Հաջորդ
	Fn + F7 Փնտրում/դադար
	Fn + F8 Փնտրումը դադարեցնել
	Fn + F9 Վեբ-բրաւզեր
	Fn + F10 Էլեկտրոնային փոստ
	Fn + F11 Մոյն կոմպյուտեր
	Fn + F12 Մոյն սպիտակ

繁體中文	功能鍵使用說明
	Fn + F1 影音播放器
	Fn + F2 降低音量
	Fn + F3 提高音量
	Fn + F4 靜音
	Fn + F5 上一曲目
	Fn + F6 下一曲
	Fn + F7 播放/暫停
	Fn + F8 播放/暫停
	Fn + F9 網路瀏覽器
	Fn + F10 打開郵件
	Fn + F11 我的電腦
	Fn + F12 我的最愛

简体中文	功能键使用说明
	Fn + F1 影音播放器
	Fn + F2 降低音量
	Fn + F3 提高音量
	Fn + F4 静音
	Fn + F5 上一曲
	Fn + F6 下一曲
	Fn + F7 播放/暂停
	Fn + F8 播放/暂停
	Fn + F9 网络浏览器
	Fn + F10 电子邮件
	Fn + F11 我的电脑
	Fn + F12 我的电脑

Symbol for European Countries in European Countries

This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The symbol is placed on the product and the user is advised to read the instructions carefully. The symbol is placed on the product and the user is advised to read the instructions carefully.

Symbol for European Countries in European Countries
This symbol indicates that the product is to be used only in Europe. The