

SENCOR®

SVC 8310BK 4AAAA EcoPower
SVC 8330BK 4AAAA EcoPower



BAGGED VACUUM CLEANER

Translation of the original manual






SENCOR®

SVC 8310BK 4AAAA EcoPower
SVC 8330BK 4AAAA EcoPower




A

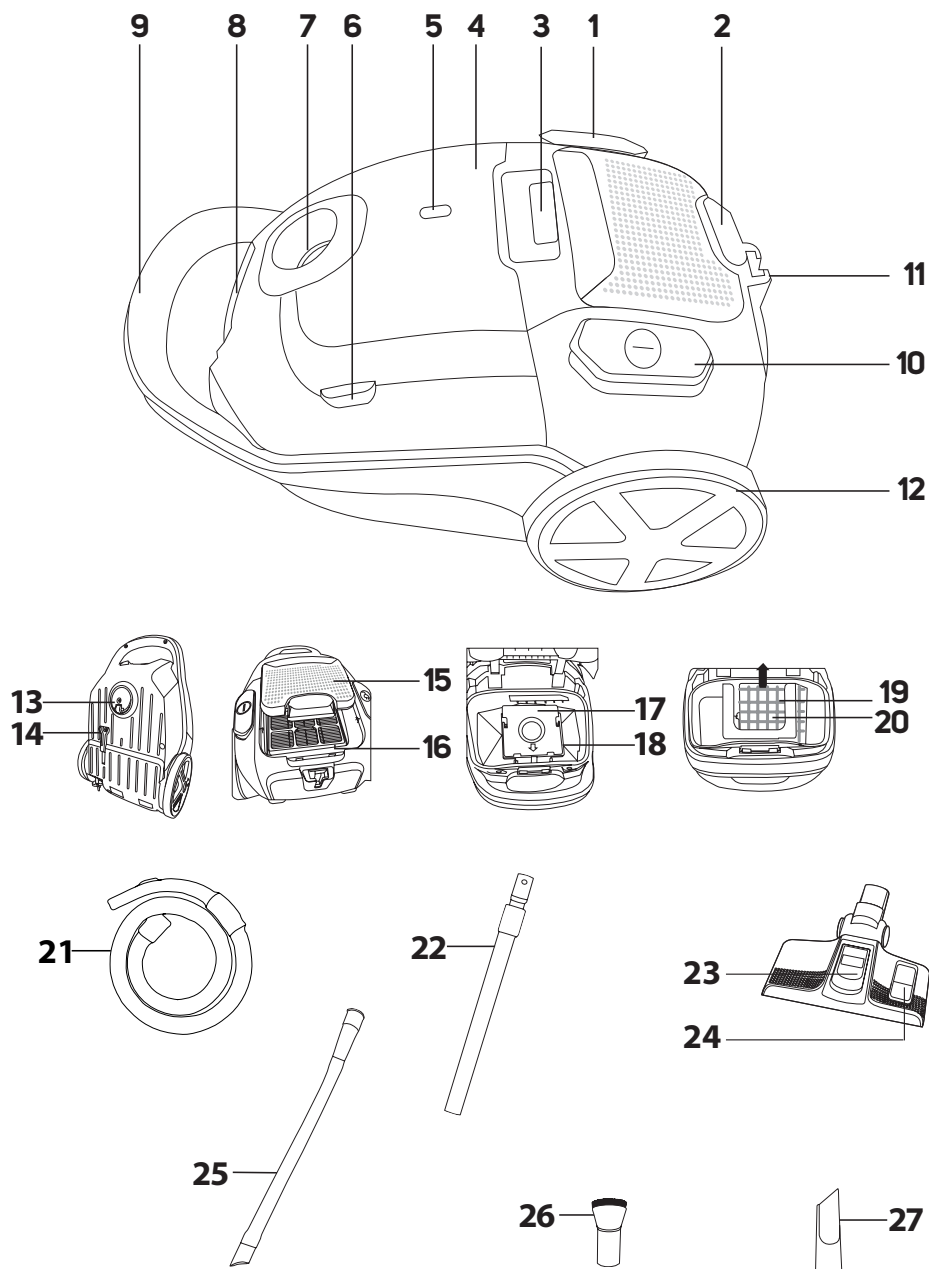

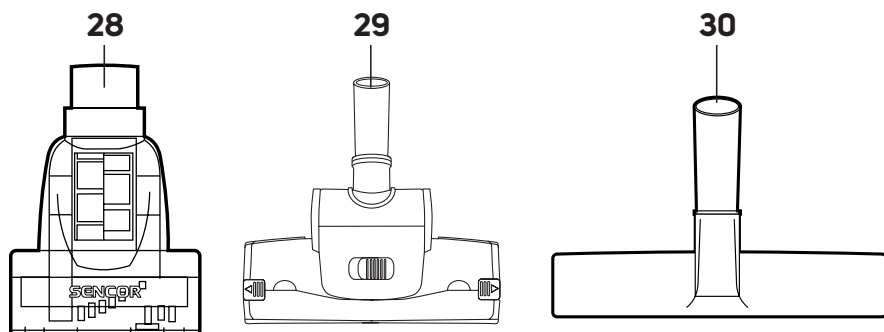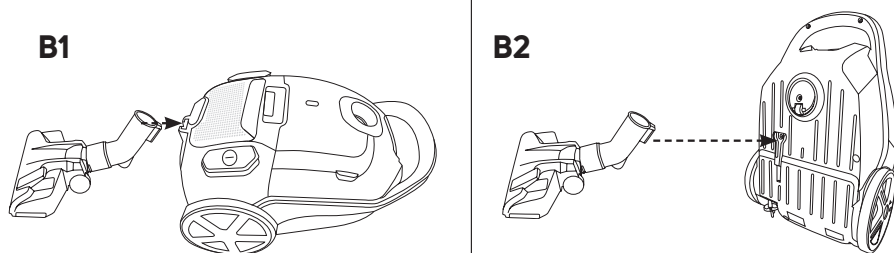
A**B**

C

C1

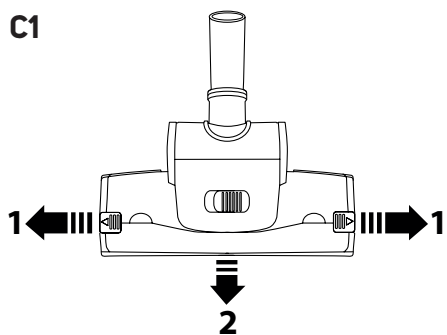

C2

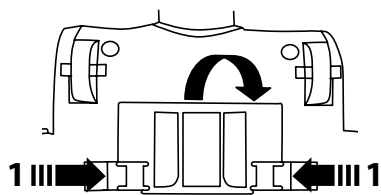

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This vacuum cleaner may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use this vacuum cleaner in a safe manner and understand the potential dangers. Children must not play with the vacuum cleaner. Cleaning and maintenance performed by the user must not be performed by unsupervised children. Keep the vacuum cleaner and its accessories out of reach of children that are younger than 8 years of age.
- This vacuum cleaner is designed for use in households, offices and similar types of areas. Do not use in industrial surroundings.
- Do not expose the vacuum cleaner to direct sunlight and do not place it near an open fire or appliances that are a source of heat.
- Before connecting the power cord to a power socket, check that the technical details on the vacuum cleaner's rating label match the electrical voltage in the socket.
- Make sure the power cord is not touching a hot surface or sharp objects.

- Do not submerge the vacuum cleaner under water or any other liquid and do not rinse it under running water.
- Before turning on the vacuum cleaner, make sure that the dust bag is inserted inside and that the inflow micro-filter and the outflow HEPA filter are installed in their place.
- When the vacuum cleaner is running, ensure that the air outlets and the suction opening are not blocked.
- Do not use the vacuum cleaner to vacuum the following items:
 - smouldering cigarettes, burning items, matches or embers;
 - water and other liquids;
 - flammable or volatile materials;
 - sharp items, e.g. broken glass, needles, pins, etc.;
 - flour, wall plaster, cement and other building materials;
 - larger pieces of paper or plastic bags, which can easily block the suction opening.
- Vacuuming of some types of floors or floor surfaces can create an electrostatic discharge, which presents no danger to the user.
- Do not place the suction nozzle or tube against any parts of the face.
- Always turn off the vacuum cleaner and disconnect it from the power socket when leaving it without supervision, after finishing using it and before cleaning it.
- Disconnect the power cord from the power socket by pulling on the plug, never pulling on the cord. Otherwise, this could damage the power cord or the socket. Hold the power cord in your hand when winding it up.

- In the event that the power cord is damaged, it must be replaced by an authorised service centre or by a similarly qualified person, this will prevent the creation of a dangerous situation. It is forbidden to use the vacuum cleaner if it has a damaged power cord.
- Do not use the vacuum cleaner if it is not working correctly, if it has been damaged or has been submerged in water. Do not repair the vacuum cleaner yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.



Safety class for electrical shock protection:
Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Bagged Vacuum Cleaner

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE VACUUM CLEANER AND ITS ACCESSORIES

- | | |
|---|---|
| A1 Automatic power cord winding button | A17 Dust bag* |
| A2 Filter handle | A18 Dust bag holder |
| A3 Electronic suction power control | A19 Grill of the inflow micro-filter |
| A4 Lid of storage area for dusting brush and crevice nozzle | A20 Washable inflow micro-filter is placed in the grill. |
| A5 Full dust bag indicator | A21 Flexible hose |
| A6 Lock for lid of storage area | A22 XXL telescopic metal tube |
| A7 Flexible hose connection hole | A23 Floor nozzle with an extensible brush and DEEP cleaning and EASY cleaning switch |
| A8 Top cover lock | A24 Flap for extending and retracting the brush |
| A9 Integrated handle | A25 Long flexible crevice nozzle |
| A10 On/Off button of the vacuum cleaner | A26 Dust brush (located in the vacuum cleaner) |
| A11 Groove for the horizontal parking position | A27 Gravel nozzle (located in the vacuum cleaner) |
| A12 Rubber-coated rear travel wheel | A28 Mini turbo brush |
| A13 Front rotating travel wheel | A29 Turbo brush (SVC 8330BK model only) |
| A14 Groove for the vertical parking position | A30 Parquet floor nozzle (SVC 8330BK only) |
| A15 Removable grill of the outflow HEPA filter | |
| A16 Washable outflow HEPA filter is placed behind the grill. | |



Note:

One disposable synthetic dust bag is included with the product. Synthetic dust bags last longer, are more durable and provide better filtration than standard paper bags.



Note:

The dusting brush and crevice nozzle are stored in the storage area under the lid.

INTENDED USE OF THE ACCESSORIES

- The universal floor nozzle with an extensible brush **A23** is intended for all floor types. Extend the brush when vacuuming smooth hard floors, and retract it when vacuuming carpets. To extend and retract the brush, use flap **A24** on the floor nozzle. Floor nozzle also has a switch for extending out a travel roller. This switch is located in the centre of the floor nozzle and it has two positions - deep cleaning and easy cleaning. The deep cleaning position (the travel roller is retracted) is ideal for deep and thorough vacuuming of carpets. The easy cleaning position (the travel roller is extended) makes movement over the vacuumed surface easier. We recommend to slightly lift up the floor nozzle when you wish to switch to the easy cleaning position.
- Parquet floor nozzle **A30** ensures perfect yet gentle vacuuming of smooth hard surfaces, thanks to the 100% natural bristle brush. You

can vacuum scratch-sensitive floors such as wooden and floating floors, tiles, linoleum, etc.

- Turbo brush **A29** and mini turbo brush **A28** are great helpers for removing pet hair, hair etc. and are also suitable for vacuuming hard-to-reach areas. You can use it not only at home, but also in your car. Quickly and effectively remove hair, animal hair and other dirt from car seats, upholstery, pillows and other textile surfaces.
- The long flexible crevice nozzle **A25** serves to vacuum very hard-to-reach places anywhere in your car.
- The crevice nozzle **A27** can be used for vacuuming hard-to-reach places and the dusting brush **A26** is used for vacuuming various types of furniture.

PREPARING FOR USE

- Make sure that the dust bag, inflow micro-filter and outflow HEPA filter are properly installed.
- Insert the end of the flexible hose into the hole **A7** and turn it clockwise to secure it in place.



Note:

For removal, turn the end of the hose anticlockwise and pull it out of the hole **A7**.

- Attach the telescopic tube on to the handle of the flexible hose. Slide the ring that is located on the telescopic tube towards the handle of the flexible hose to release the extension lock on the telescopic tube. After releasing the lock, set the length of the tube by sliding its extensible part in or out. When the ring is released, it will lock in at the set length.
- Select the type of accessory you want to use and attach it to the free end of the telescopic tube. The accessory can be attached directly to the flexible hose handle.

USING THE VACUUM CLEANER

- Pull on the power plug to wind out the required length of the power cord and connect it to a power socket.



Attention:

The yellow mark on the power cord indicates the approaching end of its length, and the red mark indicates the complete end of its length. Do not attempt to pull the power cord past this mark.

- To start the vacuum cleaner, press button **A10**. Suction power can be set using the electronic control **A3** or the mechanical flap on the handle of the flexible hose.
- When you have finished using the vacuum cleaner, turn it off by pressing button **A10** and disconnect the power cord from the power socket. To wind the power cord back into the vacuum cleaner, press and hold button **A1** until its entire length is wound up. Gently hold the power cord with one hand while winding it up.



Note:

If the power cord is not wound up completely, release button **A1**, and pull the power cord out of the vacuum cleaner by approximately 50 cm and then try again to wind it up.

PARKING POSITION OF THE VACUUM CLEANER

- When not using the vacuum cleaner, you may put it in the parking position. For the horizontal parking position, slide the stopper on the nozzle **A23** or into the groove **A11**, see fig. **B1**.

- For the vertical parking position, first set the shortest length of the telescopic tube. Then put the vacuum cleaner into a vertical position and slide the stopper on the nozzle into the groove **A14**, see fig. **B2**.

MAINTENANCE AND CLEANING

- Before cleaning it, always make sure that the vacuum cleaner is turned off and disconnected from the power socket.

Changing the dust bag

- The red coloured indicator **A5** signals the need to replace the dust bag.
- Release the lock **A8** and tilt open the top cover of the vacuum cleaner. Remove the used dust bag from the holder **A18** and insert a new bag intended for this type of a vacuum cleaner in its place. After replacing the bag, close the top cover of the vacuum cleaner. It will not be possible to close the top cover of the vacuum cleaner unless the bag is correctly inserted in the holder **A18**.
- If the dust bag is not replaced in time, the vacuum cleaner's suction power will be reduced.

Cleaning and replacing the inflow micro-filter and the outflow HEPA filter

- Release the lock **A8** and tilt open the top cover of the vacuum cleaner. Slide the grill out of the vacuum cleaner and take the micro-filter out of it. Rinse it under running lukewarm water and allow to dry naturally. Then reinsert it and close the cover. In the event that the micro-filter is showing signs of wear or it is heavily soiled, replace it with a new one.
- Release and remove the grill **A15**. Remove the HEPA filter from the vacuum cleaner. In the case of light soiling, tap it out. We recommend doing this away from living areas. In the event of greater soiling, wash it under a weak current of running lukewarm water so that the water washes the dirt out of the folds. Allow the HEPA filter to dry naturally, then reinsert it and secure it in place with the grill. It is recommended to replace the HEPA filter with a new one after 6 months of use.
- When filters are soiled, their effectiveness is reduced, so do not neglect their cleaning.



Attention:
Before putting the filters back into the vacuum cleaner, make sure that they are completely dry.

Cleaning Flexible Hose, Telescopic Tube and Accessories

- If the attachment is dirty, dismantle it from the vacuum cleaner and remove any dirt (dust, hair, pet hair, etc.).
- To make it easier to remove the hair coiled on the rotary brush, you can cut it with scissors.

Cleaning the Turbo Brush

- Release the latches on the sides of the turbo brush, see picture **C1**. Remove the front cover and remove all dirt, hair, pet hair, etc. from the rotary brush and the inner compartment. After cleaning, replace the front cover and secure it with the locking latches. Press to release the latches of the cover, which is located underneath the turbo brush, see picture **C2**. Remove the cover and remove the dirt from the inside of the turbo brush. Put the cover back in place. As soon as it is in place, there is an audible click.

Cleaning the outer surface of the vacuum cleaner

- Clean the outer surface using a dry or a lightly dampened cloth. Then wipe it thoroughly dry.
- For cleaning the vacuum cleaner, do not use steel wool, abrasive cleaning products, solvents etc.
- Do not submerge the vacuum cleaner under water or any other liquid and do not rinse it under running water.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240–V
Rated frequency.....	50–60 Hz
Rated power input.....	800 W
Electrical shock protection class.....	II
Noise level	68 dB(A)
Dust bag capacity	3l
HEPA filter efficiency class	H13
Length of the power cord	8 m
Operational radius.....	11 m

The declared noise emission level is 68 dB(A), which represents a level of sound power with respect to a reference sound power of 1 pW.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.

We reserve the right to change the text and technical specifications.

