

Modell XL – Quartz alarm clock

Instructions manual

Quick setup

Insert 2 x AA batteries (not included) by observing the correct polarity signs (+/-) inside the battery compartment.

Setting the time

Turn the lower wheel at the back of the alarm clock in the indicated direction until the current time is adjusted.

Setting the alarm time

Turn the upper wheel at the back of the alarm clock in the indicated direction until the desired alarm time is adjusted.

Setting the desired alarm tone

Slide the switch at the back of the alarm clock to the desired alarm tone (Mechanic bell or alarm tone).

Turn on or off the alarm

Press the button on top of the alarm clock up to turn on the alarm. Press the button down to turn off the alarm.

Light

Press the light button on the back of the alarm clock to turn the dial lighting.

If your alarm clock shows larger deviations or a change in alarm tone, insert new batteries.

Precautions

- This main unit is intended to be used only indoors.
- Do not subject the unit to excessive force or shock.
- Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.
- Do not immerse in water.
- Avoid contact with any corrosive materials.
- Do not dispose this unit in a fire as it may explode.
- Do not open the inner back case or tamper with any components of this unit.

Batteries safety warnings

- Please read all instructions carefully before use.
- Use only alkaline batteries, not rechargeable batteries.
- Install batteries correctly by matching the polarities (+/-).
- Remove exhausted batteries immediately.
- Remove batteries when not in use.
- Do not recharge and do not dispose of batteries in fire as the batteries may explode.
- Ensure batteries are stored away from metal objects as contact may cause a short circuit.
- Avoid exposing batteries to extreme temperature or humidity or direct sunlight.
- Keep all batteries out of reach from children. They are a choking hazard.

Use the product only for its intended purpose!

Consideration of duty according to the battery law



Old batteries do not belong to domestic waste because they could cause damages of health and environment. End-users are committed by law to bring back needed batteries to distributors and other collecting points!

Consideration of duty according to the law of electrical devices



This symbol means that you must dispose of electrical devices separated from the General household waste when it reaches the end of its useful life. Take your unit to your local waste collection point or recycling centre. This applies to all countries of the European Union, and to other European countries with a separate waste collection system.

