PHILIPS

NeoPix 950 Smart

Home Projector

User Manual



Register your product and get support at

www.philips.com/support

Table of contents

Introduction 3
Dear customer 3
About this user manual 3
What's in the box 3
Customer service center 3
1 General safety information 4
Setting up the product 4
Repairs 4
Power supply 5
2 Overview 5
Rear view 5
Front view 6
Side view 6
Top view 6
Bottom view 6
Remote control 6
3 Initial setup 7
Install the projector 7
Connect to power supply 8
Prepare the remote control 8
Power on and set up the projector 9
Set up Google TV 10
4 Use Google TV 11
Navigate Google TV 11
Configure Google TV 11
Use a wired keyboard/mouse 12
Use a Bluetooth device 12
Cast content to Google TV 12
Factory reset the Google TV Dongle 12
5 Connect to other devices 13
Connect to a USB mouse, keyboard or gamepad 13
Connect to a playback device through HDMI™ 13
Connect to a device through HDMI™ ARC 14
Connect to a dongle 14
Use the projector as a Bluetooth speaker 14
Connect to wired speakers or headphones 15
6 Change projector settings 16
7 Maintenance 18
Cleaning 18
Update software 18
8 Troubleshooting 19
9 Appendixes 21
Technical data 21
CE statement 22
FCC statement 22
Canada regulatory compliance 22
Other notice 23

Introduction

Dear customer

Thank you for purchasing this projector.

We hope you enjoy this product and the many functions it offers!

About this user manual

The quick start guide supplied with this product allows you to start using this product quickly and easily. Detailed descriptions can be found in the following sections of this user manual.

Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of this product (see **General safety information, page 4**). The manufacturer accepts no liability if these instructions are not followed.

Symbols used

Notice

This symbol indicates tips that will help you use this product more effectively and easily.

DANGER!

Danger of personal injury!

This symbol gives warning of danger of personal injury. Physical injury or damage can result from improper handling.


CAUTION!

Damage to the product or loss of data!

This symbol gives warning of damage to the product and possible loss of data. Damage can result from improper handling.

What's in the box

1. NeoPix 950 projector (NPX950/INT)
2. Remote control
3. AC adapter
4. AAA batteries for remote control x 2
5. Quick Start Guide with Warranty Card
6. AC power cables with plugs x 4

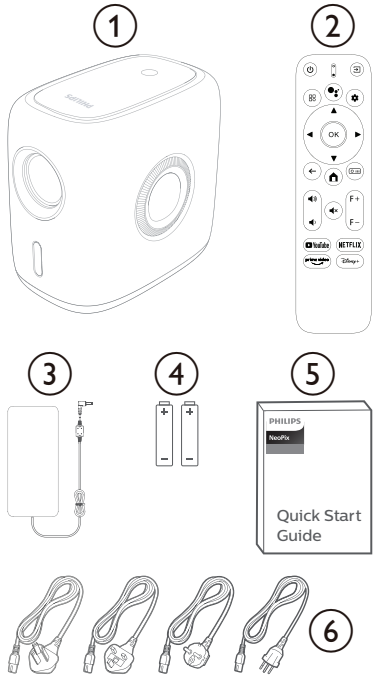

Customer service center

The Support page, warranty card, and user manuals can be found here:

Web: www.philips.com/support

Support Contacts:

International Phone: +41 215 391 665

Please ask your provider for international call costs!

Mail: support@philipsprojection.com

Access our FAQ websites:

https://support.philipsprojection.com

https://community.philipsprojection.com

1 General safety information

Take note of all warning and safety notes indicated. Do not make any changes or settings that are not described in this user manual. Incorrect operation, and improper handling can lead to physical injury, damage to the product or loss of data.

Setting up the product

This product is for indoor use only. Place the product securely on a stable, flat surface.
To help avoid possible injuries to persons or damage to the product itself, position all cables in such a way that no one will trip over them.

Do not operate the product in damp rooms. Never touch the mains cable or the mains connection with wet hands.

Never operate the product immediately after moving it from a cold location to a hot location. When the product is exposed to such a change in temperature, moisture may condense on the crucial internal parts.

The product must have sufficient ventilation and must not be covered. Do not put the product in closed cabinets, boxes, or other enclosures when in use.

Protect the product from direct sunlight, heat, intense temperature fluctuations and moisture. Do not place the product in the vicinity of heaters or air conditioners. Observe the information on temperature listed in the technical data (see **Technical data, page 21**).

Prolonged operation of the product causes the surface to become hot. In case of overheating, the product automatically switches to standby mode.

Do not allow liquids to leak into the product. Turn off the product and disconnect it from the mains supply if liquids or foreign substances leaked into the product. Have the product inspected by an authorised service center.

Always handle the product with care. Avoid touching the lens. Never place heavy or sharp objects on the product or on the power cable.

If the product gets too hot or emits smoke, shut it down immediately and unplug the power cable. Have your product checked by an authorised service center. Keep the product away from open flames (e.g. candles).

DANGER!

Risk of explosion with incorrect type of batteries!

There is a risk of explosion if the wrong battery type is used.

Do not expose the batteries (battery pack or embedded batteries) to excessive heat such as sunshine, or open fire.

Under the following conditions, a layer of moisture can appear inside the product which can lead to malfunctions:

- if the product is moved from a cold to a warm area;
- after a cold room is heated;
- when the product is placed in a damp room.

Proceed as follows to avoid any moisture buildup:

1 Seal the product in a plastic bag before moving it to another room, in order for it to adapt to room conditions.

2 Wait one to two hours before you take the product out of the plastic bag.

Do not use or store the device in a dusty environment. Dust particles and other foreign objects can damage the device, which will void the product warranty.

Do not expose the product to extreme vibrations. This may damage the internal components.

Do not allow children to handle the product without supervision. The packing materials should be kept out of the hands of children.

For your own safety, do not use the product during thunderstorms with lightning.

Repairs

Do not repair the product yourself. Improper maintenance can result in injuries or damage to the product. The product must be repaired by an authorised service center.

Please find the details of authorised service centers on the warranty card supplied with this product.

Do not remove the type label from this product, as this will void the warranty.

Power supply

Use only a power adapter which is certified for this product (see **Technical data, page 21**). Check whether the mains voltage of the power supply matches the mains voltage available at the setup location. This product complies with the voltage type specified on the product.

The power outlet shall be installed near the product and shall be easily accessible.

CAUTION!

Always use the ⏻ button to turn the projector off.

Turn off the product and unplug from the power outlet before cleaning the surface (see **Cleaning, page 18**). Use a soft, lint-free cloth. Never use liquid, gaseous or easily flammable cleaners (sprays, abrasives, polishes, alcohol). Do not allow any moisture to reach the interior of the product.


DANGER!

Risk of eye irritation!

This product is equipped with a high power LED (Light Emitting Diode), which emits very bright light. Do not look directly into the projector lens during operation. This could cause eye irritation or damage.

2 Overview

Rear view

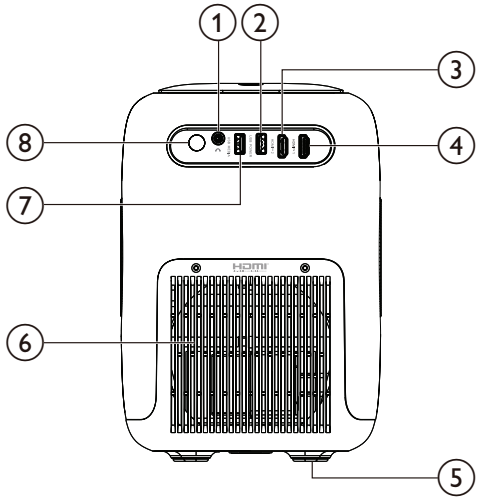

① 🎧
3.5 mm audio output; connect to external speakers or headphones.

② **USB POWER**
Connect to a device such as a dongle to supply 5 V DC power.

③ **HDMI™ 2**
Connect to an HDMI™ output port on a playback device.

④ **HDMI™ 1**
Connect to an HDMI™ output port on a playback device.


⑤ **Foot pad**

⑥ **Air vent**

⑦ **USB MEDIA**
Connect to a USB input device, USB storage device or dongle.


⑧ **IR sensor**

Front view

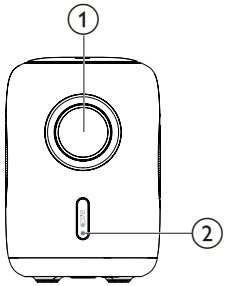


① **Projection lens**
② **Auto keystone and autofocus sensor**

Side view

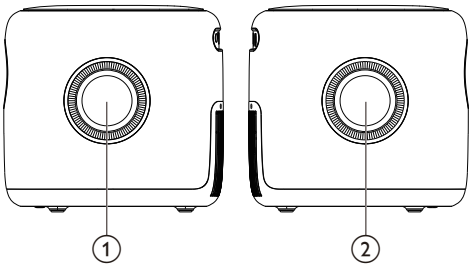


① **Left speaker**
② **Right speaker**

Top view

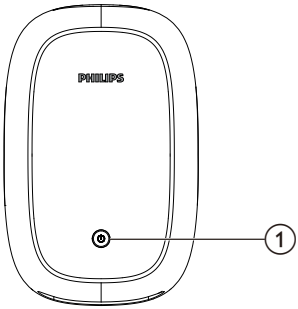


① ⏻
Switch the projector on or to standby mode.
- When the projector is on, the LED lights up in white.
- When the projector is in standby mode, the LED lights up in red.

Bottom view

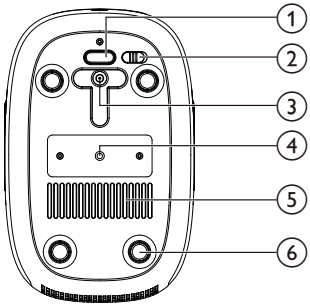

① **Adjustable stand**
② **Release switch for adjustable stand**
③ **DC power jack**
Connect to the supplied AC adapter.
④ **Screw hole for ceiling mount**
⑤ **Air vent**
⑥ **Foot pad**

Remote control

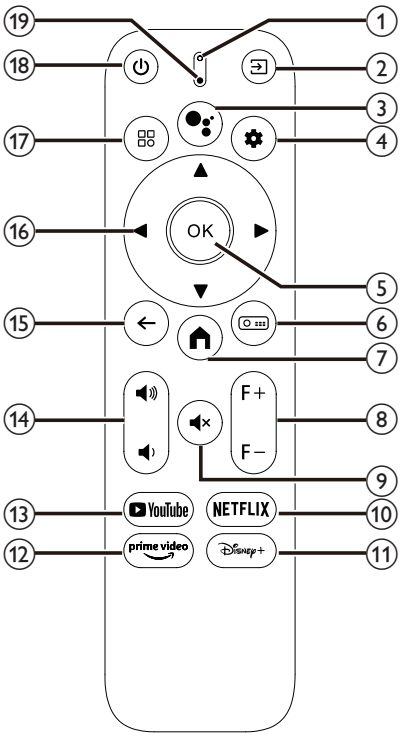

① **LED indicator**
Light up when you press a button on the remote control.
②
Display all the input sources and allow you to switch to a different input source.
③
Access the voice command or search function (Google Assistant).
④
Open or close the projector's settings menu.
⑤ **OK**
Confirm a selection.
⑥
Open or close the projector's settings menu.
⑦
Access Google TV's home screen. Press and hold to open or close Google TV's settings panel.
⑧ **F+/F-**
Adjust the image focus (sharpness) manually.
⑨
Mute or unmute the speakers.
⑩ **NETFLIX**
Open the Netflix app.
⑪ **Disney+**
Open the Disney+ app.
⑫ **prime video**
Open the Prime Video app.
⑬ **YouTube**
Open the YouTube app.
⑭ /
Increase or decrease the volume.
⑮
Return to the previous screen.
⑯ **Navigation buttons (Up, Down, Left, Right)**
- Navigate items on the screen.
- Press ▲/▼ or ◀/▶ to change the value for the current setting.

⑰
Open or close the projector's settings menu.
⑱
Switch the projector on or to standby mode.
⑲ **Microphone**

3 Initial setup

Notice


Make sure all devices are disconnected from their power supplies before establishing or changing any connections.

Install the projector

You can install the projector in four different ways. Follow the guidelines below to correctly install the projector.

Front


1 Place the projector on a flat surface such as a table in front of the projection surface. This is the most common way to position the projector for quick setup and portability.

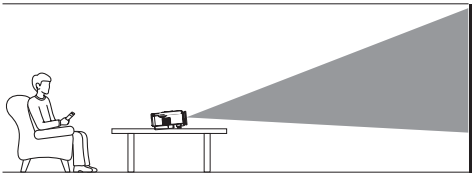

2 If the projection direction is incorrect, open the projector's settings menu by pressing on the remote control. Then select *Projector > Projection Direction > Front*.

Front Ceiling


1 Mount the projector on the ceiling with upside up in front of the projection screen. A projector mount is required to mount the projector on ceiling.

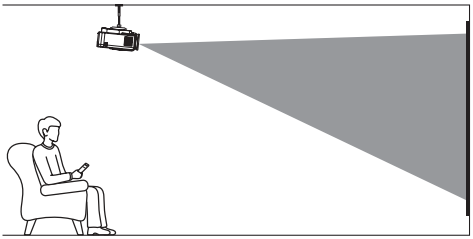

2 If the projection direction is incorrect, open the projector's settings menu by pressing on the remote control. Then select *Projector > Projection Direction > Front Ceiling*.

Rear


1 Place the projector on a table behind the projection screen. A special rear projection screen is required.

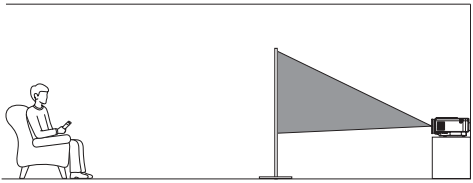

2 If the projection direction is incorrect, open the projector's settings menu by pressing on the remote control. Then select *Projector > Projection Direction > Rear*.

Rear Ceiling

1 Mount the projector on ceiling with upside up behind the projection screen. To mount the projector on ceiling behind the screen, a projector mount and a special rear projection screen are required.

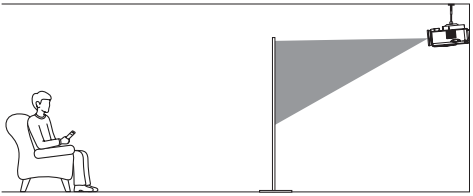

2 If the projection direction is incorrect, open the projector's settings menu by pressing on the remote control. Then select *Projector > Projection Direction > Rear Ceiling*.

Connect to power supply

CAUTION!

Always use the ⏻ button to turn the projector on and off.


1 Select a supplied power cable with the correct plug (AUS/EU/UK/US).

2 Connect the power cable to the AC adapter.

3 Connect the AC adapter to the DC power jack at the bottom of the projector.

4 Connect the power cable to an electrical socket.

- The power LED on the projector lights up in red.

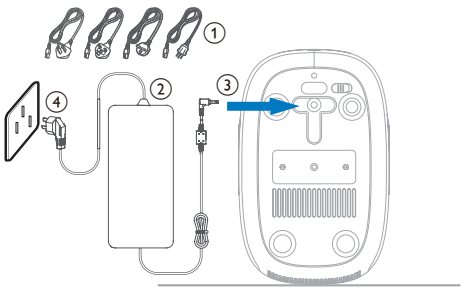

Prepare the remote control

CAUTION!

The improper use of batteries can lead to overheating, explosion, risk of fire and injury. Leaking batteries can possibly damage the remote control.

Never expose the remote control to direct sunlight.

Avoid deforming, dismantling or charging the batteries.

Avoid exposure to open fire and water.


Replace empty batteries immediately.

Remove the batteries from the remote control if not in use for long periods of time.

1 Open the battery compartment.

2 Insert the supplied batteries (type AAA) with correct polarity (+/-) indicated.

3 Close the battery compartment.

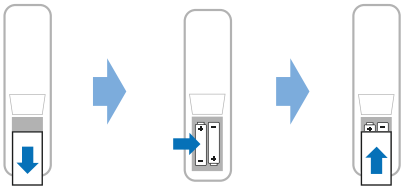


- When using a remote control with infrared signals, point the remote control at the IR sensor on the projector, and make sure there is no obstacle between the remote control and the IR sensor.

Power on and set up the projector

Power on/off the projector

- To turn on the projector, press ⏻ on the projector/remote control. The power LED on the projector turns from red to white.

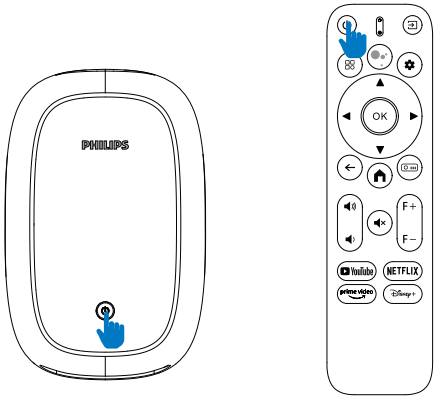

- To turn off the projector, press and hold ⏻ on the projector/remote control for 2 seconds or press this button twice. The projector enters standby mode and its power LED turns from white to red.
- To fully shut down the projector, disconnect the power cable from the electrical socket.

Image focus adjustment

By default, the projector automatically adjusts the image focus (sharpness) every time it turns on or detects a change in its position or angle.

You can also manually adjust the focus by pressing **F+** or **F-** on the remote control.

Screen size adjustment

The projection screen size (or size of images) is determined by the distance between the lens of the projector and the projection surface.


This projector has a recommended projection distance of 200 cm (77"), and the minimum distance from the projection surface is 160 cm (60").

Digital zooming

You can use the digital zooming function to reduce the screen size.

1 Open the projector's settings menu by pressing ⊡ on the remote control. Then select *Projector > Digital Zoom*.

2 Press ▲/▼ to adjust the screen size. You can scale down the screen to up to 60% of its full size.

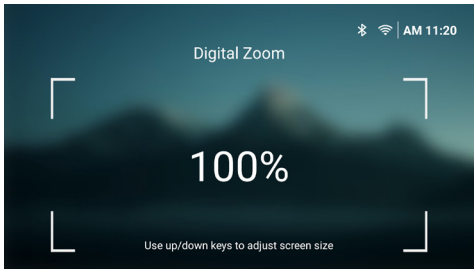

Screen height adjustment

To adjust the screen height when placing the projector on a flat surface, follow these steps.

1 Raise the front of the projector.

2 Pull the release switch at the bottom of the projector to the other side and hold it. The adjustable stand will drop down.

3 Continue holding the release switch and adjust the length of the adjustable stand to your desired length.

4 Release the release switch to lock the adjustable stand.

5 Lower the front of the projector so that it stands on the adjustable stand.

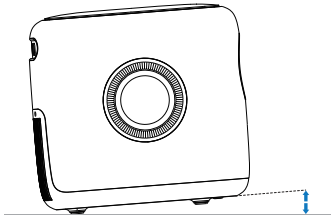


Image shape adjustment

Auto keystone correction

By default, auto keystone is enabled and the projector automatically makes the image rectangular every time it detects a change in its position or angle.

If auto keystone is disabled, follow these steps to enable it:

1 Open the projector's settings menu by pressing ⊙ on the remote control.

2 To let the projector automatically make the image rectangular every time it turns on, select *Projector* > *Auto Keystone on power* > *Yes*.
To let the projector automatically make the image rectangular every time it detects a change in its position or angle, select *Projector* > Displacement *Auto Keystone* > *Yes*.


V/H keystone correction (manual)

You can also manually make the image rectangular by adjusting the horizontal and vertical keystone angles.

1 Open the projector's settings menu by pressing ⊙ on the remote control.

2 Select *Projector* > *V/H Keystone* > *Manual*.

3 Follow the on-screen instructions to adjust the image shape.

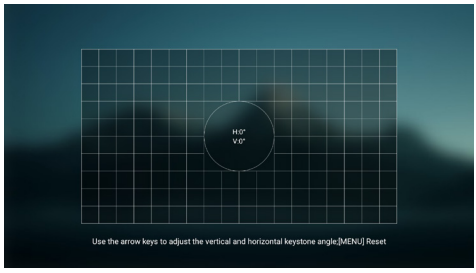


Four point keystone correction (manual)

You can also manually make the image rectangular by moving four corners of the image.

1 Open the projector's settings menu by pressing ⊙ on the remote control.

2 Select *Projector* > *Four Point Keystone*.

3 Follow the on-screen instructions to adjust the image shape.

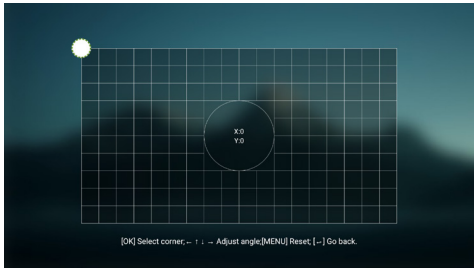

Set up Google TV

When you turn on the projector for the first time or after the built-in Google TV Dongle was reset to its factory default settings, Google TV will start and prompt you to set it up by making some basic settings.

After the setup, Google TV will sign in to your Google account and connect to a Wi-Fi network.

What you need

- A Wi-Fi internet connection
- A Google account

Method 1: Set up with the Google Home app

Step 1: Pair the remote control with the projector

Follow the on-screen instructions to pair the remote control with the projector.

After the pairing, the Welcome screen appears and you can use this remote control to navigate the on-screen user interface of Google TV.

Step 2: Select the display language

Press the down or up navigation button on the remote control to highlight your preferred display language for Google TV, then press the **OK** button to confirm and proceed to the next step.

Note: The default display language is **English (United States)** and not all languages are

available.

Step 3: Select your region or country

Press the down or up navigation button on the remote control to highlight your region or country, then press the **OK** button to confirm. The projector displays the instructions for setting up with the Google Home app.

Step 4: Finish setup with your phone

To finish setup with your phone, follow the instructions on the projector and phone screens.

Method 2: Set up with the remote control

Step 1: Do Steps 1-3 of Method 1 above.

Step 2: Press ▼ on the remote control and select "Set up on TV instead".

Step 3: Connect to a Wi-Fi network

1 Highlight a network from the list of displayed Wi-Fi networks and press the **OK** button. You are prompted to enter the password for connecting to the network using the on-screen keyboard.

2 Enter the password by pressing the navigation buttons and **OK** buttons. **Tips**: Press and hold a navigation button to move to the key you want more quickly.

3 Highlight the check mark on the keyboard and press the **OK** button.

4 Wait a while for the connection to be established.

Notes:

- If you connect to an open (unsecured) Wi-Fi network, you won't be prompted to enter the password and the connection will be automatically established.
- The next time you turn on the projector, it will automatically try to reconnect to the last connected Wi-Fi network, unless you manually disconnect/forget the network or factory reset the built-in Google TV Dongle.


Step 4: Sign in to your Google account and finish setup

1 Follow the on-screen instructions to sign in to your Google Account.

2 To finish setup, follow the on-screen instructions.

4 Use Google TV

You will see the Google TV home screen similar to the one below after completing the setup.

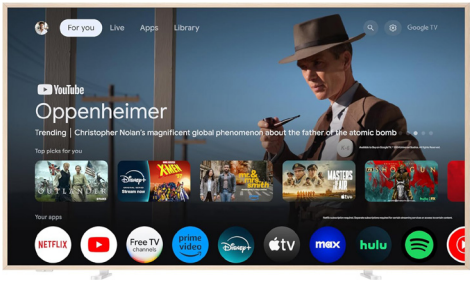

The Google TV home screen is the jumping-off point for starting all activities on your Google TV entertainment device. On this screen, you can browse for shows and movies to watch. You'll also find the shows and movies you've started, suggested videos, and personalized recommendations.

Google TV offers you various features, such as:

- Watch a wide range of movies and shows from across your favourite apps.
- Stream music from music apps.
- Get apps from Google Play.
- Play online games from Google Play Games.
- Voice input for commands and universal search across multiple services.

Navigate Google TV

You can use the dedicated Google TV remote control to navigate the on-screen user interface of Google TV and initiate voice commands or search queries.

- Press ⌂ on the remote control to access the Google TV home screen.
- Press and hold ● on the remote control to access voice search function.

Configure Google TV

You can press and hold ⌂ on the remote control to open the settings panel and access various Google TV related settings, e.g. apps/privacy/security management, Wi-Fi settings and sound settings.

Use a wired keyboard/ mouse

- Connect the USB plug of your wired mouse or keyboard to the **USB MEDIA** port on the projector.
- Use the keys on the keyboard for screen navigation, selection and text input, just like the keyboard operation with a computer.
- Use the wheel and left button on the mouse for navigation and selection. Press the right button on the mouse to return to the previous screen.

Use a Bluetooth device

You can pair a Bluetooth device (keyboard, mouse, gamepad, speaker, etc.) with the projector. After completing the pairing, you can use the Bluetooth device with your Google TV.

To pair a Bluetooth device, follow the steps below:

1 Press and hold ⌂ on the remote control to open the settings panel.

2 Select **Bluetooth** on the settings panel.

3 Select **Pair accessory**. On your screen, you'll see a list of nearby Bluetooth devices.

4 Put your Bluetooth device in pairing mode. The device will be added to the on-screen list.

5 Select your Bluetooth device.

6 When your Google TV says, "Pair with this device?", choose **Pair**. The device will be paired within a few seconds.

Cast content to Google TV

You can cast content from phones, tablets, or laptops to your Google TV.

Important: You can only cast from the latest version of a Chromecast-enabled app or a Chrome browser on a device connected to the same Wi-Fi network as your Google TV.

To start casting, follow the steps below:

1 Connect your device to the same Wi-Fi network as your Google TV.

2 Open the app that has the content you want to cast.

3 In the app, find and select Cast.

4 On your device, select the name of your Google TV.

5 When Cast changes color, you're successfully connected.

Tip: To stop casting, on your device, select Cast and then **Disconnect**.

Notice

For better casting performance, use a 5GHz Wi-Fi network.

Copyright-protected content from Netflix, Amazon Prime Video, Hulu, etc. cannot be cast.

Factory reset the Google TV Dongle

1 Press and hold ⌂ on the remote control to open the settings panel.

2 Go to *All settings* > *System* > *About* > *Reset* and select *Factory reset*.

3 Follow the on-screen instructions to start factory resetting the built-in Google TV Dongle.

Notice

A factory reset erases all your personal information and downloaded apps and you can't reverse this action.

Tip: For more tips about using Google TV, visit https://support.google.com/googletv.

Google TV is the name of this device's software experience.

Google, Google Play, YouTube, Google TV and other marks are trademarks of Google LLC. Google Assistant is not available in certain languages and countries.

5 Connect to other devices

Connect to a USB mouse, keyboard or gamepad

You can connect a USB mouse, keyboard or gamepad to the projector to quickly and easily navigate menus, enter your passwords, search for movies and shows, play games, and so on.

Note: Not all games and apps are compatible with a mouse and keyboard.

Connect a USB mouse, keyboard or gamepad

To connect a USB mouse, keyboard, or gamepad, plug it into the **USB MEDIA** port on the projector.

Tip: You can connect more than one device to a USB port using a USB hub. Connect the devices to the USB ports on the hub, then connect the hub to the projector.

Note: When using a wireless USB mouse or keyboard, the connection can be lost or slow, depending on the distance between the two devices and the signal status.

Use a USB mouse, keyboard or gamepad

Once connected, your USB mouse, keyboard or gamepad will start to work without any additional configuration.

Mouse

- Move your mouse and a circular pointer will appear on the screen.
- Move your mouse and left-click to navigate the projector's user interface like you do on a computer. The left button works like **OK** on the remote control.
- Right-click to return to the previous screen. The right button works like ← on the remote control.
- Rotate the wheel to scroll up or down.

Keyboard

- Your keyboard is best for entering text in text fields, allowing you to type much faster and see more of the screen by removing the need for the on-screen keyboard. **Tip**: You may need to press **Esc** to hide the on-screen keyboard.
- Use the arrow keys and **Enter** to navigate the projector's user interface. They work like the navigation buttons and **OK** on the remote control respectively.
- Press **Tab** or **Shift+Tab** to move to the next or previous item. Press the menu key to access more options when an app is selected or a video is playing.
- Press **Windows+Backspace** to return to the previous screen. Press **Home** or **Alt+Esc** to return to the Home screen.
- Many keyboard shortcuts work like they do on a computer, including **Alt+Tab** for switching between recent apps and **Ctrl+X**/**C**/**V** for Cut/Copy/Paste.


Gamepad

- You can use your gamepad with games that support controllers.
- Your gamepad can also be used to navigate the projector's user interface and open apps.

Connect to a playback device through HDMI™

You can connect a playback device (e.g. a Blu-ray player, gaming console, camcorder, digital camera or PC) to the projector through HDMI™ connection. With this connection, images are shown on the projection screen, and audio is played on the projector.

1 Using an HDMI™ cable, connect the **HDMI™ 1** or **HDMI™ 2** port on the projector to an HDMI™ output port on a playback device.

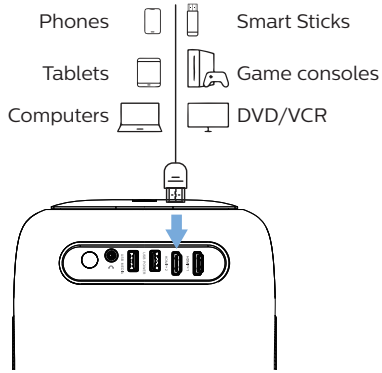

2 Press ⇥ on the remote control and select *HDMI1* or *HDMI2*.

Connect to a device through HDMI™ ARC

The **HDMI™ 2** port on the projector supports Audio Return Channel (ARC). You can connect a compatible audio system (e.g. a home cinema system, AV receiver or sound bar) to the projector through HDMI™ ARC connection. With this connection, audio is streamed to the connected audio system.

Tip: To get 5.1 surround sound, you typically need to connect the projector to a 5.1 home cinema system.

1 Using an HDMI™ cable, connect the **HDMI™ 2** port on the projector to the HDMI™ ARC port on a compatible audio system.
   - The HDMI™ ARC port on your audio system might be labeled differently. See the documentation supplied with the device for more information.

2 Press ⇥ on the remote control and select *HDMI2*.


3 To activate the HDMI™ ARC function on the projector, open the projector's settings menu by pressing ⚙ on the remote control. Then select *Sound* > *Output* > *ARC*.

Connect to a dongle

You can connect a dongle (e.g. Amazon Fire Stick, Roku Stick and Chromecast) to the projector to easily watch videos over the internet. With this connection, images are shown on the projection screen, and audio is played on the projector.

1 Connect the dongle to the projector's **HDMI™ 1** or **HDMI™ 2** port directly or using an HDMI™ cable.

2 Connect the dongle to the projector's **USB POWER** port using a USB cable. **Note**: The maximum current supplied by this port is 5V2A.

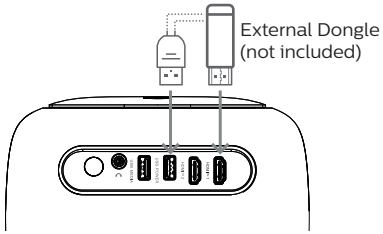

3 Press ⇥ on the remote control and select *HDMI1* or *HDMI2*.

Use the projector as a Bluetooth speaker

You can use the projector as a Bluetooth speaker to output audio from Bluetooth playback devices such as smartphones, tablets and computers.

Before you can use the projector with a Bluetooth playback device for the first time, you must pair the projector with it. The projector will automatically connect to a device as soon as they are paired.


Notice

Be sure that the Bluetooth device is no farther than 10 m (33 ft) from the projector when connecting the two.

Even when connecting within the specified communication distance, connections can be lost due to the signal status.

Put the projector into Bluetooth speaker mode

1 When the projector is on, press ⏻ on the projector/remote control, then select *Bluetooth Speaker*.

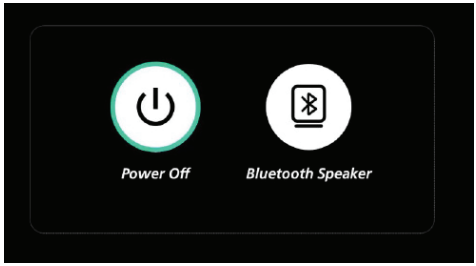

   - The projector will enter pairing mode.
   - The projector may reconnect to the last connected playback device after this step. If this happens, disconnect this device to connect a new device.

2 On your Bluetooth playback device, turn on the Bluetooth function and then select "NPX950" from the list of available Bluetooth devices to start the pairing. The projector and your playback device will both ask you whether to pair the other device.

3 Select *Pair* on both the projector and your playback device.
   - When the pairing is complete, the projector enters Bluetooth speaker

mode and turns off its screen to save power.

- The next time you complete Step 1 above, the projector will automatically reconnect to the last connected playback device unless that device gets unpaired or its Bluetooth is off.

4 On your Bluetooth playback device, play a song or any other audio.

Tips:

- You can control the volume of your playback using both your playback device and the remote control.
- When the projector is in Bluetooth speaker mode, you can turn on its screen by pressing any button on the remote control except , , , , **YouTube**, **NETFLIX**, **prime video**, and **Disney+**. The screen will automatically turn off again after 5 seconds.

Exit Bluetooth speaker mode

To exit Bluetooth speaker mode, turn on the screen and then press ← or on the remote control.

Once exiting Bluetooth speaker mode, the projector automatically pauses the playback and disconnects the playback device.

Connect to wired speakers or headphones

You can connect wired speakers or headphones to the projector. With this connection, audio from the projector is played through the external speakers or headphones.

- The internal speakers of the projector are deactivated automatically when external speakers or headphones are connected to the projector.


DANGER!

Danger of hearing damage!

Before connecting the headphones, turn down the volume on the projector.

Do not use the projector over a longer time at high volume – especially when using headphones. This could lead to hearing damage.

1 Using a 3.5 mm audio cable, connect the jack on the projector to the analogue audio input (3.5 mm jack, or red and white jacks) on external speakers. Or connect the jack on the projector to headphones.

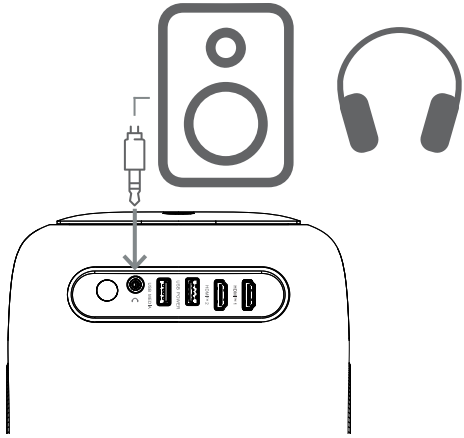

2 After connecting the speakers or headphones, press / on the remote control to adjust the volume to the desired level.

6 Change projector settings

This section helps you change the projector settings using the settings menu.

1 Press ⊙ on the remote control to open the projector's settings menu.

2 Use the navigation buttons and the **OK** button to select a menu item.

3 Press ▲/▼ or ◀/▶ to select a value for the menu item.

4 Press the **OK** button to make the change.
Note: For some menu items such as Digital Zoom, the change takes effect once you select a different value.

5 Press ⊙ once or press ← one or more times to close the projector's settings menu.


Input source settings

You can view and change the following input source settings.

- *Google TV*: Select this to use the built-in Google TV Dongle as the input source. This is the default input source.
- *HDMI1*: Select this to use the device connected to the projector's **HDMI™ 1** port as the input source.
- *HDMI2*: Select this to use the device connected to the projector's **HDMI™ 2** port as the input source.

Picture settings

You can view and change the following picture settings.

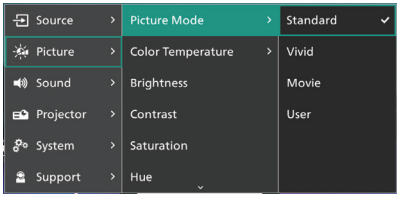

- *Picture Mode*: You can set the projector to use the following picture modes, depending on your viewing environment or preferences. After selecting a picture mode, you can modify its settings.
  - *Standard*: Display the picture with medium brightness, contrast, saturation, and hue levels.
  - *Vivid*: Sharpen the image by increasing the contrast and saturation.
  - *Movie*: Optimize the settings for movies.
  - *User*: Define your own settings.
- *Color Temperature*: You can set the projector to use the following color temperature types. After selecting a color temperature type, you can modify its settings.
  - *User*: Define your own settings.
  - *Cool*: Make the picture more bluish.
  - *Standard*: Use a moderate color temperature.
  - *Warm*: Make the picture more reddish.
- *Brightness*: Adjust the screen's overall brightness.
- *Contrast*: Adjust the contrast of the bright and dark areas of the image.
- *Saturation*: Adjust the intensity of the colors.
- *Hue*: Adjust the hue of the colors.
- *Red Gain*: Adjust the gain for red.
- *Green Gain*: Adjust the gain for green.
- *Blue Gain*: Adjust the gain for blue.
- *Reset to Default*: Select *Yes* to reset all the picture settings above.


Sound settings

You can view and change the following sound settings.

- *Sound Style*: You can set the projector to use the following sound styles, depending on your environment, audio type or preferences.
  - *Cinema*: Optimize the settings for movies.
  - *Music*: Optimize the settings for music.
  - *Flat*: Set both the bass and treble levels to medium levels.
- *Output*: Select the projector's audio output type.
  - *Internal Speaker*: Use the projector's internal speaker to output audio.
  - *ARC*: Use an HDMI™ ARC compatible device to output audio. To learn how to connect such a device, see **Connect to a device through HDMI™ ARC, page 14**.
- *Reset to Default*: Select *Yes* to reset all the sound settings above.

Image settings

You can view and change the following image settings.

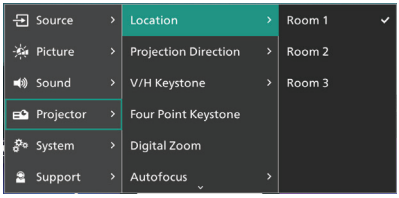

- *Location*: You can select a location and then modify the image settings. All the modified image settings will be associated with the selected (current) location. You can create up to 3 different sets of image settings this way and quickly switch between them by selecting a location. **Tip**: The projector always selects the last used location after being restarted.
  - *Room 1*: Select this to use or modify the image settings for Room 1.
  - *Room 2*: Select this to use or modify the image settings for Room 2.
  - *Room 3*: Select this to use or modify the image settings for Room 3.
- *Projection Direction*: Adjust the projection to the correct direction based on how the projector is installed.
- *V/H Keystone*: Select *Automatic* to turn on auto keystone correction. Select *Manual* to manually make the image rectangular by adjusting the horizontal and vertical keystone angles.
- *Four Point Keystone*: Select this to manually make the image rectangular by moving four corners of the image.
- *Digital Zoom*: Scale down the screen to up to 60% of its full size. The default value is 100% (no scale-down).
- *Autofocus on power*: Choose whether to let the projector automatically adjust the image focus (sharpness) every time it turns on.
- *Auto Keystone on power*: Choose whether to let the projector automatically make the image rectangular every time it turns on.
- *Displacement autofocus*: Choose whether to let the projector automatically adjust the image focus (sharpness) every time it detects a change in its position or angle.
- *Displacement Auto Keystone*: Choose whether to let the projector automatically make the image rectangular every time it detects a change in its position or angle.
- *Auto Obstacle Avoidance*: Choose whether to let the projector automatically avoid obstacles.
- *Auto Screen Fit*: Choose whether to let the projector automatically adjust the screen size to fit the displayed images.
- *Reset to Default*: Select *Yes* to reset all the image settings above for the current location (Room 1/2/3). The other two locations will not be affected.

Other settings

You can view and change the following additional settings.

- *Language*: Select your preferred display language.
- *Sleep Timer*: Select a period of time after which the projector turns off automatically. The default value is *Disabled*.
- *About*: View the hardware version, firmware version, serial number, and MAC address of this product.
- *Firmware Upgrade*: Update the projector's software or factory reset the projector.
  - *Online Upgrade*: For more details, see **Update software online, page 18**.
  - *Offline Upgrade*: For more details, see **Update software offline, page 18**.
  - *Factory Reset*: Restore the product to its factory default settings. After the factory reset, the projector will restart and allow you to set it up as new.
- *Wi-Fi*: Open the Wireless Network screen to view and connect to Wi-Fi Networks.
- *Factory Reset*: Select *Yes* to restore the product to its factory default settings. After the factory reset, the projector will restart and allow you to set it up as new. **Note**: This will not reset the built-in Google TV Dongle. To learn how to reset the dongle, see **Factory reset the Google TV Dongle, page 12**.
- *Support*: View the website addresses, QR code and email address for getting help information on the projector.

7 Maintenance

Cleaning

DANGER!

Follow the following instructions when cleaning the projector:

Use a soft, lint-free cloth. Never use liquid or easily flammable cleansers (sprays, abrasives, polishes, alcohol, etc.). Do not allow any moisture to reach the interior of the projector. Do not spray the projector with any cleaning fluids.

Wipe over the surfaces gently. Be careful that you do not scratch the surfaces.

Cleaning the lens

Use a soft brush or lens cleaning paper for cleaning the lens of the projector.

DANGER!

Do not use any liquid cleaning agents!

Do not use any liquid cleaning agents for cleaning the lens, to avoid damaging the coating film on the lens.

Update software

You can update the projector software online or offline to get the best features and support from the projector.

CAUTION!


Do not turn off the projector or remove the USB flash drive during a software update.

Update software online

Updating the projector software online is quick and easy.

1 Press ⊙ on the remote control and select *System* > *Wi-Fi* to open the Wireless Network screen, then connect the projector to a Wi-Fi network. To learn how to connect to a Wi-Fi network, see **Step 3: Connect to a Wi-Fi network, page 11**.

2 Press ⊙ on the remote control and then select *System* > *Firmware Upgrade* > *Online Upgrade*. The projector will automatically check for a new version of projector software. If a new version is found, the projector will prompt you to start the update.

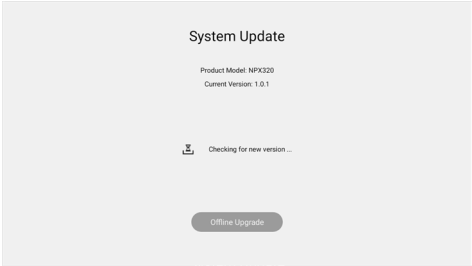

3 If a new version is found, follow the on-screen instructions to complete the update.

Tip: When the projector is connected to the internet, it will check for a new version of projector software every time you turn it on. If a new version is found, the projector will prompt you to start the update. If this happens, you can choose to start or cancel the update.


Update software offline

If your projector has no access to the internet, you can manually update its software offline.

1 Visit www.philips.com/support, find your product (model number: **NPX950/INT**), open its support page and locate "**Software & drivers**". Then check the latest software version there.

2 Check the current software version by pressing ⊙ on the remote control and selecting *System* > *About*. Proceed to the next step if the latest software version is greater than the current software version.

3 Select *System* > *Firmware Upgrade* > *Offline Upgrade* from the settings menu.

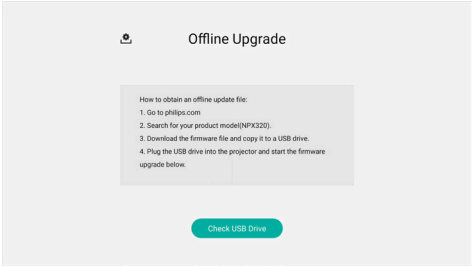

4 Follow the on-screen instructions to complete the update.

8 Troubleshooting

Power cycling

If a problem occurs and you cannot resolve it using the instructions in this user manual, try the following steps to resolve the problem.

1 Turn the projector off by pressing ⏻ twice.

2 Wait at least 10 seconds.

3 Turn the projector on by pressing ⏻.

4 If the problem persists, contact one of our customer service centers or your dealer.

Problem	Solution
The projector cannot be turned on.	• Disconnect and reconnect the power cable, and try to turn the projector on again.
The projector cannot be turned off.	• Press and hold ⏻ longer than ten seconds. If this does not work, disconnect the power cable.
No image from the external HDMI™ device.	1. Check if you have switched the input source to *HDMI1* or *HDMI2*. 2. Disconnect the HDMI™ cable or switch off the HDMI™ device. 3. Wait **three** seconds. 4. Reconnect the HDMI™ cable or switch on the HDMI™ device again.
No sound from the external connected device.	• Check the cables to the external device. • Check that the sound is activated on the external device. • Only the original cables from the device manufacturer may function.
No sound from external HDMI™ output device.	• On the HDMI™ output device, set the audio setting to Multichannel (Raw data) & Stereo (PCM).
No sound when you connect your computer using an HDMI™ cable.	• Check that the sound is activated on the computer.
Only the home menu appears and not the image from the external device.	• Check if the cables are connected to the correct sockets. • Check that the external device is turned on. • Check if the video output of the external device is turned on.
Only the home menu appears and not the image from the connected computer.	• Check that the HDMI™ output of the computer is turned on. • Check if the resolution of the computer is set to 1920*1080.
The projector turns itself off.	• When the projector is running for a long period of time, the surface becomes hot. • Check that the power cable is connected correctly.
The projector cannot read the USB storage device.	• The projector does not support the exFAT file system. • Format the USB storage device in FAT32 or NTFS format, then use it.

Problem	Solution
The projector does not react to remote control commands.	• Check the batteries of the remote control.
The temperature of the projector's surface is warm.	• For this projector it is normal to generate moderate heat during operation.
The projector does not work after I connect it to a laptop.	• Check that the HDMI™ cable is plugged in correctly. • Make sure that the laptop has been switched to projector display.
I cannot pair the projector with a Bluetooth device.	• Turn on the Bluetooth device and make sure it is in pairing mode. • Position the Bluetooth device so that it is less than 10 m (33 ft) from the projector. • To connect a Bluetooth device to the projector, follow the instructions in **Use a Bluetooth device, page 12**. • If another Bluetooth device is already connected to the projector, disconnect it. • Move the projector farther away from other devices (microwave oven, wireless router, etc.) that are emitting radio frequency signals.
After a Bluetooth device is connected, there is no sound from the projector or the Bluetooth device.	• Check if the Bluetooth device's volume is at the minimum. • Check if projector's volume is at the minimum. • Check if the playback has started. • Try playing another video/audio file. • Try reconnecting the two devices.
Black / White Pixels	An LCD display may contain a small number of pixels that do not function normally (also known as "dead pixels" or "black pixels"). Your display has been inspected and is in compliance with the manufacturer's specifications, meaning that any pixel defects do not affect the operation or use of your display. Without prejudice to generality of the foregoing, dead pixels or black pixels not exceeding 5 dots meet the factory specifications and are not considered a defect under this warranty. **Dust Deposit – Warranty Exclusion:** Dust may accumulate inside the projector over time. This can affect the image quality and even disrupt the functioning of the device. However, this phenomenon is **not considered a defect** under this warranty. We recommend regularly cleaning the lens with a soft cloth suitable for glass cleaning. You can also push dry air through the air vents to remove dust from the optical engine inside the device.

9 Appendixes

Technical data

Technology/optical

Display technology ..... 2 LCD
Light source ..... LED
Brightness ..... 1400 ANSI Lumens
Resolution ..... 1920 x 1080 pixels
LED lifetime ..... over 30,000 hours
Contrast ratio 1100:1
Aspect ratio 16:9
Throw ratio 1.2:1
Maximum screen size (diagonal) ..... 150″
Recommended screen size (diagonal) ..... 120″
Screen distance ..... 160-200 cm (60-77″)
Projection modes 4
Focus adjustment ..... Auto
Keystone correction ..... Auto H/V Keystone
4 corner correction ..... Yes
Digital zoom ..... Yes (60-100%)
Sleep timer ..... Yes

Operating system

Google TV with pre-loaded apps:

Netflix, Amazon Prime Video, YouTube, Disney+, etc. (Apps may vary depending on availability)

Sound

Built-in speakers ..... 2 x 12 W
Speaker type ..... stereo

Connection

Includes Google TV streaming device to access apps

HDMI™ in x2

USB-A (5 V/2 A out) x1
USB-A (external drive) x1
3.5 mm audio out x1

Wi-Fi ..... 802.11a/b/g/n/ac, 2.4 + 5 GHz
Wi-Fi screen mirroring ..... Yes
Bluetooth ..... To connect gamepads, speakers, mouse, keyboard, etc.

Power source

Power consumption ..... operating: 350.0 W
..... standby: 0.25 W
Input: AC 100-240 V, 50/60 Hz, 4.0 A (Max)

Dimensions and weight

Unpacked (W x D x H) ..... 181 x 280 x263 mm
Packed (W x D x H) ..... 354 x 321 x 294 mm
Net weight ..... 4.3 kg / 9.5 lb
Gross weight ..... 7.95 kg / 17.52 lb

Temperature requirements

Operating temperature ..... 5 °C - 35 °C
Storage temperature ..... < 60 °C

Package contents

1. NeoPix 950 projector
2. Remote control
3. AC adapter
4. Power cables (AUS, EU, UK, US)
5. AAA batteries for remote control
6. Quick Start Guide with Warranty Card

Model

NPX950/INT
EAN: 7640186962735
UPC: 667619993118

CE statement

- The product shall only be connected to a USB interface of version USB 2.0 or higher.
- Adapter shall be installed near the equipment and shall be easily accessible.
- The operating temperature of the EUT can't exceed 35°C and shouldn't be lower than 5°C.
- The plug is considered as disconnect device of adapter.
- The UNII Band 5150-5250 MHz is for indoor use only.
- The device complies with RF specifications when the device is used at 20 cm from your body.

Hereby, Screeneo Innovation SA declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU.

CE

The Declaration of Compliance can be consulted on the site www.philips.com.

Frequency bands	Maximum output power
BT EDR (EIRP)	9.09 dBm
BT BLE (EIRP)	4.85 dBm
Wi-Fi 2.4GHz (EIRP)	17.88 dBm
Wi-Fi 5GHZ (EIRP)	17.89 dBm

FCC statement

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to the user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to user.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

During operation, the separation distance between the user and the antenna shall be at least 20 cm. This separation distance will ensure that there is sufficient distance from a properly installed externally-mounted antenna to satisfy the RF exposure requirements.

FCC ID: 2ASRT-NPX950

Canada regulatory compliance

This device complies with Industry Canada CAN ICES-3 (B)/NMB-3(B)

RSS-Gen & RSS-247 statement: This device complies with Industry Canada RSS standard(s).

Operation is subject to the following two conditions:

1 This device may not cause interference, and

2 This device must accept any interference, including interference that may cause undesired operation of the device.

RF Radiation Exposure statement: The device meets the exemption from the routine evaluation limits in section 2.5 of RSS102 and users can obtain Canadian information on RF exposure and compliance.

This device should be installed and operated with a minimum distance of 7.8 inches (20 centimetres) between the device and your body.

Other notice

Preservation of the environment as part of a sustainable development plan is an essential concern of Screeneo Innovation SA. The desire of Screeneo Innovation SA is to operate systems respecting the environment and consequently it has decided to integrate environmental performances in the life cycle of these products, from manufacturing to commissioning use and elimination.

Batteries: If your product contains batteries, they must be disposed of at an appropriate collection point.



Product: The crossed-out waste bin symbol on the product means that the product belongs to the family of electrical and electronic equipment. In this respect, the European regulations ask you to dispose of it selectively:

- At sales points in the event of the purchase of similar equipment.
- At the collection points made available to you locally (drop-off center, selective collection, etc.).

In this way you can participate in the reuse and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health.

The paper and cardboard packaging used can be disposed of as recyclable paper. Have the plastic wrapping recycled or dispose of it in the non-recyclable waste, depending on the requirements in your country.

Trademarks: The mentioned references in this manual are trademarks of the respective companies. The lack of the trademarks ® and ™ does not justify the assumption that these dedicated terminologies are free trademarks. Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Screeneo Innovation SA disclaims any and all rights in those marks.

Neither Screeneo Innovation SA nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorised modifications, repairs, or alterations to this product, or failure to strictly comply with Screeneo Innovation SA operating and maintenance instructions.

Screeneo Innovation SA shall not be liable for any damages or problems arising from the use of any options or any consumable materials other than those designated as original Screeneo Innovation SA/PHILIPS products or Screeneo Innovation SA/PHILIPS approved products.

Screeneo Innovation SA shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Screeneo Innovation SA/PHILIPS products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Screeneo Innovation SA. The information contained herein is designed only for use with this product. Screeneo Innovation SA is not responsible for any use of this information as applied to other devices.

This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved.

HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Screeneo Innovation SA
8A route de Suisse 1163 Etoy - Switzerland

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. Screeneo Innovation SA is the warrantor in relation to the product with which this booklet was packaged.

NeoPix 950

2025 © Screeneo Innovation SA. All rights reserved.

EN