HYUNDAI



UQ 437602 V / FQ 407602 V / FQ 327602 V / HL 327602 V / HL 247602 V

INSTRUCTION MANUAL

GENUINE PRODUCT OF
HYUNDAI CORPORATION

CONTENTS

1 SAFETY INFORMATION
- Meaning of symbols
- Handling and use of batteries
- Risks associated with high volume
- Locating the TV set
- Maintenance / Cleaning

2 STAND ASSEMBLY

2 WALL MOUNT INSTALLATION

3 CONNECTORS

4 TV CONTROL
- Remote Control
- Control Via Mobile Phone
- Control Via the TV Button

6 TURNING THE TV ON/OFF

6 INITIAL SETUP GUIDE

7 HOME SCREEN
- Navigation Bar
- Source Selection
- Applications

8 WATCHING TV
- Channel List
- Channel Edit
- Favorite Channel List
- Settings
- EPG (Electronic Program Guide)
- HBBTV

9 APP INSTALLATION

9 MULTIMEDIA PLAYBACK

9 HDMI CEC

9 HDMI eARC/ARC

10 TV SETTINGS
- E-Manual

11 TROUBLESHOOTING AND TIPS

12 DISPOSAL INFORMATION

12 LICENSE NOTIFICATION

13 SUPPORTED USB FORMATS

14 SPECIFICATION

SAFETY INFORMATION

IMPORTANT - Please read these instructions fully before installing or operating.


WARNING: This TV set is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PROTECT THE TELEVISION FROM MECHANICAL DAMAGE

Avoid any pressure or impact on the screen, do not insert any objects into the openings on the TV set or the connectors. These rules must be followed by all persons, especially children.

- In extreme weather (storms, lightning) and long inactivity periods (going on holiday) disconnect the TV set from the mains. The mains plug is used to disconnect the TV set from the mains and therefore it must remain readily operable. If the TV set is not disconnected electrically from the mains, the device will still draw power for all situations even if the TV set is in standby mode or switched off.
- Use this TV set at an altitude of less than 5000 metres above the sea level, in dry locations and in regions with moderate or tropical climates.
- The TV set is intended for household and similar indoor use but may also be used in public places.
- For ventilation purposes, leave at least 5cm of free space around the TV set.
- The ventilation should not be impeded by covering or
- blocking the ventilation openings with items, such as
- newspapers, tablecloths, curtains, etc.
- The power cord/plug should be easily accessible. Do not place the TV set, furniture, etc. on the power cord. A damaged power cord/plug can cause fire or give you an electric shock.
- Handle the power cord by the plug, do not unplug the TV set by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. When damaged it must be replaced, this should only be done by qualified personnel.
- Do not expose the TV set to dripping or splashing of liquids and do not place objects filled with liquids, such as vases, cups, etc. on or over the TV set (e.g. on shelves above the unit).
- Do not expose the TV set to direct sunlight or do not place open flames such as lit candles on the top of or near the TV set.
- Do not place any heat sources such as electric heaters, radiators, etc. near the TV set.
- Do not place the TV set on the floor or inclined surfaces.
- To avoid danger of suffocation, keep plastic bags out of the reach of babies, children and domestic animals.

MEANING OF SYMBOLS

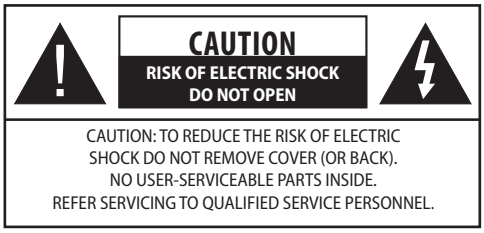

MARKINGS ON THE PRODUCT

	Caution	Serious injury or death risk
	Risk of electric shock	Dangerous voltage risk
	Maintenance	Important maintenance component

The symbols are used on the TV set as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.

Class II Equipment: This appliance is designed in such a way that it does not require a safety connection to electrical earth.

Hazardous Live Terminal: The marked terminal(s) is/are hazardous live under normal operating conditions.

HANDLING AND USE OF BATTERIES

- Batteries should only be handled by adults. If the battery cover of the remote control is not securely closed, do not allow children to use the TV set.
- Remove the batteries if they are depleted or if they will not be used for a long time. Incorrect use of batteries can cause electrolyte leakage, corrosion of the battery compartment, or cause the batteries to burst, therefore:
  - Do not mix different types of batteries.
  - When inserting new batteries, replace all batteries at the same time.
- Batteries contain chemical substances, so they should be disposed of properly.
- Do not throw batteries into a fire or among hazardous or flammable materials.

RISKS ASSOCIATED WITH HIGH VOLUME

Listening at high volume for extended periods can cause hearing damage or loss.

LOCATING THE TV SET

The television can fall and cause serious injury or death. Many injuries, especially to children, can be avoided by simple precautions:

- **ALWAYS** use cabinets or stands or mounting methods recommended by the manufacturer of the television.
- **ALWAYS** use furniture that can safely support the TV set.
- **ALWAYS** ensure the TV set is not overhanging the edge of the supporting furniture.
- **ALWAYS** educate children about the dangers of climbing on furniture to reach the TV set or its controls.
- **ALWAYS** route cords and cables connected to your TV set so they cannot be tripped over, pulled, or grabbed.
- **NEVER** place a TV set in an unstable location.
- **NEVER** place the TV set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV set to a suitable support.
- **NEVER** place the TV set on cloth or other materials that may be located between the TV set and supporting furniture.
- **NEVER** place items that might tempt children to climb, such as toys and remote controls, on the top of the TV set or furniture on which the television is placed.

The TV set is only suitable for mounting at heights ≤2 m.

When moving the TV set to another location, follow the precautions above.

MAINTENANCE / CLEANING

- Before cleaning, ensure the TV set is completely disconnected from the power supply.
- Use only dedicated and certified cleaning products to clean the screen (display).
- Never use abrasive or strong solvents to clean the television's surface, as they could cause damage. A dry, soft cloth is suitable; however, if the television's surface is significantly dirty, you can wipe it with a slightly damp cloth.
- Before reconnecting the TV set to the power supply and turning it on, it is essential to check that all residual moisture has been removed from its surface and ventilation openings to prevent the risk of injury or electric shock.

If the TV set needs to be sent for service, store it in its original packaging. Keep the original packaging for this purpose.

STAND ASSEMBLY

- Place the TV set on a table with the screen (display) facing down:
  - Use a flat and sturdy table larger than the TV set.
  - A clean, soft, and non-abrasive protective layer (e.g., a blanket) must be placed between the screen and the table surface to prevent damage to the screen.
  - When placing the TV set, avoid any pressure or impact on the screen.
  - When handling the TV set, it is necessary to avoid drops, impacts, and excessive bending or twisting of the structure, which could lead to its irreversible mechanical damage.
- Place the side feet onto the mounting holes on the bottom of the television.
- Insert the provided screws into the holes and tighten them firmly, but gently, to avoid stripping the thread.

WALL MOUNT INSTALLATION

The television is ready for mounting with a VESA standard wall mount (not included).

NOTE: For more details, see the Quick Start Guide included with your TV.

CONNECTORS

NOTE: Before connecting any external devices or inserting a CA decoding module, please turn off both the TV and the devices being connected.

Side Connectors



HDMI3	Input	Digital input for transferring video and audio from a connected device.
HDMI2	Input	Digital input for transferring video and audio from a connected device.
HDMI1 (ARC)	Input / Output	Digital input for transferring video and audio from a connected device. Digital output for transferring audio from the TV to a connected audio device (e.g., a soundbar).
USB1/USB2	Inputs	Connection for USB devices (5V ⎓ 500mA Max).
CI	Input	Slot for a CA decoding module.
HEADPHONE	Output	Headphone audio output.

Bottom Connectors



RJ45	Input	Connection for a network Ethernet cable.
OPTICAL	Output	Digital optical output for transferring audio from the TV to a connected audio device (e.g., a soundbar).
VIDEO	Input	Composite analog input for video transmission.
L - IN - R	Input	Analog input for Audio transmission.
LNB IN	Input	Connection for a satellite LNB converter (13/19V ⎓ 500mA Max).
ANT	Input	Connection for a terrestrial or cable TV antenna cable.

NOTE: Connection cables are not included in the package.

TV CONTROL

NOTE: (*) The buttons marked with an asterisk are available only on certain remote controls for select models.

REMOTE CONTROL

	Power On / Standby Mode
	Display available broadcast sources and content.
	Switch channels. Enter a number in the on-screen text field.
	Display the Electronic Program Guide (EPG).
	Display the channel list.
	Display the settings menu.
	Display the playback control panel.
	Directional buttons: Navigate in the menus. Center button (**OK**): Confirm a selection. Display the channel list in
	Display the previous menu. Switch between the current and previous channel.
	Exit the settings menu.
	Display the Home screen.
	Mute the sound.
	(*) Activate microphone.
	Adjust the volume.
	Switch to the next/previous channel.
	Display teletext.
	Turn subtitles on/off.
	(*) Display information about the broadcast content.
	Custom button: Quickly select an input or launch a selected app.
	Color buttons: The functions of the color buttons vary across different menus; follow the on-screen instructions.

TV CHANNELS+	Launch the TV Channels+ app.
DEEZER	Launch the Deezer app.
YouTube	Launch the YouTube app.
NETFLIX	Launch the Netflix app.
prime video	Launch the Prime Video app.
plex	Launch the Plex app.
Disney+	Launch the Disney+ app.
BROWSER	Launch the web browser.

Battery Installation

Remove the battery compartment cover on the back of the remote control. Insert 2 x 1.5V AAA size batteries as shown in the diagram inside the battery compartment. Make sure to observe the correct polarity (+/-).


CONTROL VIA MOBILE PHONE

You can control the television using the VIDAA app, which is available for both Android and iOS devices.

Android

iOS

CONTROL VIA THE TV BUTTON

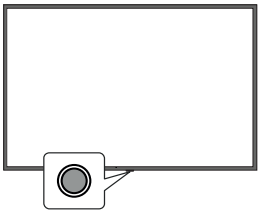

The control button allows you to operate only some of the basic functions of the television (power on/off, change the input source, and adjust the volume).

- If the TV is off, press the control button to turn it on.
- If the TV is on, press the control button to display a menu showing the button's available functions.
  - Press the button briefly to navigate through the menu.
  - Press and hold the button to confirm your selection.

TURNING THE TV ON/OFF

IMPORTANT: The TV is designed to operate on 100-240V AC, 50/60 Hz.
Before plugging the TV into the mains, wait until it reaches room temperature after unpacking**.**

Turning On

To turn on the television, you can choose one of the following options:

- Press the button on the remote control.
- Press the control button on the television.

Turning Off

To turn off the television, you can choose one of the following options:

- Press the button on the remote control.
- Press the control button on the television and select the Power Off option.

Turning Off the Television Completely

To turn off the television completely, unplug the power cord from the wall outlet.

INITIAL SETUP GUIDE

The installation wizard will guide you through the setup process. Follow the on-screen instructions to complete the initial setup process. Use the directional buttons and the **OK** button on the remote control to select, adjust, confirm, and proceed.

NOTE: You can perform the initial setup at any time by executing a factory reset in the Settings> Support> Reset to factory Deault menu.
Some steps of the initial setup may vary or may be omitted depending on the settings chosen in each step.

Select Language

Select your desired language from the list and press the **OK** button to proceed.

Selecting the installation method

- To set up the TV using your phone, follow the on-screen instructions.
- To set up the TV using the remote control, select Start and follow the steps below.

Select Location

In the next step, select your country from the list and press **OK** to proceed.

Channel Scanning

Note: Before tuning the TV channels, connect the antenna to the television.

Select Auto Channel Scan and press the **OK** button to continue.

*NOTE: If you do not want to tune the TV channels, select Skip and press the **OK** button.*

Channel Scan Setup

Select the tuner type(s) and press the **OK** button to continue.

Satellite (Satellite Broadcast)

- Select the operator you wish to use.
- In the next step, adjust the settings for individual satellites.

Once the settings are complete, select Start Scanning and press the **OK** button to begin the scan.
The tuned channels will be saved to the channel list.

Aerial (Terrestrial Broadcas)

- Select the type of channels you want to tune.
- In the next step, select the scan mode.

Once the settings are complete, select Start Scanning and press the **OK** button to begin the scan.
The tuned channels will be saved to the channel list.

NOTE: If the selected country does not have analog broadcasting, analog channels will not be searched.

Cable (Cable Broadcast)

- Set the cable broadcasting parameters.

Once the settings are complete, select Start Scanning and press the **OK** button to begin the scan.
The tuned channels will be saved to the channel list.

NOTE: If the selected country does not have analog broadcasting, analog channels will not be searched.

Connect to the Internet

If you have previously connected your television to the internet using a network cable, a message will appear stating that you are connected.

NOTE: To use a wireless connection instead of a wired connection, select Via Wireless. The TV will scan for available wireless networks and display them in a list.

Select your WLAN network from the list and press the **OK** button to connect. If the network is password-protected, enter the password using the on-screen virtual keyboard.
If the network you want to connect to has a hidden SSID (network name), select Add a Network from the list.
If you do not want to connect to the internet at this time, you can skip this step by selecting Skip.

NOTE: You can connect to the internet later via the menu options Settings > Connection > Network > Internet Connection.

Once connected to the internet, the Networked Standby Notice window will appear. Enable/Disable the WoL (Wake-on-LAN for wired connections) or WoW (Wake-on-Wireless-LAN for Wi-Fi connections) features.

Terms of Use and Data Privacy Choises

You can view the Privacy Policy, End User License Agreement, Enhanced Viewing Service terms, and Data Sharing terms to see Ads relevant to you.
By accepting, you agree to the terms of service for TVs powered by VIDAA technology.

NOTE: If you do not agree to the terms and conditions, you will not be able to use the interactive features of this television.

Enter Postcode

By sharing your location, you will allow the TV to offer local news and other information.

Activate VIDAA Account

To fully enjoy all the features of your TV, select Sign In/ Create Account and create a VIDAA account.
If you do not want to create a VIDAA account at this time, you can skip this step by selecting Skip.

NOTE: You can create an account later using the Account menu options on the Home screen.

Name TV

Assign/create a unique name for your TV so you can easily identify it.

In the final step of the initial setup, the channel scan results will be displayed. If everything is correct, select Done and press the **OK** button to continue.

TIP

If you want the TV to start on the same source when turned on (for example, on the last watched channel), go to Settings > System > Advanced Settings and change the Default Startup Page item to Last Accessed Source.

HOME SCREEN

Press button to display the Home screen. The Home screen features content menus from individual providers, the navigation bar, options to select broadcasts and content, and installed applications.

Use the directional buttons and the **OK** button to make and confirm your selection.

To exit the Home screen, select another broadcast source or content.

NOTE: Due to continuous development, the appearance, menus, and options of the Home screen may vary.

NAVIGATION BAR

The navigation bar is located on the left side of the Home screen.

Account
Activate, create, or switch VIDAA account.

Search
Search for the desired content.

Kids
Create and set up a kids' profile.

Gaming
Quick access to games.

Notifications
Manage notification settings.

Settings
Manage TV settings.

SOURCE SELECTION

After moving to icon, a row listing available broadcast sources and content will appear beneath it. Use the directional buttons to select the desired source and confirm your selection by pressing the **OK** button.

TIP

After moving to icon and pressing the **OK** button, the TV will switch to the last used source.

APPLICATIONS

You can organize the menu of installed applications as follows:

- Use the directional buttons to select an application.
- Press and hold the **OK** button to display editing options.
- Use the directional buttons to move the application to a different position or remove it from the menu.
- Press the **OK** button to confirm the change.

WATCHING TV

Select the TV Channels source to start watching your tuned programs.

CHANNEL LIST

Press the **OK** button to display the channel list.
Press the left directional button to display a panel where you can select your favorite channel list, switch the reception type, and launch Channel Edit.

TIP

Use the up/down directional buttons to select the desired channel. Press the **OK** button to switch to the selected channel.

CHANNEL EDIT

NOTE: Available options may vary or the menu may be inactive depending on the selected input source, operator, and whether the channel installation has been completed.

In TV Channels mode, press button, select Edit Channel List, and then select the reception type.
Alternatively, in TV Channels mode, press button, select All Settings> Channel> Channel Edit, and then select the reception type.

Moving a Channel

- Use the up/down directional buttons to select the desired channel.
- Press the left directional button.
- Use the up/down directional buttons to select the new position.
- Press the **OK** button to confirm the change.

Deleting a Channel

- Use the up/down directional buttons to select the desired channel.
- Press the right directional button.
- Press the **OK** button to confirm the deletion.

TIP

You can export your edited channel list to a connected USB drive. In the Channel Management menu, select Export to USB.

FAVORITE CHANNEL LIST

You can create four different favorite channel lists FAV1 ~ FAV4.
In TV Channels mode, press button, select Edit Channel List, and then select one of the favorite channel lists.
Alternatively, in TV Channels mode, press button, select All Settings> Channel> Channel Edit, and then select one of the favorite channel lists.

Add Channel(s) to the Favorites List

- Use the up/down directional buttons to select the desired channel(s).
- Press the **OK** button to confirm your selection. A heart symbol will appear next to the selected channel.
- Press button to return to the selected favorite channel list.

NOTE: Use the same method to remove channel(s) from the list.

SETTINGS

Stisknutím tlačítka button in TV Channels mode to quickly access the TV settings.

Editing the Settings Menu

- Use the left/right directional button to select Edit.
- Use the directional buttons to select the desired item and press the **OK** button.
- Use the directional buttons to select the new position.
- Press the **OK** button to confirm the change.
- Press button to exit editing.

EPG (ELECTRONIC PROGRAM GUIDE)

Press GUIDE button to display the Electronic Program Guide.
Alternatively, in TV Channels mode, press button and select Guide.
Press the left directional button to display a panel where you can select your favorite channel list or switch the reception type.
Press the left directional button again and select Search to search for the desired content.

Adding a Program Reminder

- Select the program for which you want to set a reminder.
- Press the **OK** button for setup and select Reminder.
- In the new window, adjust the reminder parameters and save it.

Scheduled
The list of reminders.
Programme Colour
Color settings for different program genres.

HBBTV

NOTE: HbbTV broadcasting can only be viewed when the TV is connected to the internet and the HbbTV function is enabled in the Settings> Channel> HbbTV menu.

If HbbTV is available on the channel you are watching, a red button symbol/icon will appear on the screen. Press button to start watching HbbTV.

TIP

HbbTV can be turned on/off for a specific channel.
Press button, select HbbTV, and then turn it on/off.

APP INSTALLATION

IMPORTANT! All applications are developed by third parties. The TV manufacturer has no control over the availability or functionality of these applications. The TV manufacturer bears no responsibility for any issues regarding third-party applications.

- On the Home screen, select **app store** from the applications menu and press the **OK** button.
- Select or search for the desired application and press the **OK** button.
- To install the application, select **INSTALL** in the new window.

NOTE: Use the same method to uninstall an application..

MULTIMEDIA PLAYBACK

IMPORTANT! Before connecting to the TV, back up the files stored on your USB storage devices. The manufacturer is not responsible for any damage to or loss of data. It is possible that certain types of USB devices (e.g., MP3 players) or USB hard drives/memory cards will not be compatible with this television.

USB/HDD Playback

NOTE: Storage devices formatted in FAT32, exFAT, and NTFS with a maximum capacity of 2 TB are supported. Files larger than 4 GB are not supported. Connect the USB device directly to the TV; do not use any USB extension cables.

- On the Home screen, select **media** from the applications menu and press the **OK** button. Alternatively, locate the connected device in the sources menu or select **Content Sharing** as the source on the Home screen.
- Select the desired file and press the **OK** button to start playback.
- After pressing ⏯ button, the playback control panel will be displayed. Press the directional buttons to select the desired function. Press the same button to close the panel.
- Press the down directional button and select ⋯ to display the playback settings.
- Press the down directional button again to display the file list.

NOTE: Wait a moment before each connection and disconnection of a storage device, as the television may still be reading the files. Failure to follow this instruction may cause physical damage to the USB device. Do not disconnect the USB device from the TV during file playback.

Playback from Network Storage

Follow the steps described above.

HDMI CEC

The HDMI CEC (Consumer Electronics Control) function allows you to control a connected device using the television's remote control.

NOTE: The connected device must support the HDMI CEC function and must be connected to the TV using an HDMI cable.

HDMI CEC settings can be found in the **Settings**> **Connection**> **HDMI & CEC** menu.

HDMI eARC/ARC

The HDMI eARC/ARC (Enhanced Audio Return Channel / Audio Return Channel) function allows the transmission of a digital audio signal from the TV to a connected audio device using an HDMI cable.

If a device supporting this feature is connected to the TV, the TV will automatically switch the audio output to the connected device.

You can switch the audio output back to the TV speakers in the **Settings**> **Sound**> **Audio Output** menu.

NOTE: If eARC/ARC is active, the TV will automatically mute other audio outputs. Therefore, you will hear sound only from the connected audio device. The volume control buttons on the remote control will be directed to the connected audio device, allowing you to control the volume of the connected device using the TV's remote control.

The HDMI eARC/ARC function is supported only through the HDMI1 (ARC) input.


TV SETTINGS

All television settings are described in the E-manual, which can be found in the Settings> Support menu.

E-MANUAL

- You can navigate through the E-manual using the directional buttons.
- Press the **OK** button to confirm your selection.
- Press ⮌ button to go back one step.

If you need to search for a specific term, go to the magnifying glass icon in the upper right corner of the screen.

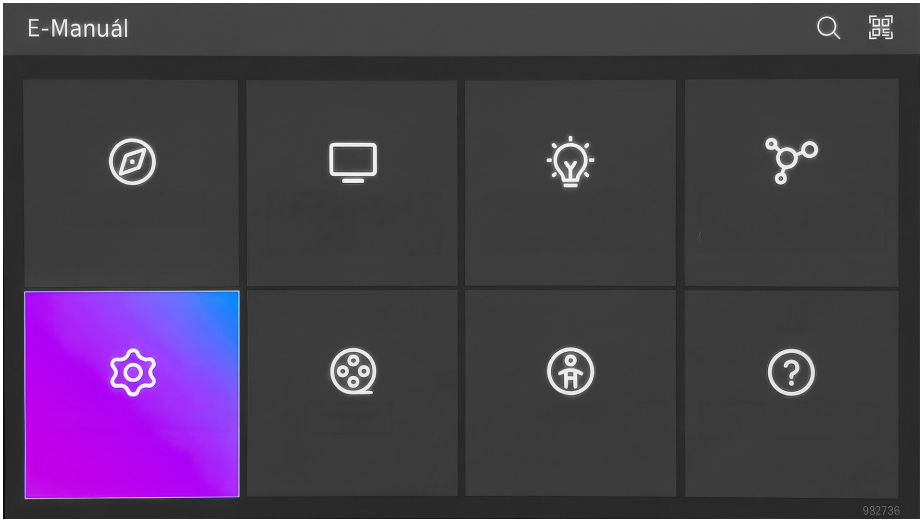

TIP

You can also view the E-manual on your phone.
Go to the QR code icon in the upper right corner of the screen and press the **OK** button. Scan the QR code with your phone.

TROUBLESHOOTING AND TIPS

The TV Will Not Turn On

- Verify that the power cable is properly plugged into the wall outlet.
- Unplug the power cable from the outlet. Wait for one minute and then plug it back in.

The TV Does Not Respond to the Remote Control

- The TV requires some time to start up. During this time, the TV will not respond to the remote control or the TV control buttons. This is normal behavior.
- Use a mobile phone camera to check if the remote control is working. Switch your phone to camera mode and point the remote control at the camera lens. If you press any key on the remote control and see the infrared LED flashing on the camera screen, the remote control is working. If you do not see the flashing, the batteries may be depleted. Replace the batteries with new ones. If the remote control still does not work, it may be broken.

NOTE: This method of checking the remote control is not possible for remote controls that are wirelessly paired with the TV.

Wi-Fi Connection Issues

- Use your phone to test the TV's connectivity. Create a mobile hotspot on your phone and place it next to the TV. Connect the TV to your phone's hotspot. If everything works without any issues, the problem lies with your home Wi-Fi network.
- Check whether the Wi-Fi signal quality is sufficient at the location where the TV is placed.
- Check if your home Wi-Fi network is experiencing interference from nearby Wi-Fi networks. Set your router to a different transmission channel.
- If you have a choice between a 2.4 GHz and a 5 GHz Wi-Fi network, connect the TV to the 2.4 GHz Wi-Fi network.

No Channels Found

- Check that all cables are properly connected and that the correct broadcast type is selected.
- Verify that the correct channel list is selected.
- If you performed manual tuning, make sure you entered the correct channel frequency.

No Picture / Distorted Picture

- Check if the antenna is properly connected to the TV.
- Check if the antenna cable is damaged.
- Verify that the correct device is selected as the input source.
- Check that the external device or source is connected properly.
- Verify that the picture settings are correct.
- Reception quality can be affected by loud speakers, ungrounded audio devices, neon lights, high-rise buildings, and other large objects. If possible, try to improve reception quality by changing the direction of the antenna or moving devices further away from the TV.
- If the picture does not fit the screen, select a different picture format.
- Check if your computer is using a supported resolution and refresh rate.

No Sound / Poor Sound

- Verify that the audio settings are correct.
- Check that all cables are properly connected.
- Check that the volume is not muted or set to zero. Test this by increasing the volume.
- Verify that the TV's audio output is connected to the audio input of the external audio system.

Input Sources - Cannot Be Selected

- Check if the device is connected to the TV.
- Check that all cables are properly connected.
- Verify that you have selected the correct input source intended for the connected device.

DISPOSAL INFORMATION

Disposal of old Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

LICENSE NOTIFICATION

HEVC Advance™
Covered by patents at patentlist.accessadvance.com

HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby Audio

Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

The "CI Plus" Logo is a trademark of CI Plus LLP.

DVB
Digital Video Broadcasting

DVB is a registered trademark of the DVB Project.

Hereby, ETA a.s. declares that the radio equipments type UQ 437602 V, FQ 407602 V, FQ 327602 V, HL 327602 V, HL 247602 V are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.hyundai-electronics.cz/declaration_of_conformity

SPECIFICATION

Model	HL 247602 V	HL 327602 V	FQ 327602 V	FQ 407602 V	UQ 437602 V
Digital Reception	DVB-T2/S2/C	DVB-T2/S2/C	DVB-T2/S2/C	DVB-T2/S2/C	DVB-T2/S2/C
RF Aerial Input	75 Ω (unbalanced)	75 Ω (unbalanced)	75 Ω (unbalanced)	75 Ω (unbalanced)	75 Ω (unbalanced)
Screen resolution	1366 x 768 pxl	1366 x 768 pxl	1920 x 1080 pxl	1920 x 1080 pxl	3840 x 2160 pxl
Wi-Fi standard	802.11 a/b/g/n/ac	802.11 a/b/g/n/ac	802.11 a/b/g/n/ac	802.11 a/b/g/n/ac	802.11 a/b/g/n/ac
Wi-Fi operating frequency / EIRP	2412 ~ 2472 MHz / < 100 mW 5180 ~ 5850 MHz / < 130 mW *	2412 ~ 2472 MHz / < 100 mW 5180 ~ 5850 MHz / < 130 mW *	2412 ~ 2472 MHz / < 100 mW 5180 ~ 5850 MHz / < 130 mW *	2412 ~ 2472 MHz / < 100 mW 5180 ~ 5850 MHz / < 130 mW *	2412 ~ 2472 MHz / < 100 mW 5180 ~ 5850 MHz / < 130 mW *
Bluetooth operating frequency / EIRP	2402 ~ 2480 MHz / < 10 mW	2402 ~ 2480 MHz / < 10 mW	2402 ~ 2480 MHz / < 10 mW	2402 ~ 2480 MHz / < 10 mW	2402 ~ 2480 MHz / < 10 mW
Audio Output Power	2 x 3 W	2 x 6 W	2 x 6 W	2 x 8 W	2 x 8 W
Operating Voltage	100-240 V AC, 50/60 Hz	100-240 V AC, 50/60 Hz	100-240 V AC, 50/60 Hz	100-240 V AC, 50/60 Hz	100-240 V AC, 50/60 Hz
Power Consumption	40 W	55 W	55 W	74 W	110 W
Standby power consumption	< 0,5 W	< 0,5 W	< 0,5 W	< 0,5 W	< 0,5 W
Networked standby power consumption	< 2 W	< 2 W	< 2 W	< 2 W	< 2 W
Dimensions [mm]	536 x 364 x 166 (with stand)	716 x 463 x 167 (with stand)	718,7 x 460,6 x 167,2 (with stand)	892,2 x 554,3 x 215,2 (with stand)	957 x 603 x 215 (with stand)
	536 x 326 x 80 (without stand)	716 x 428 x 74 (without stand)	718,7 x 426,1 x 75,5 (without stand)	892,2 x 512,4 x 71,2 (without stand)	957 x 561 x 70 (without stand)
Weight [kg]	2,2 (with stand)	3,2 (with stand)	3,35 (with stand)	4,6 (with stand)	5,4 (with stand)
	2,15 (without stand)	3,15 (without stand)	3,3 (without stand)	4,5 (without stand)	5,3 (without stand)
Operation temperature and operation humidity	0°C ~ 40°C 25 ~ 80 %	0°C ~ 40°C 25 ~ 80 %	0°C ~ 40°C 25 ~ 80 %	0°C ~ 40°C 25 ~ 80 %	0°C ~ 40°C 25 ~ 80 %
Supported USB formats	AVI, MKV, MP4, FLV, MPEG, TS, WMV, AC3, AAC, WAV, WMA, MP3, M4A, FLAC, OPUS, JPEG, PNG, BMP, GIF	AVI, MKV, MP4, FLV, MPEG, TS, WMV, AC3, AAC, WAV, WMA, MP3, M4A, FLAC, OPUS, JPEG, PNG, BMP, GIF	AVI, MKV, MP4, FLV, MPEG, TS, WMV, AC3, AAC, WAV, WMA, MP3, M4A, FLAC, OPUS, JPEG, PNG, BMP, GIF	AVI, MKV, MP4, FLV, MPEG, TS, WMV, AC3, AAC, WAV, WMA, MP3, M4A, FLAC, OPUS, JPEG, PNG, BMP, GIF	AVI, MKV, MP4, FLV, MPEG, TS, WMV, AC3, AAC, WAV, WMA, MP3, M4A, FLAC, OPUS, JPEG, PNG, BMP, GIF
Package contents	Television, Stand, Power cord, Remote control, 2 x AAA batteries, Quick start guide	Television, Stand, Power cord, Remote control, 2 x AAA batteries, Quick start guide	Television, Stand, Power cord, Remote control, 2 x AAA batteries, Quick start guide	Television, Stand, Power cord, Remote control, 2 x AAA batteries, Quick start guide	Television, Stand, Power cord, Remote control, 2 x AAA batteries, Quick start guide

WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS. SUBJECT TO PRINTING ERRORS.

** IMPORTANT: Operation in the 5150–5350 MHz frequency range is restricted to indoor use only in EU countries .*

HYUNDAI

Licensed by Hyundai Corporation Holdings, Korea

Výrobce/Producer: ETA a. s., náměstí Práce 2523, 760 01 Zlín, CZ

GENUINE PRODUCT OF
HYUNDAI CORPORATION