


Rowenta®

X-PLOER

SERIE 375+

SERIE 380+

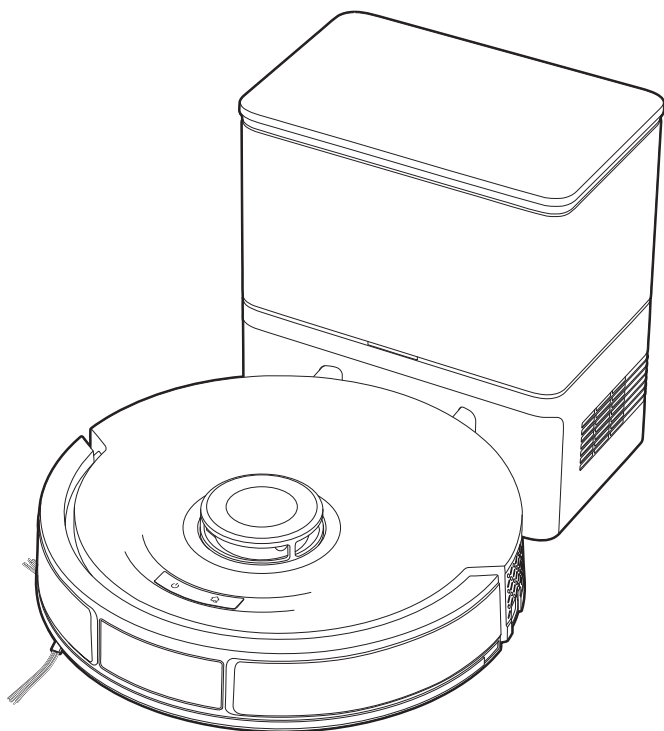

EN User's guide

p. 03

CS Uživatelská příručka

p. 20

User's guide


1. What's in the box?	p. 04
2. Product overview	p. 04
3. Before use	p. 05
4. Install the robot	p. 05
5. Connect the robot to the free app	p. 07
6. Use the robot without the app	p. 08
7. Maintain the robot and the station	p. 09
8. Component replacement frequency	p. 16
9. Do's and don'ts	p. 16
10. Unpair the robot and delete personal data	p. 16
11. Common issues and solutions	p. 17

Please read carefully the "Safety and use instructions" booklet before first use.

For more information:
www.rowenta.com


1. What's in the box?

EN

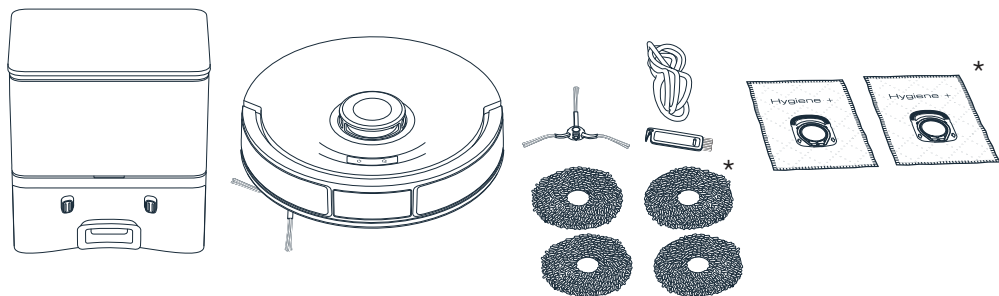

*depending on model

2. Product overview

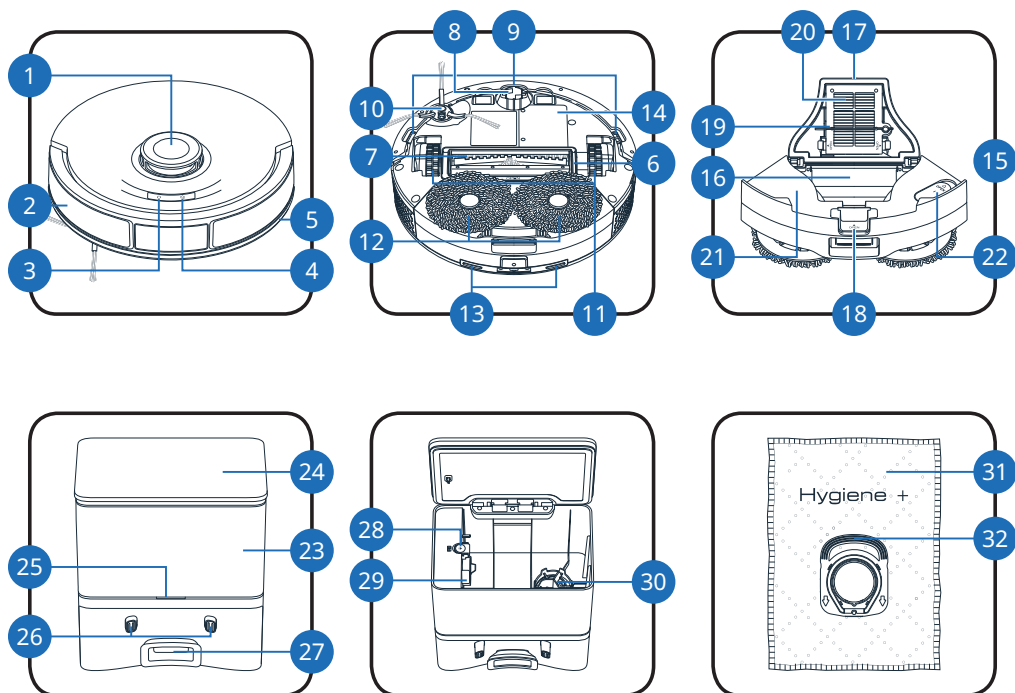

2. Product overview

EN

1. LiDAR
2. Bumper
3. Power/Start/Pause button
 - Press and hold to turn on or off
 - Press to start or pause cleaning
4. Home button
 - Press to return station
5. Anti-collision strip
6. Main brush cover
7. Main brush
8. Front wheel
9. Anti-drop sensors
10. Side Brush
11. Wheel
12. Spinning mops with magnetic holders
13. Charging contacts
14. Battery
15. 2-in-1 dust bin and water tank
16. Dust bin
17. Dust bin lid
18. Dust bin opening
19. Filter frame
20. Filter
21. Water tank
22. Stopper
23. Automatic dust collecting station
24. Station lid
25. Status light indicator
26. Charging contacts
27. Suction inlet
28. Eject button
29. Dust bag handle insertion slot
30. Dust bag chamber
31. Hygiene+ dust bag
32. Hygiene+ dust bag handle

3. Before use



Please read the following tips to improve cleaning efficiency. Tidy up cables, cords, small and loose items. Remove any unstable, fragile, precious or dangerous items from the ground. Make sure each room door is open. Your robot may encounter some difficulties on dark floors and on carpets: with fringes, too thick, with long piles, too light (ex: bathroom carpet). For optimum anti-drop sensors efficiency, remove any item (ex: shoe) from the stairs. When using the robot in a raised area, place a physical barrier at the edge of a drop to prevent accidental falls. Do not stand in narrow spaces, such as hallways so the robot is not blocked.

4. Install the robot







Flash the QR-Code above to know how to install and connect the robot in video. Read the following instructions for more detailed information.

<https://www.youtube.com/playlist?list=PL9XhN3pCkFObbG3XKk4aWhFDjL9IX3jnA>


4. Install the robot

EN

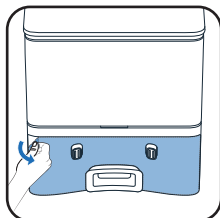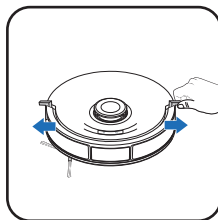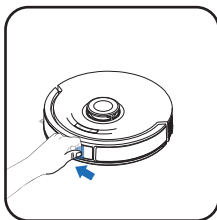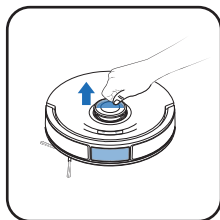


Remove the protections

Remove all protections (protective films and plastic foam protections) on the robot and on the station.

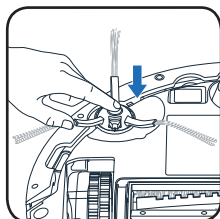


Install the side brush and the mops

Reverse the robot, install the side brush by gently clipping it. The side brush is correctly installed when you hear a click sound.

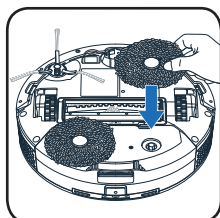

Install the two mops in the two magnetic holders. The mops are correctly installed when you hear a click sound.




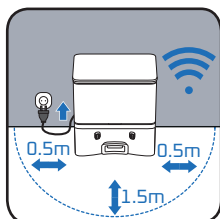


Install the station on a hard and flat floor. Avoid parquet, wooden floors and carpet. Place the station in a clear space against a wall, with no stairs in front of the station. Keep at least 0.5 m of clearance on either side and 1.5 m in front. Make sure the chosen location is close to the Wi-Fi box or has good Wi-Fi signal strength. Keep the area around the station clear from any object, reflective surface, mirror, table and chair. Keep the station away from direct sunlight.

Plug the power cable to a power socket. Make sure the power cable remains tidy behind the station and against the wall.

4. Install the robot

EN

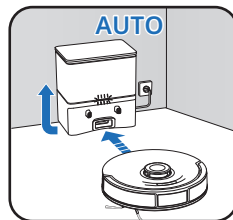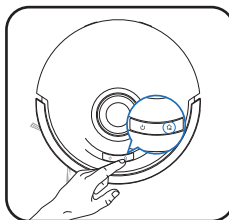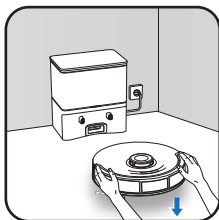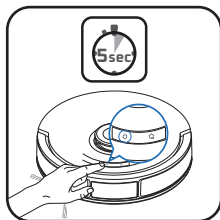

Turn on the robot

Turn the robot on by pressing and holding the ON-OFF button for few seconds until the robot lights turn on. You will hear a beep sound.

Place the robot in front of the station

Place the robot 20–50 cm in front of the station. Press the Home button, the robot will dock automatically to the station. (Do not place the robot manually against the station). Wait 4 hours for the robot to be fully charged. The station light is off when the robot is charging.

Informations

Please note that the robot will turn on automatically when placed in the station. The robot cannot be turned off when charging. Please note that for the first cleaning in a new environment, the robot will create the home map. Do not lift the robot during the first cleaning, it interrupts the map creation. Please make sure that mops are correctly installed before starting a cleaning session. Do not remove mops during cleaning. If you have carpets with fringes, please place barriers around carpets to prevent the robot from getting stuck in the fringes, it prevents the map creation. If you have an outdoor area (garden, balcony, patio, etc.) accessible with a threshold less than 2 cm high or without threshold (for example with a French window, a patio door, a bay window, etc.), please close this access so the robot doesn't go outside your home.

5. Connect the robot to the free app




On your smartphone, open the Google Play Store (Android) or App Store (iOS). Search for "Rowenta Robots" or scan the QR-Code and install the application. Open the app and follow the on-screen instructions to connect your robot.

https://rowentarobots.smart.link/bp5n10p55?appliance_id=APPLIANCE_1247




You can also find the detailed pairing instructions step by step in a PDF document by flashing the QR-Code below.

https://dam.groupeseb.com/m/3fd9efa007195343/original/Rowenta_RR9695WH_IFU.pdf

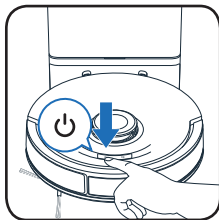


Start cleaning

Press the button "Power" to start automatic cleaning. The robot will scan the area. It will automatically split the room into small zones, first cleans zone edges and then cleans inside the zone in a zig zag. The robot will clean all accessible area, zone by zone. If the robot doesn't start when you press the button "Power", the battery level may be too low, please charge the robot.

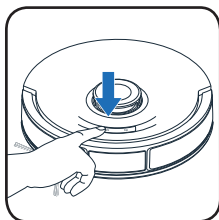


Pause and resume cleaning

Press the button "Power" at any time to pause cleaning and press it again to resume cleaning. If the robot is on standby, press the button "Power" once to wake up the robot and a second time to start cleaning.

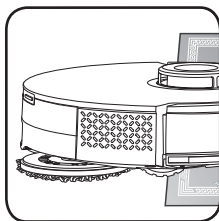

Robot behavior on carpet

If the robot has its rotating mops attached during cleaning, it will use its carpet sensor to detect carpets and avoid them to prevent getting them wet. Please note, you can also set a no-mop zone in the app to avoid carpets.

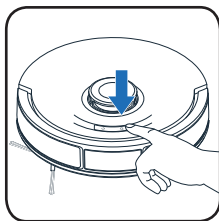

End cleaning

If you start the robot from the station, it will automatically return to its station at the end of the cleaning session or if the battery level is too low. If the battery runs low during the cleaning session, the robot will automatically return to its station to charge. After charging, the robot will resume cleaning where it left off. If the robot is not on its station when it starts cleaning, it will automatically return to its starting point at the end of the cleaning session or if battery level is too low. At the end of the cleaning session, the robot will automatically return to the station. But if you want to manually end the cleaning session, press the "Home" button once to stop the robot at any time and press it again to send the robot back to the station. If the robot fails to find the station, manually place the robot in front of the station and press the "Home" button. Once the robot is docked, the dust collection will be automatically activated for few seconds. Please note that the minimum time interval between two dust collections is 10 minutes.


Station's actions

At the end of the cleaning session, when the robot is docked, the station will automatically :

- recharge the robot's battery
- empty the robot's dust box




Flash the QR-Code to know how to maintain the robot to keep its performance.
Please unplug the station before any manipulation.

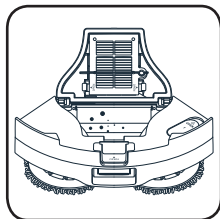

When needed - Clean the dust box


At the end of the cleaning session, the robot returns to its station and automatically empties the dust box, but some dirt may remain in the dust box.

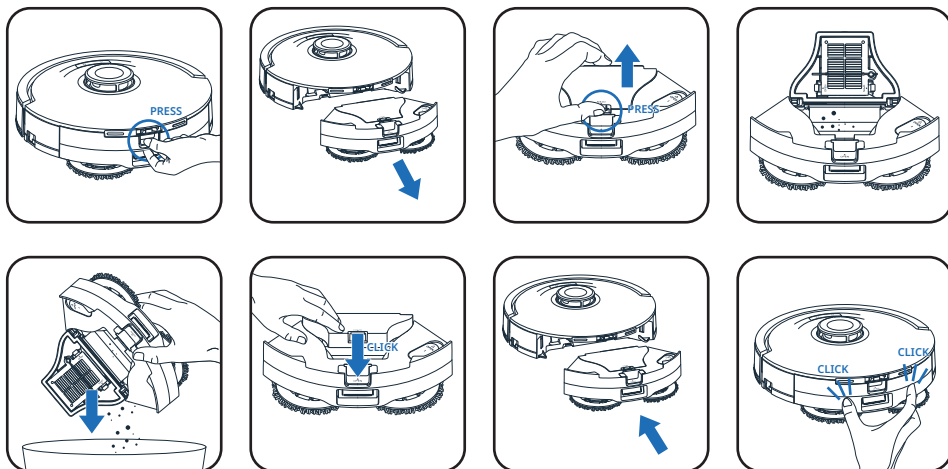

- Separate the 2-in-1 dust bin and water tank from the rest of the robot: press and hold its release buttons and pull it outwards.
- Press and hold the dust bin opening button to open the dust bin

- Empty the dirt into the bin
- Close the dust box
- Place it to its original position in the robot


After each use - Wash the mops

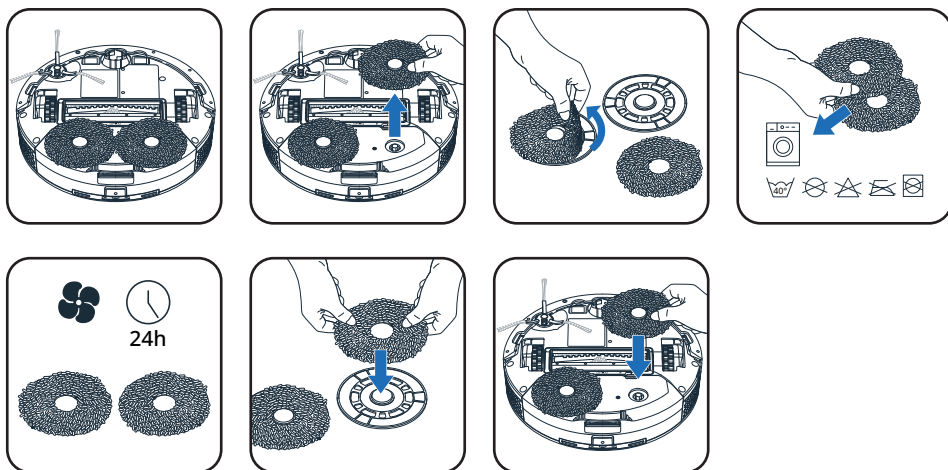

- Turn the robot upside down.
- Pull vertically the mops to remove them from the magnetic holders.
- Unscratch the mop clothes.
- Wash them under water or in the laundry machine at 40°C.


- Let them dry for 24 hours.
- Attach the mop clothes to the mop holder.
- Install the two mops in the two magnetic holders. Please make sure that mops are correctly installed before starting a cleaning session.

Once a week - Clean the filter

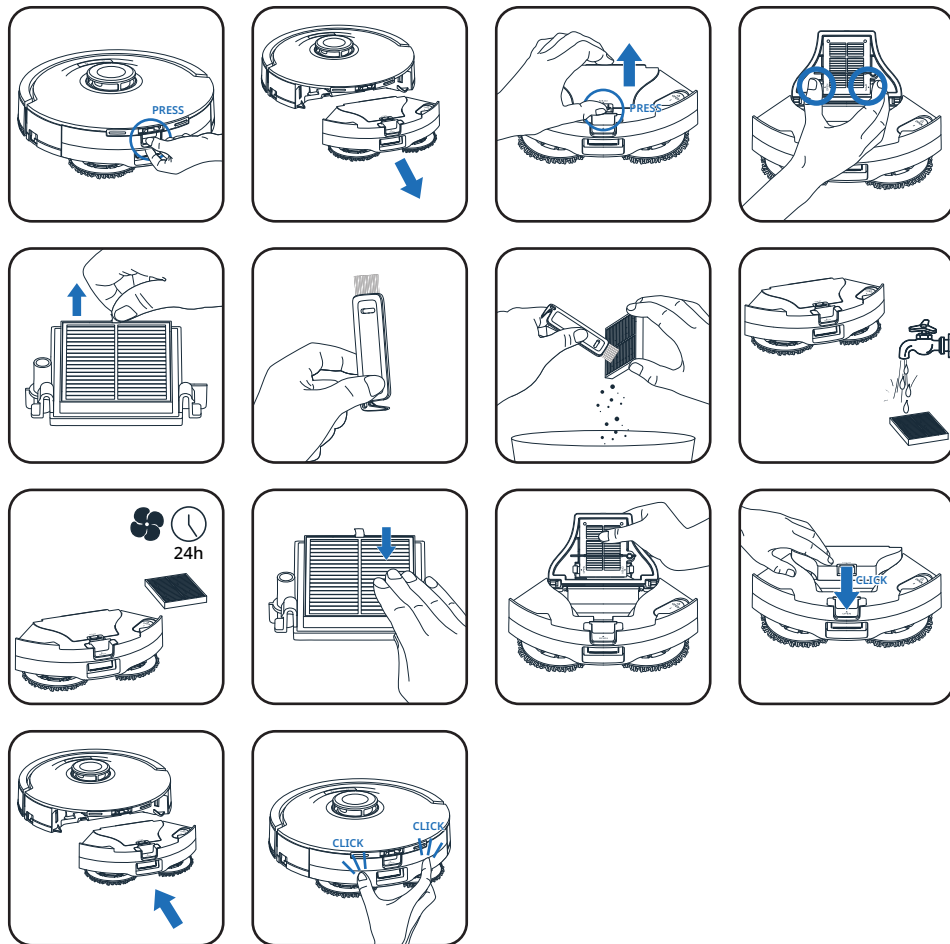

- Separate the 2-in-1 dust bin and water tank from the rest of the robot: press and hold its release buttons and pull it outwards.
- Press and hold the dust bin opening button to open the dust bin
- Grab the filter frame and pull to unclip it from the dust box
- Tap gently the filter above a bin to remove dust. You can use the cleaning tool provided in the packaging to remove dust. You can also wash the filter under water.
- Let it dry for 24 hours.
- Once the filter is fully dried, put it back to its original place. Never use the robot without the filter, it would damage the robot.
- Close the dust box
- Place it to its original position in the robot.







Once a week - Clean the main brush

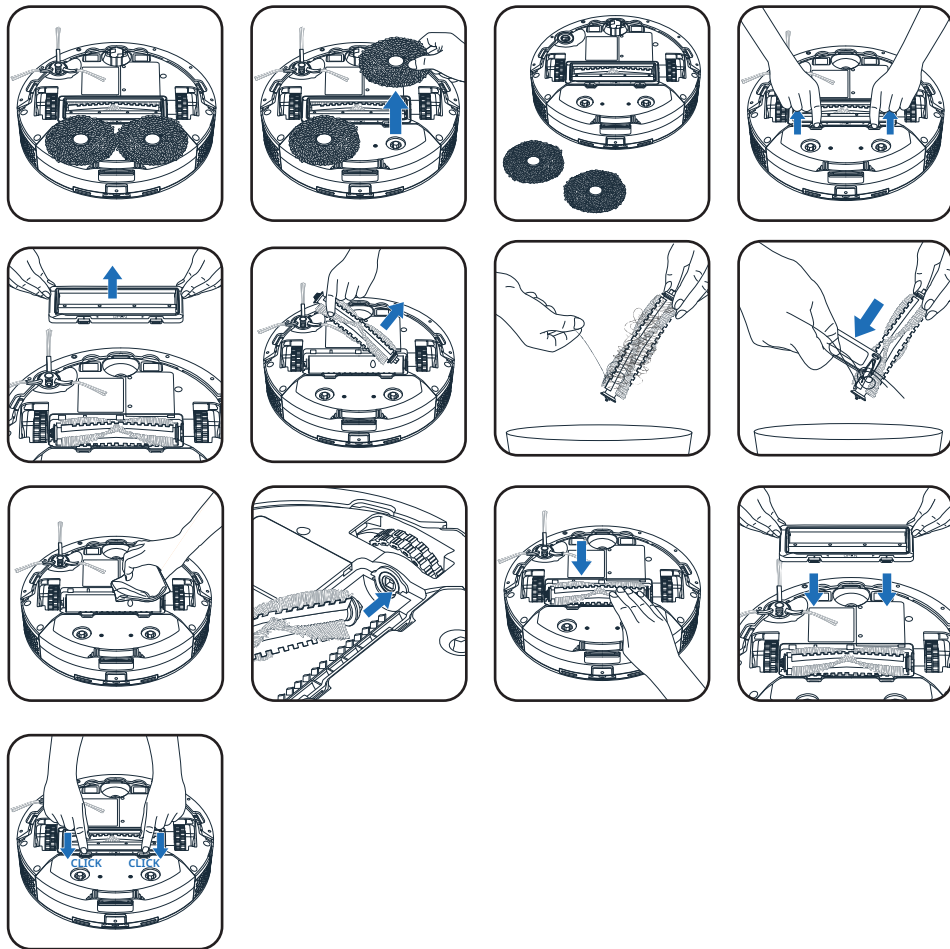

- Turn the robot upside down.
- Pull vertically the mops to remove them from the magnetic holders.
- Press the latches of the brush cover
- Pull to remove it
- Take out the brush
- Get rid of tangled hair. You can use the cleaning tool provided in the packaging to remove tangled hair





- Clean the main brush compartment and the suction channel with a dry cloth
- Re-install the brush in the robot
- Re-install the brush cover.
- The cover is correctly installed when you hear a click sound.

Once a week - Clean the side brush

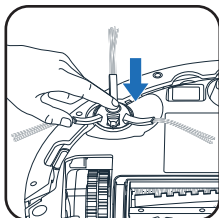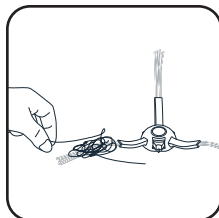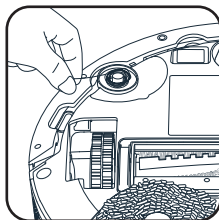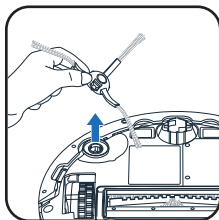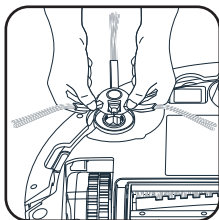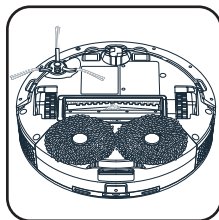



- Turn the robot upside down.
- Take the side brush with two hands by the plastic parts and pull to unclip it. Do not pull by the bristles of the side brush.
- Remove the tangled hair.
- Re-install the side by gently clipping it. The side brush is correctly installed when you hear a click sound.

Once a week - Clean the sensors

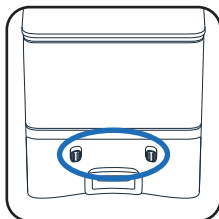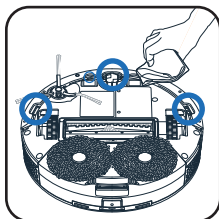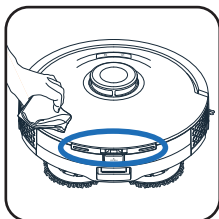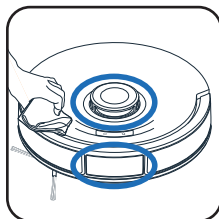

- With a clean, soft and dry cloth, wipe the robot sensors (in front, top, back, side and bottom of the robot), the buttons on the robot, the charging contacts of the robot and the charging contacts of the station.

Once a month - Clean the wheels







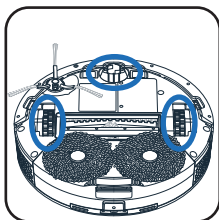
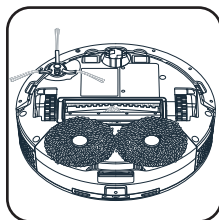


- The wheels may be entangled by hair or dirt. Turn the robot upside down. Clean the wheels by removing the tangled hair. You can remove the caster to remove any dirt before putting it back.

7. Maintain the robot and the station


EN

Every 2 months (depending on actual use) Replace the dust bag

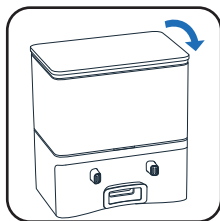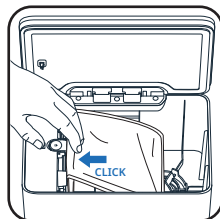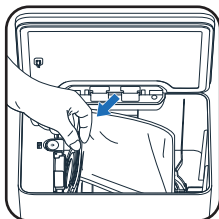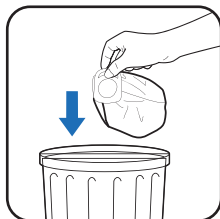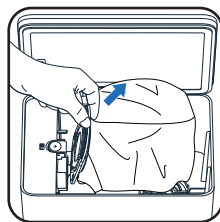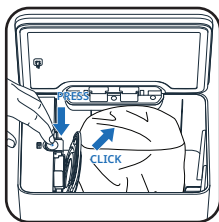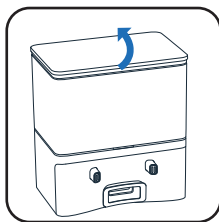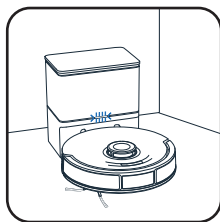

- When the dust bag is full, the light indicator of the station is red.
- Open the station lid.
- Press the Eject button.
- Grab the dust bag handle. Pull to take out the used dust bag.
- Throw it away in the bin.

- Take a new dust bag.
- Install it in the station by sliding the dust bag handle in the insertion slot.
- Clip it to the station
- The dust bag is correctly installed when you hear a "click" sound.

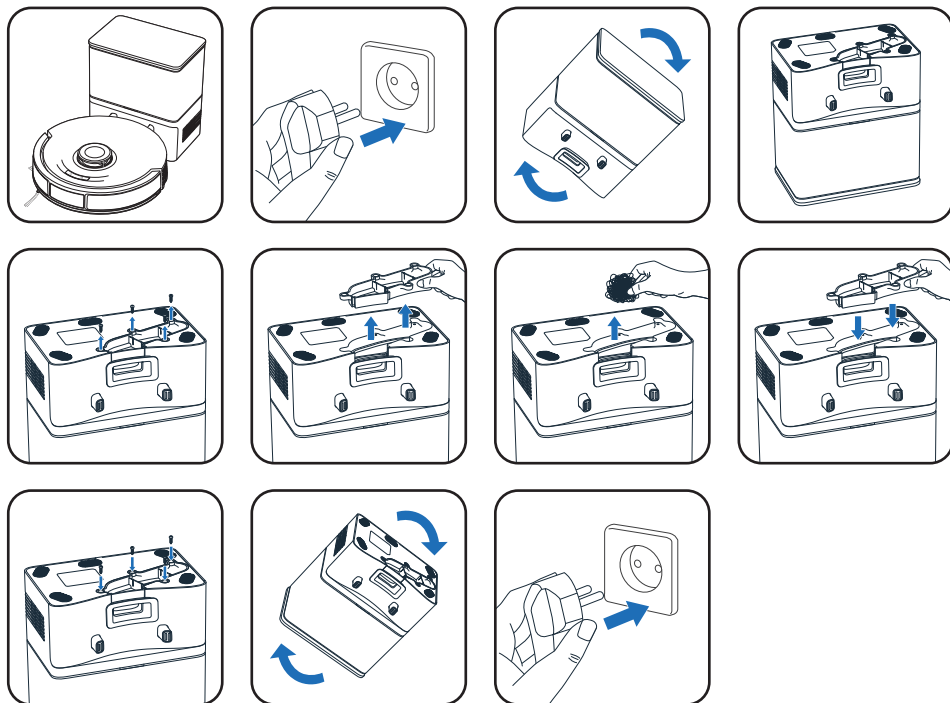

If the light indicator is blinking in red after replacing the dust bag, or if the dust collection stops after a short period of time, a foreign item may block the dust channel of the station

- Unplug the station before any manipulation.
- Do not use blunt object.
- Reverse the station upside down.
- With a screwdriver, remove the 5 screws that hold the cover of the dust channel.
- Remove the cover of the dust channel. Check whether there are foreign matters blocking the dust channel. If the dust channel is blocked, remove the foreign matters with your fingers or with a bottle brush.
- After cleaning the dust channel, please put the cover back and 5 screws back.
- Reverse the station and replug the "power" plug.
- Place the robot in front of the station and press the "Home" button on the robot. The robot will automatically return to the station and start a dust collection for few seconds.
- The light indicator of the station is white for few seconds before the light is off.

8. Component replacement frequency

EN

The replacement frequency is for reference only, if a component or accessory is damaged, it should be replaced promptly to ensure efficient cleaning. Components and accessories can be bought on: www.rowenta.com

Component	Cleaning frequency	Replacement frequency
Dust box	When needed	Not applicable
Mops	After each use	After 100 washes
Filter	Once a week	Every 6 months
Main brush	Once a week	If required
Side brush	Once a week	Every 6 months
Sensors	Once a week	Not applicable
Wheels	Once a month	Not applicable
Dust bag	Not applicable	Every 2 months (depending on actual use) Replace the dust bag

9. Do's and don'ts

- The robot has anti-drop sensors to detect stairs. The robot will change direction when detecting them. For optimum anti-drop sensors efficiency, remove any item (ex: shoe) from the stairs. When using the robot in a raised area, place a physical barrier at the edge of a drop to prevent accidental falls.
- Do not shake the robot.
- Do not try to remove the mops during cleaning.
- Do not put water or any wet cloth on the robot.
- Do not charge the robot when the ground is flooded.
- Do not submerge the robot in water.
- Do not use the robot on wet surfaces or surfaces with standing water.
- Do not use the product if the cord or charger is damaged.
- Do not leave children unattended, do not allow children to play with the robot.
- Do not use the robot outside home.
- Do not use the robot in a overheated environment.
- Do not use the robot when the home temperature is below 0°C (32°F) and above 40°C (104°F).
- Do not spread cleaning agents on the floor before using the robot.
- Do not use cleaning agents, aerosol cleaners or cleaning spray to clean the robot, the filter, the station or the dust bag.
- Do not throw the robot in the fire.
- Do not use the robot to clean broken glass.
- Do not walk or climb on the robot, do not move the robot with the foot.
- Do not allow children or pets to ride on the robot.
- Do not put any item on the robot.
- Do not use the robot without the filter, it would damage the robot.
- Before disposing of the device, remove the battery and dispose of it in accordance with local laws and local arrangements. If you have any questions, please contact your product dealer who can tell you what to do.



10. Unpair the robot and delete personal data

To disable Wi-Fi module on robot, simultaneously press the "Home" and "On-Off" buttons during 5 seconds, until you hear a beep sound. The robot will automatically removes its connection to the phone. The 2 buttons will then slowly flash for a few minutes. The robot will automatically removes its connection to the phone and router. Once it is done, you can't go back. To pair again, you will need to do the pairing process again. To delete personal data stored in the robot, please reset the robot. Press and hold the «HOME» button for 15 seconds, until you hear a beep sound.

Fault	Solutions
Cannot ON-OFF the robot	• Make sure the robot is connected to power supply. • Make sure the battery is fully charged. • Make sure the robot is ON. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Check whether the dust box is properly installed.
The robot suddenly stops working	• Check whether the robot is stuck or blocked by obstacles. • Check whether the battery is too low. Please charge it. • If the problem persists, please switch OFF the robot by pressing and holding the ON-OFF button for 5 seconds. Wait for 30 seconds, and switch ON by pressing the ON-OFF button for 5 seconds to restart it. • The appliance may be overheating: - Stop the appliance and leave cool for at least 1 hour. - If it overheats on repeated occasions, contact the Approved Services Center.
Cannot charge the robot	• Make sure the station is properly connected to the power. • Make sure the robot is ON. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Check whether the indicator on the robot is flashing during charging. • Wipe dust off charging contacts with dry cloth. • Make sure the robot and the station are connected through the charging contacts.
The robot cannot return to the station	• Clear the station of objects within 0.5m on the left and right sides and within 1.5m ahead. • Make sure that the robot starts cleaning from the station without abnormal movement. • When the robot is near the station, it can return faster. But if the station is located far away, the robot will need more time to return. Please wait during its return. • Clean the charging contacts with dry cloth.
The cleaning schedule is not executed	• Make sure the robot has been powered on. Press and hold the ON-OFF button for 5 seconds until the robot lights are on. • Make sure the cleaning schedule has been set correctly in the application at the desired time, and the cleaning schedule is saved. • Check whether the battery level is too low to start cleaning. • The robot will not start any scheduled cleaning when a task is being performed. • Check whether the dust box is properly installed.

Fault	Solutions
The suction is whistling or running is very loud during cleaning	• Check the suction inlet for any obstruction. • Empty the dust bin. • Clean the filter. • Check whether the filter is wet due to water or other liquids on the floor. Let the filter dry naturally thoroughly before use. • Check whether the dust box is properly installed. • Check whether the main brush or side brush is blocked by any foreign item, remove the main brush or side brush and clean it.
The main brush does not rotate	• Check whether the main brush is blocked by any foreign item, remove the main brush and clean it. • Check whether the central brush and the brush cover are correctly installed.
The side brush drops out of place during cleaning	• The side brush is not properly installed, the side brush is properly installed when you hear a click sound.
The mops cannot rotate	• The mops may be blocked by a foreign object, please remove it. • The mops are not correctly installed, the mops are correctly installed when you hear a click sound.
Abnormal action or sweep route of the robot	• Carefully clean the sensors with dry cloth. • Switch OFF the robot by pressing and holding the ON-OFF button for 5 seconds, wait for 30 seconds and switch on by pressing and holding the ON-OFF button for 5 seconds to restart the robot.

Fault	Solutions
The robot cannot connect to your Wi-Fi network	• If you still encounter an error after several unsuccessful attempts : • Make sure the outlet the robot's base is plugged into is powered. • Make sure the robot is close enough to your Wi-Fi router. • Ensure that your Wi-Fi router supports 2.4GHz and 802.11 b/g/n bands as this equipment does not support 5GHz bands. • Check if the automatic reconnection to your domestic Wi-Fi network is correct. • Activate the mobile data of your smartphone. • Don't use a VPN (Virtual Private Network). • Try the process again by selecting the correct Wi-Fi network and entering the correct password. • Keep your phone close to the robot and the station until the end of the pairing process. • After several attempts, switch off and switch on the product. • Reset the robot by pressing and holding the « HOME ▢ » button for 15 seconds. • Press and hold for 5 seconds the « HOME » and « ON-OFF » button until the two buttons' lights are blinking and retry the process. • Restart your smartphone. • In case a warning window appears for internet connection, please maintain the connection with the robot. • Make sure the station light indicator is white when it's connected to power and when the robot is not on the station.
The map is lost	• The map may be lost if the robot has been manually moved to another location during cleaning or if the home environment has been changed (moved furniture). Please restart mapping by launching in the app a new exploration or a new cleaning session from the station.
The robot returns to the station before it has finished cleaning	• The battery level may be too low to finish cleaning, the robot will return to the station to charge. When its battery is full, the robot will resume cleaning where it has left to finish cleaning. • The robot may be unable to reach certain areas blocked by furniture or barriers, tidy up these area to make them accessible. • Verify the no go zones and no mop zones set in the application. Add, modify or delete zones according to your needs.
The robot gets stuck	• The robot may be tangled with something, manually remove the blocked item and restart the cleaning session by pressing the ON-OFF button. • The robot may be stuck under furniture with an entrance of similar height, please set a physical barrier or a no go zone in the app. • Rotate and press the wheels to check whether there is any foreign object wrapped or stuck, remove it.

Uživatelská příručka


1. Co je v krabici?	p. 21
2. Přehled produktu	p. 21
3. Před použitím	p. 22
4. Instalace robota	p. 22
5. Připojení robota k bezplatné aplikaci	p. 24
6. Použití robota bez aplikace	p. 25
7. Údržba robota a jeho stanice	p. 26
8. Frekvence výměny součástí	p. 33
9. Co dělat a co nedělat	p. 33
10. Zrušení párování robota a odstranění osobních údajů	p. 33
11. Běžné problémy a řešení	p. 34

Před prvním použitím si pečlivě přečtěte příručku „Bezpečnostní pokyny a návod k použití“.

Další informace:
www.rowenta.cz


1. Co je v krabici?

CS

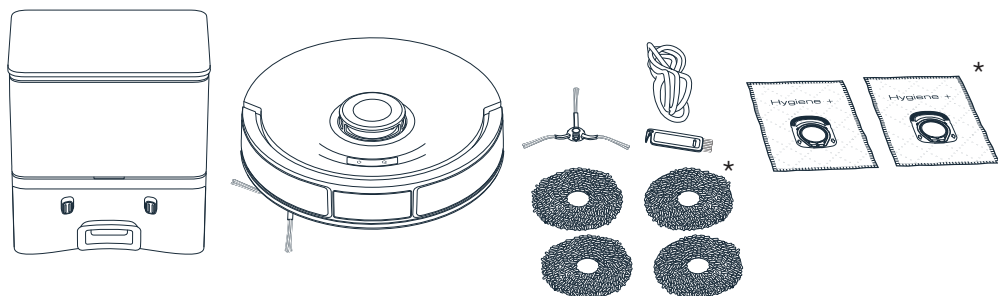

*v závislosti na modelu

2. Přehled produktu

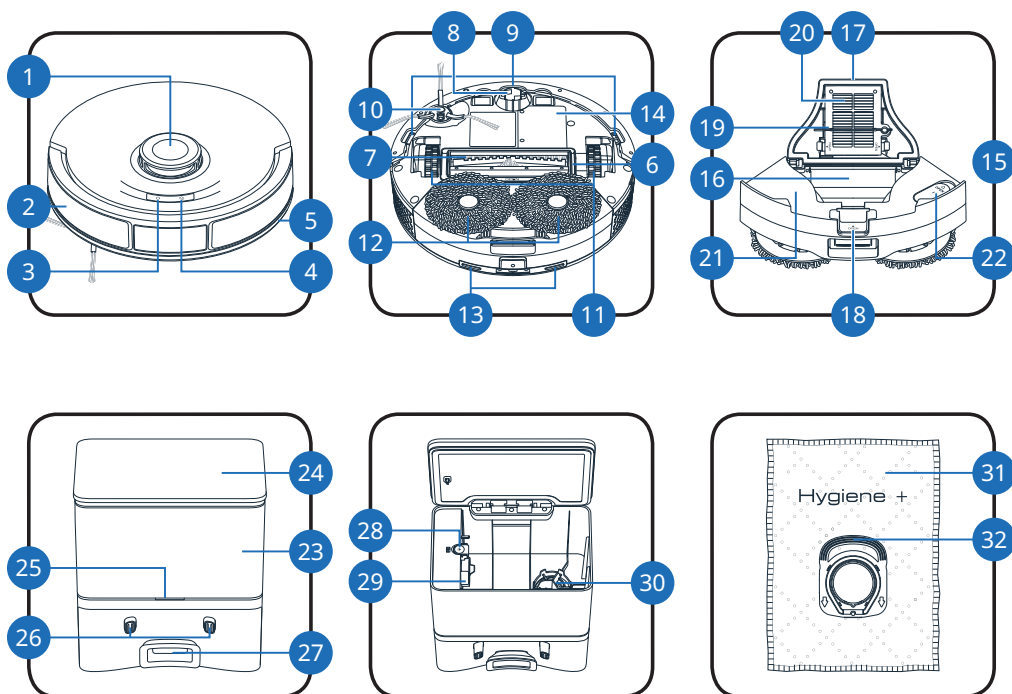

1. LiDAR
2. Nárazník
3. Tlačítko napájení/start/pauza
 - Stisknutím a podržením zapnete či vypnete
 - Stisknutím zahájíte nebo pozastavíte úklid
4. Tlačítko Home
 - Po stisknutí se vrátí do stanice
5. Antikolizní pás
6. Kryt hlavního kartáče
7. Hlavní kartáč
8. Přední kolo
9. Snímač proti pádu
10. Boční kartáč
11. Kolečko
12. Rotující mopy s magnetickými držáky
13. Nabíjecí kontakty
14. Baterie
15. Zásobník na prach a nádržka na vodu 2 v 1
16. Zásobník na prach
17. Víko nádoby na prach
18. Otvor zásobníku na prach
19. Kryt filtru
20. Filtr
21. Nádržka na vodu
22. Zátka
23. Stanice automatického sběru prachu
24. Víko stanice
25. Kontrolka stavu
26. Nabíjecí kontakty
27. Sací vstup
28. Tlačítko na vysunutí
29. Drážka na vložení rukojeti prachového sáčku
30. Komora prachového sáčku
31. Prachový sáček Hygiene+
32. Rukojeť prachového sáčku Hygiene+

3. Před použitím







Postupujte podle následujících tipů, které vám pomohou zefektivnit proces úklidu. Uklidte kabely, šňůry a malé a volné předměty. Odstraňte z podlahy všechny nestabilní, křehké, vzácné nebo nebezpečné předměty. Přesvědčte se, že jsou ve všech místnostech otevřené dveře. Váš robot může mít potíže na tvrdých podlahách a na kobercích: s třásněmi, příliš silných, s dlouhým vlasem, příliš lehkými (např. kobereček do koupelny). Aby snímače proti pádu fungovaly optimálně, odstraňte ze schodišť všechny předměty (např. boty). Při používání robota ve vyvýšené oblasti umístěte na okraj fyzickou překážku, abyste zabránili náhodným pádům. Nestůjte v úzkých prostorech, například chodbách, abyste robota neblokovali.

4. Instalace robota




Po nasnímání QR kódu výše se ve videu dozvíte, jak robota nainstalovat a připojit. Podrobnější informace získáte po přečtení následujících pokynů.

<https://www.youtube.com/playlist?list=PL9XhN3pCkFObbG3XKk4aWhFdJl9IX3jnA>

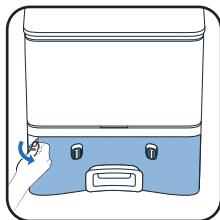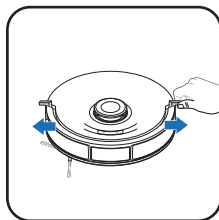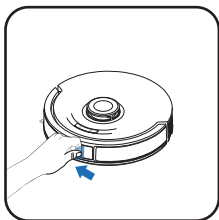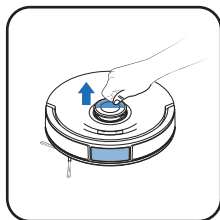


Odstraňte ochranné prvky

Odstraňte všechny ochrany (ochranné fólie a plastové pěnové ochrany) z robota a ze stanice

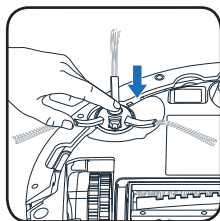


Namontujte boční kartáč a mop

Otočte robota a nainstalujte boční kartáč tak, že ho jemně připnete. Boční kartáč bude správně nainstalovaný poté, co uslyšíte cvaknutí.




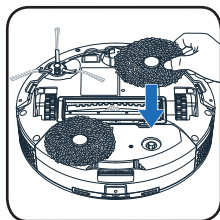


Nasaďte oba mopy do dvou magnetických držáků. Aby byly mopy správně nainstalované, musí se ozvat „cvaknutí“.

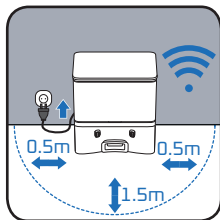

Dokovací stanici umístěte na tvrdou a plochou podlahu. Vyhýbejte se parketám, dřevěným podlahám a kobercům. Stanici umístěte do volného prostoru u zdi tak, aby před stanicí nebyly žádné schody. Ponechte alespoň 0,5 m volného prostoru na každé straně a 1,5 m vpředu. Přesvědčte se, že je vybrané místo poblíž připojení Wi-Fi nebo má dobrou sílu signálu Wi-Fi. Nenechávejte v oblasti kolem stanice žádné předměty, odrazivé povrchy, zrcadla, stoly či židle. Na stanici by nemělo svítit přímé sluneční světlo.

Zapojte napájecí kabel do zásuvky. Ujistěte se, že je napájecí kabel uklizený za stanicí a oproti zdi.

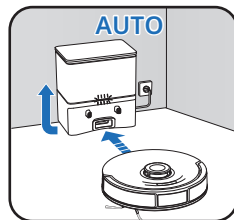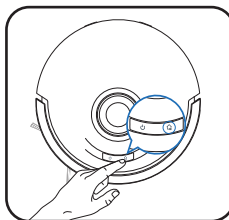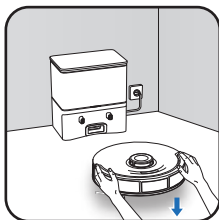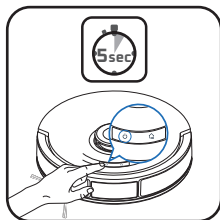

Zapněte robota

Robota zapnete tak, že stisknete a podržíte tlačítko ON-OFF po dobu několika sekund, dokud se na robotovi nerozsvítí kontrolky. Uslyšíte zvuk pípnutí.

Umístěte robota před stanicí

Umístěte robota 20–50 cm před stanicí. Stiskněte tlačítko Domů, robot se automaticky připojí ke stanici. (Nepokládejte robota ručně ke stanici). Počkejte 4 hodiny, než bude robot plně nabitý. Kontrolka stanice je vypnutá, když se robot nabíjí.

Informace

Upozorňujeme, že se robot automaticky zapne, když ho umístíte do stanice. Během nabíjení nelze robota vypnout. Upozorňujeme, že při prvním úklidu v novém prostředí vytvoří robot mapu domácnosti.

Během prvního úklidu robota nezvedejte, přerušili byste tím vytváření mapy domácnosti. Před zahájením úklidu se ujistěte, že jsou mopy správně nasazený. Během čištění nevyjímejte mopy. Pokud máte koberce s třásněmi, umístěte kolem koberců zábrany, aby se robot nemohl v třásních zachytit. Zabránilo by to ve vytvoření mapy. Máte-li u domu venkovní prostor (např. zahradu, balkon, terasu atd.), který odděluje práh nižší než 2 cm nebo který práh vůbec nemá (např. francouzská okna, dveře na terasu, arkýřová okna atd.), uzavřete tento prostor, aby se robot nedostal ven.

5. Připojení robota k bezplatné aplikaci




V chytrém telefonu otevřete obchod Google Play Store (Android) nebo App Store (iOS). Vyhledejte aplikaci „Rowenta Robots“ nebo naskenujte QR kód a nainstalujte aplikaci. Otevřete aplikaci a podle pokynů na obrazovce připojte robota.

https://rowentarobots.smart.link/bp5n10p55?appliance_id=APPLIANCE_1247




Podrobné pokyny k párování krok za krokem jsou také uvedené v dokumentu PDF, ke kterému se dostanete nasnímáním QR kódu níže.


https://dam.groupeseb.com/m/3fd9efa007195343/original/Rowenta_RR9695WH_IFU.pdf

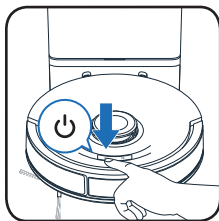**Spuštění úklidu**


Stisknutím tlačítka napájení spustíte automatický úklid. Robot nasnímá oblast. Potom automaticky rozdělí místnost na menší zóny. Robot nejprve uklidí okraje zóny a poté klikatým pohybem uklidí vnitřek zóny. Robot uklidí všechny přístupné oblasti, jednu zónu po druhé. Jestliže se robot po stisknutí tlačítka napájení nespustí, je možná baterie příliš vybitá a bude potřeba robota nabít.

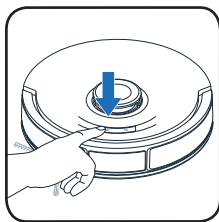**Pozastavení a obnovení úklidu**

Stisknutím tlačítka napájení můžete úklid kdykoliv zastavit a dalším stisknutím v něm zase pokračovat. Pokud je robot v pohotovostním režimu, jedním stisknutím tlačítka napájení ho probudíte a dalším stisknutím zahájíte úklid.

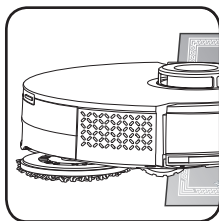**Chování robota na koberci**

Pokud má robot během čištění připojené rotující mopy, použije k detekci koberců snímač, který zabrání namočení koberců. Upozorňujeme, že v aplikaci můžete také nastavit zónu bez vytírání, abyste se vyhnuli kobercům.

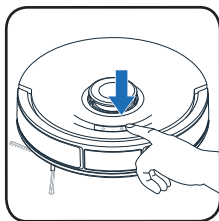**Ukončení úklidu**

Jestliže robot nezačíná úklid z dokovací stanice, potom se na konci úklidu automaticky vrátí do stejného místa, nebo jestliže se baterie příliš vybijí. Jestliže se baterie během úklidu příliš vybijí, robot se automaticky vrátí do stanice, aby se nabíj. Po nabití bude robot pokračovat v úklidu tam, kde předtím skončil. Jestliže robot nezačíná úklid z dokovací stanice, potom se na konci úklidu automaticky vrátí do stejného místa, nebo jestliže se baterie příliš vybijí. Po skončení úklidu se robot automaticky vrátí do stanice. Pokud však chcete úklid ukončit ručně, stisknutím tlačítka „Home“ můžete robota kdykoli zastavit a opětovným stisknutím ho poslat zpět do stanice. Jestliže se robotovi nepodaří stanici najít, umístíte ho ručně před stanicí a stisknete tlačítko „Home“. Po zadokování robota se na několik sekund aktivuje sběr prachu. Minimální časový interval mezi dvěma sběry prachu je 10 minut.

Akce stanice


Když se robot po ukončení úklidu vrátí do dokovací stanice, stanice automaticky provede následující:

- dobít baterie robota,
- vyprázdnění nádobky na prach.




Po nasnímání QR kódu se ve videu dozvíte, jak robota udržovat, aby si zachoval svůj výkon.

Před jakoukoli manipulací prosím odpojte stanici ze zásuvky.

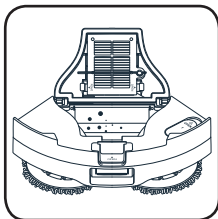

V případě potřeby - Vyčistěte nádobku na prach


Na konci úklidu se robot vrátí do stanice a automaticky vyprázdní nádobku na prach, nějaké nečistoty v ní ale mohou zůstat.

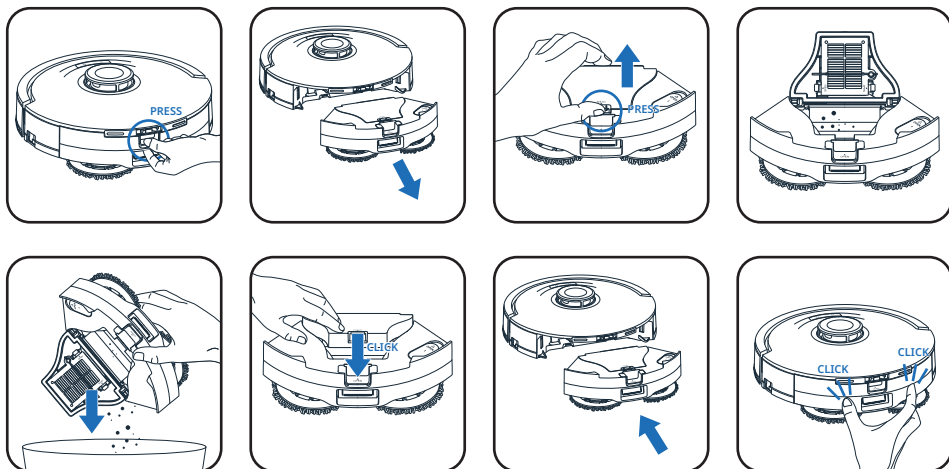

- Z robota sejměte zásobník na prach a nádržku na vodu 2 v 1. Stiskněte a podržte tlačítka pro uvolnění a zatáhněte směrem ven.
- Stisknutím a podržením tlačítka pro otevření zásobníku na prach otevřete zásobník na prach.

- Nečistoty vysypte do odpadkového koše.
- Nádobku na prach zavřete.
- Umístěte ji zpátky do robota.


Po každém použití vymyjte mopy

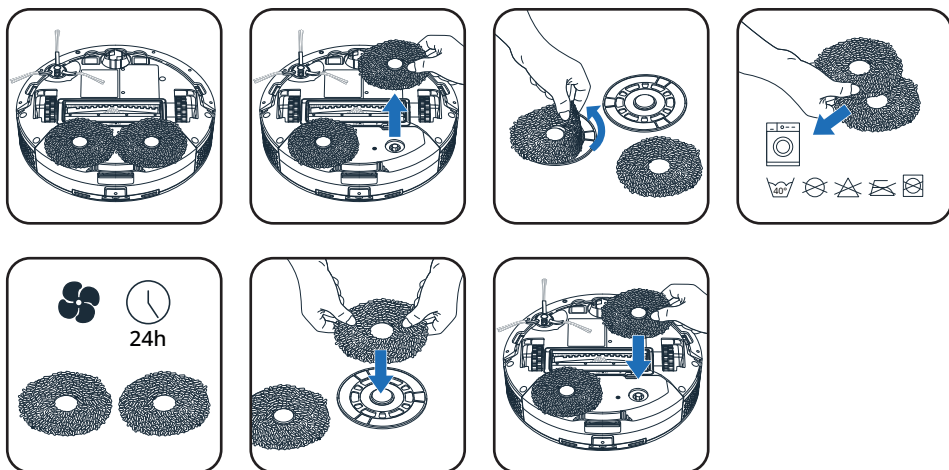

- Otočte robota vzhůru nohama.
- Zatáhněte za mopy směrem nahoru a vyjměte je z magnetických držáků.
- Sejměte látku mopy.
- Operte ji pod vodou nebo v pračce při teplotě 40 °C.

- Nechte je 24 hodin schnout.
- Připevněte látku k držáku mopy.
- Nasadte oba mopy do dvou magnetických držáků. Před zahájením úklidu se ujistěte, že jsou mopy správně nasazeny.


Jednou týdně - Vyčistěte filtr

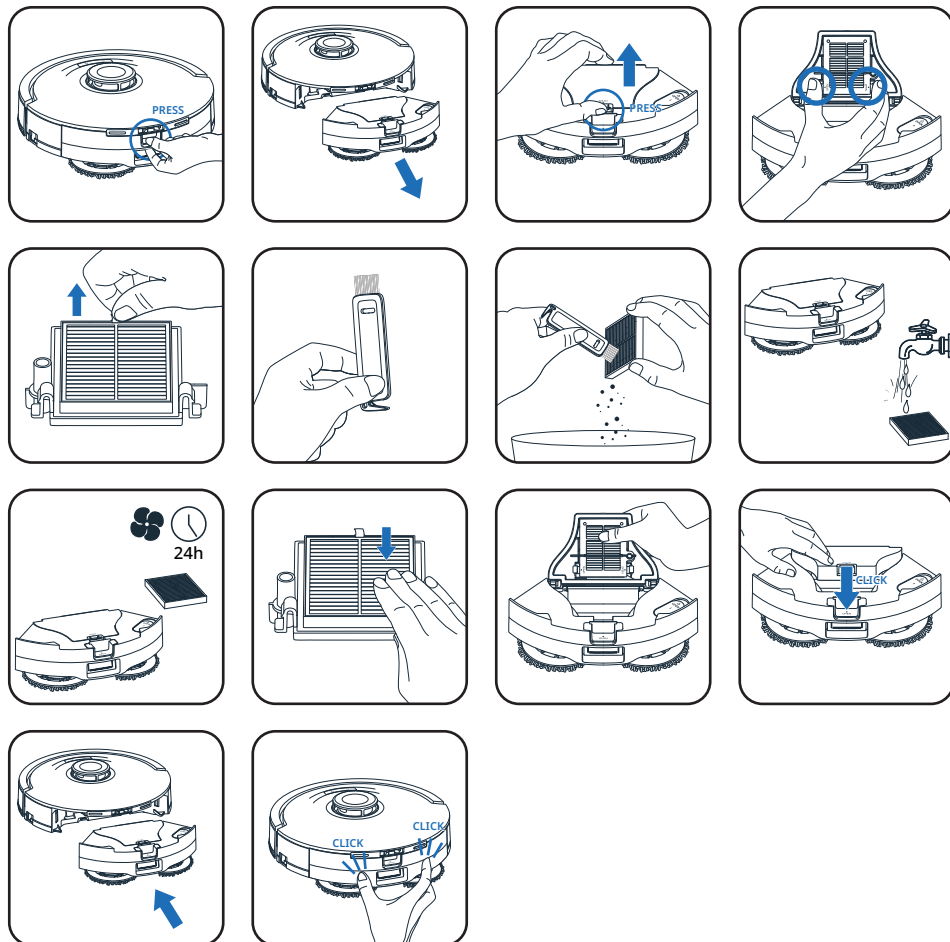

- Z robota sejměte zásobník na prach a nádržku na vodu 2 v 1. Stiskněte a podržte tlačítka pro uvolnění a zatahněte směrem ven.
- Stisknutím a podržením tlačítka pro otevření zásobníku na prach otevřete zásobník na prach.
- Uchopte rám filtru a zatažením jej odepněte od nádoby na prach

- Jemně poklepejte filtrem nad odpadkovým košem, abyste odstranili prach. K odstranění prachu můžete také použít nástroj na čištění, který je součástí balení. Filtr můžete také umýt pod vodou.
- Nechte ho 24 hodin schnout.
- Jakmile je filtr zcela suchý, vraťte jej zpět na původní místo. Nikdy nepoužívejte robota bez filtru, mohlo by dojít k jeho poškození.
- Nádobku na prach zavřete.
- Umístěte ji zpátky do robota.







Jednou týdně - Vyčistěte hlavní kartáč

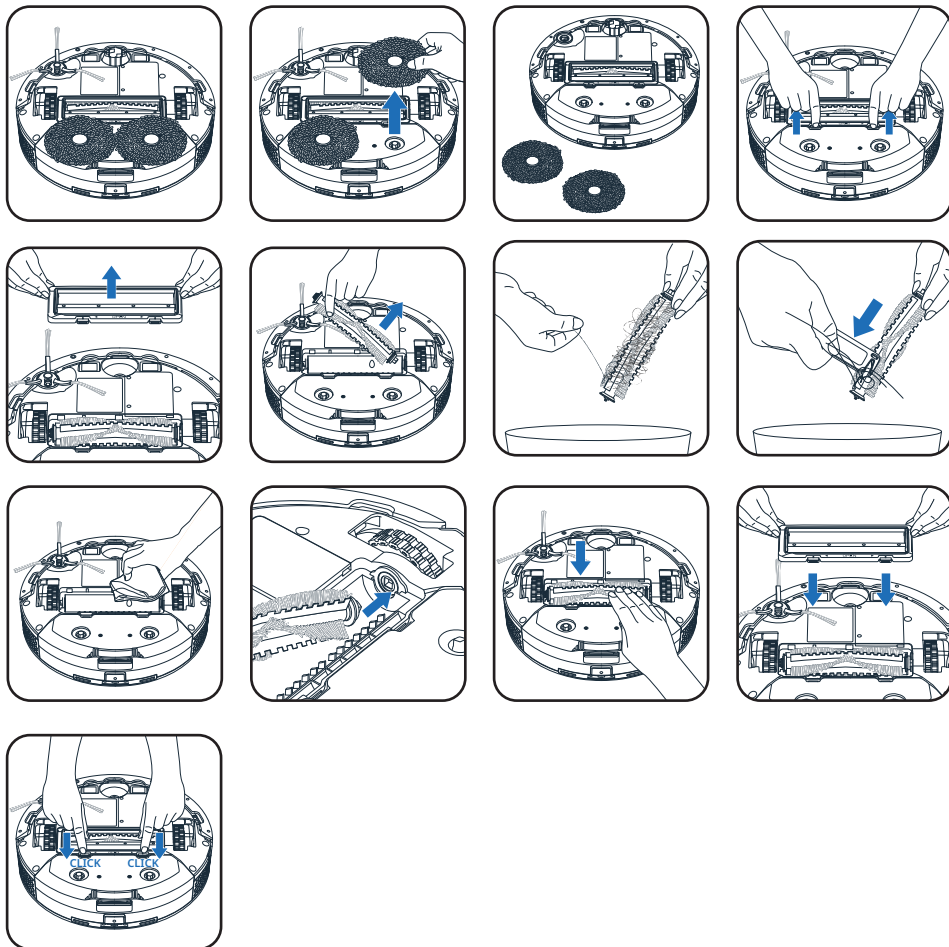

- Otočte robota vzhůru nohama.
- Zatáhněte za mopy směrem nahoru a vyjměte je z magnetických držáků.
- Stiskněte západky na krytu kartáče.
- Zatažením ho sejměte.
- Vyjměte kartáč.
- Zbavte se zamotaných vlasů. K odstranění zamotaných vlasů můžete použít nástroj na čištění, který je součástí balení.





- Příhrádku na hlavní kartáč i sací kanál vyčistěte suchým hadříkem.
- Kartáč znovu vložte do robota.
- Znovu nainstalujte kryt kartáče.
- Aby byl kryt správně nainstalovaný, musí se ozvat „cvaknutí“.

Jednou týdně - Vyčistěte boční kartáč

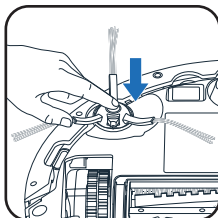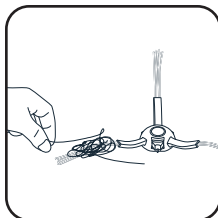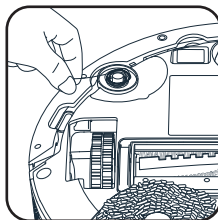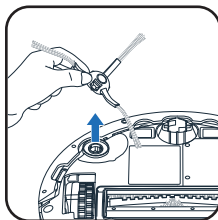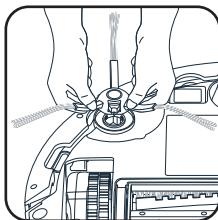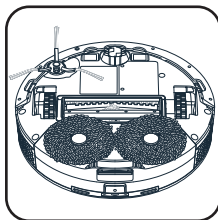



- Otočte robota vzhůru nohama.
- Uchopte boční kartáč za plastové části oběma rukama a vytáhněte ho, aby se odepnul. Boční kartáč netahejte za štětiny.
- Vyndejte z kartáče namotané vlasy.
- Nainstalujte boční kartáč zpátky tak, že ho jemně připnete. Boční kartáč bude správně nainstalovaný poté, co uslyšíte cvaknutí.

Jednou týdně - Vyčistěte snímače

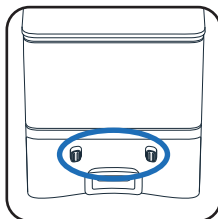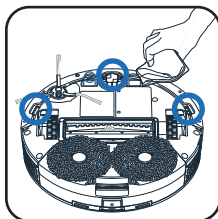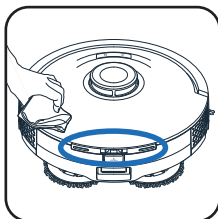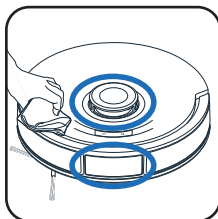









- Čistým, měkkým a suchým hadříkem otřete snímače robota (přední, horní, zadní, na straně i na spodní část robota), tlačítka na robotu a nabíjecí kontakty robota i stanice.

Jednou měsíčně - Vyčistěte kolečka

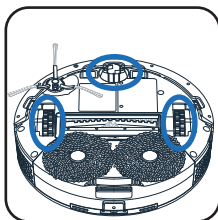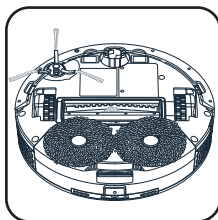


- Kolečka mohou být obalená vlasy nebo nečistotami. Otočte robota vzhůru nohama. Odstraňte namotané vlasy a kolečka tak vyčistěte. Vytáhněte přední kolečko a odstraňte veškeré nečistoty, než ho vrátíte zpět.

Každé 2–3 měsíce (závisí na skutečném používání) Vyměňte prachový sáček

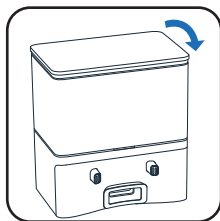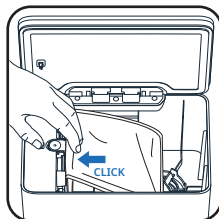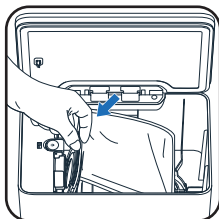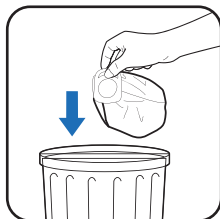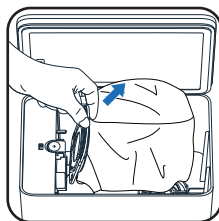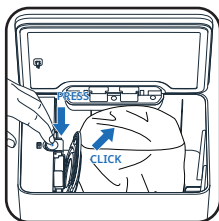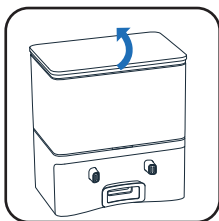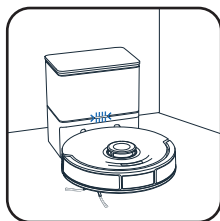

- Až bude prachový sáček plný, kontrolka na stanici bude červená.
- Otevřete víko stanice..
- Stiskněte tlačítko na vysunutí..
- Uchopte držadlo prachového sáčku. Zatáhněte, abyste vyjmuli použitý sáček.
- Vyhodte ho do odpadkového koše.

- Vezměte si nový sáček.
- Nasuňte rukojeť prachového sáčku do vkládací drážky, tím se prachový sáček nainstaluje do stanice.
- Připněte ho ke stanici.
- Aby byl prachový sáček správně nainstalovaný, musí se ozvat „cvaknutí“.

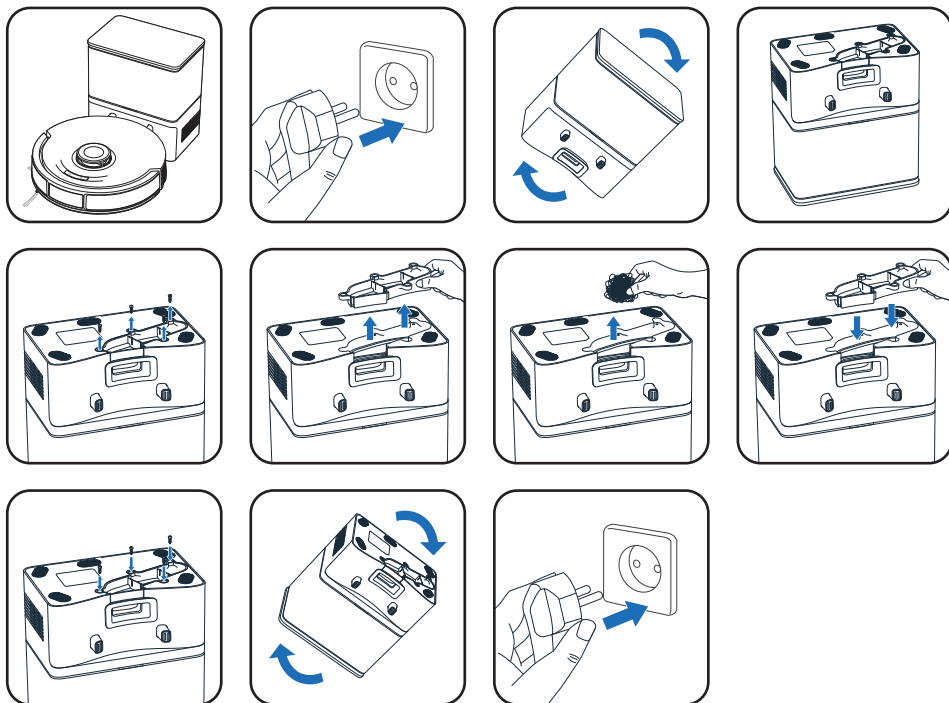

Jestliže kontrolka na stanici po výměně prachového sáčku červeně bliká nebo jestliže se sběr prachu po krátké době zastaví, je kanálek pro sběr prachu ve stanici možná ucpaný cizím předmětem.

- Před manipulací vypojte stanici ze zásuvky..
- Nepoužívejte tupé předměty..
- Otočte stanici vzhůru nohama.
- Pomocí šroubováku vyšroubujte 5 šroubků, které drží kryt kanálku pro sběr prachu na místě.
- Sejměte kryt kanálku pro sběr prachu. Zkontrolujte, jestli není kanálek ucpaný cizími předměty. Jestliže je kanálek ucpaný, prstem nebo kartáčem na láhve cizí předměty odstraňte.
- Po vyčištění kanálku pro sběr prachu vraťte kryt i 5 šroubky na místo.
- Otočte stanici zase zpět a zapojte napájecí zásuvku.
- Umístěte robota před stanici a stiskněte na robotovi tlačítko „Home“. Robot se automaticky vrátí do stanice a během pár sekund zahájí sběr prachu.
- Kontrolka na stanici se na několik sekund rozsvítí bíle a potom zhasne.

8. Frekvence výměny součástí

CS

Frekvence výměny slouží pouze jako reference, pokud se některá součástka nebo příslušenství poškodí, je třeba je neprodleně vyměnit, aby mohl robot nadále účinně uklízet. Součásti a příslušenství můžete zakoupit na webu: www.rowenta.com

Součást	Frekvence čištění	Frekvence výměny
Nádobka na prach	V případě potřeby	Neplatí
Mopy	Po každém použití	Po 100 vypráních
Filtr	Jednou týdně	Každých 6 měsíců
Hlavní kartáč	Jednou týdně	V případě potřeby
Boční kartáč	Jednou týdně	Každých 6 měsíců
Snímače	Jednou týdně	Neplatí
Kolečka	Jednou měsíčně	Neplatí
Prachový sáček	Neplatí	Každé 2–3 měsíce (závisí na skutečném používání) Vyměňte prachový sáček

9. Co dělat a co nedělat

- Robot má snímače proti pádu, pomocí kterých dokáže rozpoznat schody. Když je zjistí, změní robot směr. Aby snímače proti pádu fungovaly optimálně, odstraňte ze schodišť všechny předměty (např. boty). Při používání robota ve vyvýšené oblasti umístěte na okraj fyzickou překážku, abyste zabránili náhodným pádům.
- Robotem netřeste.
- Nepokoušejte se odstranit mopy během úklidu.
- Nepokládejte na robota vodu ani žádnou mokrou látku.
- Nenabíjete robota, když na podlaze stojí voda.
- Neponořujte robota do vody.
- Nepoužívejte robota na vlhkých površích nebo na površích, kde stojí voda.
- Pokud jsou kabel nebo nabíječka poškozené, produkt nepoužívejte.
- Nenechávejte děti bez dozoru a nedovolte jim si s robotem hrát.
- Nepoužívejte robota mimo domácnost.
- Nepoužívejte robota v přehřátém prostředí.
- Nepoužívejte robota, když je teplota v domácnosti nižší než 0 °C (32 °F) nebo vyšší než 40 °C (104 °F).
- Před použitím robota neaplikujte na podlahu čisticí prostředky.
- K čištění robota, filtru, stanice ani prachového sáčku nepoužívejte čisticí prostředky, aerosolové čističe nebo čisticí spreje.
- Neházejte robota do ohně.
- Nepoužívejte robota k úklidu rozbitého skla.
- Po robotovi nešlapte nebo nelezte a nehýbejte robotem nohou.
- Nedovolte dětem ani domácím zvířatům na robotovi jezdit.
- Nepokládejte na robota žádné předměty.
- Nepoužívejte robota bez filtru, mohlo by dojít k jeho poškození.
- Před likvidací spotřebiče vyjměte baterii a zlikvidujte ji v souladu s právními předpisy a místními nařízeními. Máte-li jakékoli dotazy, obraťte se na prodejce výrobku, který vás informuje, jak dále postupovat.



10. Zrušení párování robota a odstranění osobních údajů

Pokud chcete robota vypnout modul Wi-Fi, stiskněte najednou tlačítko „Home“ a tlačítko napájení po dobu 5 sekund, dokud neuslyšíte zvukový signál. Robot se automaticky odpojí od telefonu. Tato 2 tlačítka pak budou několik minut pomalu blikat. Robot se automaticky odpojí od telefonu i routeru. Jakmile tento krok provedete, nebude možné ho zrušit. Pokud budete chtít robota opět spárovat, budete muset znovu projít celým procesem párování. Chcete-li odstranit osobní údaje uložené v robotovi, budete ho muset resetovat. Stiskněte a podržte tlačítko „HOME“ po dobu 15 sekund, dokud neuslyšíte zvukový signál.

Závada	Řešení
Robotický vysavač nelze spustit	• Přesvědčte se, že je robotický vysavač připojený ke zdroji napájení. • Přesvědčte se, že je baterie plně nabitá. • Přesvědčte se, že je robot zapnutý. Stiskněte a podržet na 5 sekund tlačítko START, dokud se na robotovi nerozsvítí kontrolky. • Zkontrolujte, zda je nádobka na prach správně nainstalována.
Robot náhle přestane fungovat	• Zkontrolujte, jestli robot někde neuvízl nebo jej neblokují nějaké překážky. • Zkontrolujte, jestli není baterie příliš vybitá. Nabijte stroj. • Jestliže problém přetrvává, stisknutím a podržením tlačítka ON-OFF na 5 sekund robota vypněte. Počkejte 30 sekund a stisknutím tlačítka ON-OFF na 5 sekund ho zapněte a znovu spusťte. • Spotřebič se možná přehřívá: - Zastavte spotřebič a nechte ho alespoň 1 hodinu vychladnout. - Pokud se přehřívá opakovaně, obraťte se na autorizované servisní středisko.
Robot nelze nabít	• Přesvědčte se, že je stanice řádně připojená k napájení. • Přesvědčte se, že je robot zapnutý. Stiskněte a podržet na 5 sekund tlačítko START, dokud se na robotovi nerozsvítí kontrolky. • Zkontrolujte, zda během nabíjení bliká na robotovi kontrolka. • Suchým hadříkem otřete prach z nabíjecích kontaktů. • Přesvědčte, že jsou robot a stanice připojené prostřednictvím nabíjecích kontaktů.
Robot se nemůže vrátit do stanice	• Odstraňte předměty ve vzdálenosti 0,5 m vlevo a vpravo od nabíjecí stanice a 1,5 m před ní. • Přesvědčte se, že robot začne uklízet ze stanice bez neobvyklého pohybu. • Pokud se robot nachází v blízkosti stanice, může se vrátit rychleji. Jestliže je však nabíjecí stanice daleko, bude robot k návratu potřebovat více času. Počkejte, než se vrátí. • Pomocí suchého hadříku vyčistěte nabíjecí kontakty.
Neprovede se plán úklidu	• Přesvědčte se, že je robot zapnutý. Stiskněte a podržet na 5 sekund tlačítko START, dokud se na robotovi nerozsvítí kontrolky. • Přesvědčte se, že je plán úklidu v aplikaci správně nastavený na požadovaný čas a že jste plán úklidu uložili. • Zkontrolujte, jestli není baterie příliš vybitá, takže není možné zahájit úklid. • Robot nezahájí plánované vysávání, jestliže právě provádí nějaký úkol. • Zkontrolujte, zda je nádobka na prach správně nainstalována.

Závada	Řešení
Sání při úklidu píská nebo je velmi hlasité	• Zkontrolujte, jestli není ucpaný vstup sání. • Vyprázdněte zásobník na prach. • Vyčistěte filtr. • Zkontrolujte, jestli nejsou filtry vlhké kvůli vodě nebo jiným kapalinám na podlaze. Před použitím nechte filtry důkladně přirozeně vyschnout. • Zkontrolujte, zda je nádobka na prach správně nainstalována. • Zkontrolujte, jestli nejsou hlavní nebo boční kartáč zablokovány cizím předmětem; pokud ano, hlavní nebo boční kartáč sejměte a vyčistěte je.
Hlavní kartáč se neotáčí	• Zkontrolujte, jestli není hlavní kartáč zablokován cizím předmětem; pokud ano, hlavní kartáč sejměte a vyčistěte ho. • Zkontrolujte, jestli je správně nainstalovaný středový kartáč a kryt kartáče.
Boční kartáč při úklidu vypadává ze svého místa	• Boční kartáč není správně nainstalován; aby byl kartáč správně nainstalován, musí se ozvat cvaknutí.
Mopy se nemohou otáčet	• Mopy může blokovat cizí předmět, v takovém případě předmět odstraňte. • Mopy nejsou správně nainstalovány; aby byly mopy správně nainstalované, musí se ozvat cvaknutí.
Neobvyklé chování nebo trasa úklidu	• Opatrně očistěte snímače suchým hadříkem. • Stisknutím a podržením tlačítka ON-OFFna 5 sekund robota vypněte, počkejte 30 sekund a dalším stisknutím a podržením tlačítka ON-OFFna 5 sekund robota znovu spusťte.

Závada	Řešení
Robot se nemůže připojit k síti Wi-Fi	• Pokud problém přetrvává i po opakovaných pokusech, vyzkoušejte následující: • Zkontrolujte, zda je zásuvka, do které je základna robota zapojena, napájena. • Ujistěte se, že je robot dostatečně blízko vašemu směrovači Wi-Fi. • Přesvědčte se, že váš směrovač Wi-Fi podporuje pásma 2,4 GHz a 802.11 b/g/n, protože toto zařízení nepodporuje pásma 5 GHz. • Ujistěte se, že je správně nastavené automatické opětovné připojení k vaší domácí síti Wi-Fi. • Aktivujte si na svém smartphonu mobilní data. • Nepoužívejte funkci VPN (Virtual Private Network). • Zkuste to znovu: vyberte správnou síť Wi-Fi a zadejte správné heslo. • Dokud se proces párování nedokončí, ponechte svůj telefon v blízkosti robota a stanice. • Po několika neúspěšných pokusech zařízení vypněte a znovu zapněte. • Resetujte robota stisknutím a podržením tlačítka « HOME » (Domů) po dobu 15 sekund. • Na 5 sekund stiskněte a podržte tlačítka « HOME » (Domů) a « ON-OFF » (Zap.-Vyp.), dokud kontrolky na obou tlačítkách nezačnou blikat, a pak proces opakujte. • Restartujte smartphone. • V případě, že se u internetového připojení objeví okno s varováním, zachovejte připojení k robotovi. • Ujistěte se, že kontrolka stanice svítí bíle, když je připojena ke zdroji napájení a když robot není ve stanici.
Mapa se ztratila	• Jestliže byl robot během úklidu ručně přemístěn na jiné místo nebo jestliže se prostředí domácnosti změnilo (přesunoval se nábytek), může dojít ke ztrátě mapy. Mapování znovu zahájíte spuštěním nového průzkumu v aplikaci nebo nového úklidu ze stanice.
Robot se vrátí do stanice před dokončením úklidu	• Možná je baterie příliš vybitá, než aby bylo možné úklid dokončit, a robot se vrátí do stanice nabít. Až bude baterie nabitá, bude robot v úklidu pokračovat tam, kde skončil. • Robot se možná do některých oblastí zablokovaných nábytkem nebo překážkami nedostane. Uklidte je tak, aby byly oblasti přístupné. • Ověřte v aplikaci nastavené zakázané zóny a zóny bez mopování. Podle svých potřeb můžete zóny přidat, upravit nebo odstranit.
Robot uvízne	• Robot se možná v něčem zachytil. Překážející předmět ručně odstraňte a úklid znovu spusťte stisknutím tlačítka START. • Robot může uvíznout pod nábytkem, pod kterým nemá dostatečně velký prostor. V takovém případě vjezd fyzicky zahradte nebo v aplikaci nastavte zakázanou zónu. • Zkuste otáčet kolečky nebo na ně zatlačit, abyste zkontrolovaly, jestli na ně není nabalený nebo v nich zaseknutý nějaký cizí předmět. Pokud ano, odstraňte ho.

