


GO 6 gen II

User manual

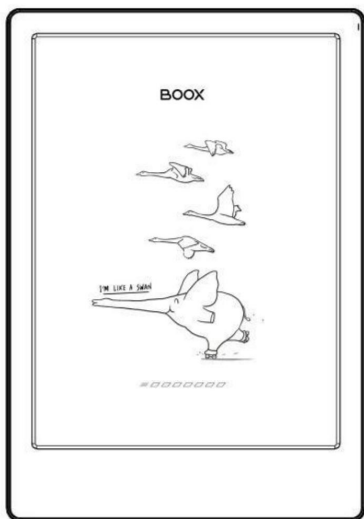

Contents

1. Copyright Statement.....	3
2. Product Details	4
3. Safety Guide.....	6
4. Quick Start.....	9
5. System functions	19
6. Library.....	21
7. NeoReader	32
8. Business	50
9. Storage.....	52
10. APPS	54
11. Settings.....	66
12. Thank you for your support	80

1. Copyright Statement


Guangzhou Onyx International Inc. reserves the right make changes to product specifications and content contained in Quick Start Guide and User Manual without prior notice.

1. All pictures of books in this manual are for reference only.

display, not pre-installed books;

2. Due to different software versions, some functions or interface contrary to the description in the manual. Subject to final product.

2. Product details

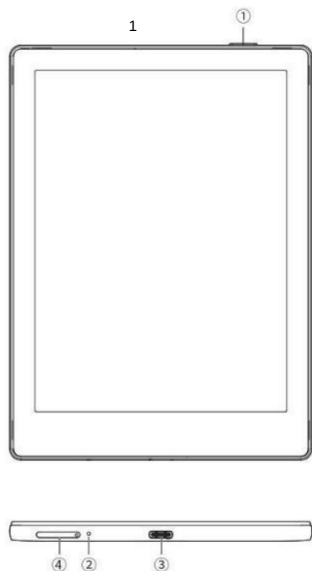

1. Power supply

2. Mic

3. Type-C port

4. MicroSD card slot

Product specifications

Operating System	Android 12
processor	2.0GHz
ROM	2GB LPDDR4X
Storage space	32 GB
Size screens	6 inches
Distinction	1072x1448
Touch	Capacitive touch
Front light	Two-tone front light
Wireless	WiFi 2.4G+5G Bluetooth 5.0
battery	1500mAh
Dimensions	148*108*6.8mm
Weight	160g
Ports	Type-C (OTG support)
Other	Ball
Operating Temperature	0°C-50°C

3. Safety guide

Please read the following safety instructions before use. If

If you encounter any technical difficulties, please contact your

BOOX dealer or call the official after-sales hotline

4008-400-014 or 4008-860-830.



Protecting the fragile screen

The E-ink screen is very fragile. Do not hit, squeeze,

Do not press the screen or drop it from a high place onto a hard surface.

surface. If the screen is broken, please stop using it and

ask our customer service or another qualified person for a replacement

Do not disassemble or replace it yourself.



Qualified accessories

Only batteries, chargers and other accessories are permitted to be used,

that meet the safety standards of this device. Details

see product specifications.

Using incompatible accessories will cause damage to the device.

your own risk.



**Keep away from strong magnets/
static electricity**

Keep away from strong magnetic and electrostatic environments,
to prevent abnormal writing on the electromagnetic
screen or damage to other electronic components.



Keep away from liquids.

This device is not waterproof. Do not expose it to damp environments and
Do not use in the rain. Keep it away from any corrosive substances.
liquids.



Do not disassemble the device.

The battery of this device cannot be replaced. Please do not disassemble it yourself,
to avoid damage to the structure or screen.



Using the environment

The ambient temperature range for using this device is 0

C-50 °C. Do not use it continuously in a high or

low temperature.

We are not responsible for damage or loss of data on the device.

caused by abnormal human activity or unexpected

circumstances, nor for other indirect losses caused thereby.

If you need to return to the factory for repair, please back up

important data yourself. We are not responsible for data loss

caused by repair or replacement of parts or system updates.

4. Quick start

4.1 Switching on

Press and hold the power button for for 2-3 seconds. When the indicator lights up, it will enter the startup interface. Wait until it goes to the home screen screen.



Note: If you cannot rotate the device

Please charge for 20 minutes first and then restart.


Initial setup

Please follow the steps to complete the initial setup, including system language, power, navigation bar settings, etc. Initial settings can be changed later in Settings.

4.2 Main interface

You can return to the main screen by double-clicking the icons in the function area.

page of a specific module.

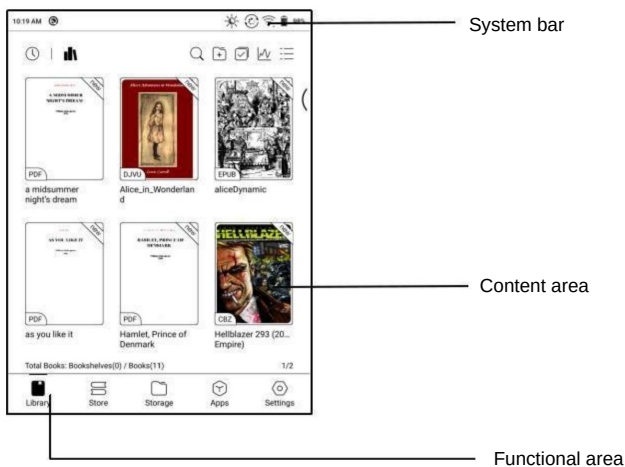

System bar

The area displays the current status of the device, including time, notifications, recovery mode, Wi-Fi, battery status, etc.



Control center

Pull it from the top right edge
down or tap to expand.


Click the "Edit" icon at the top

you will adjust the functions for the center.



Notification Center

Pull it from the top left edge
down or tap to expand.

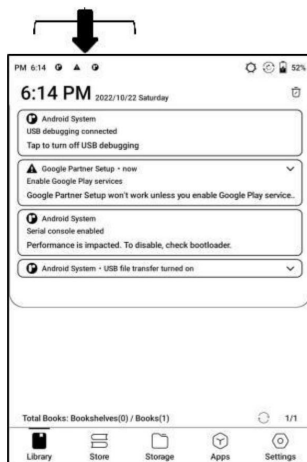

4.3 E-ink Center (application optimization)


It can be invoked from the control center

or by swiping up from the bottom. This

The function is mainly used for

optimizing the application display effect

third parties on E

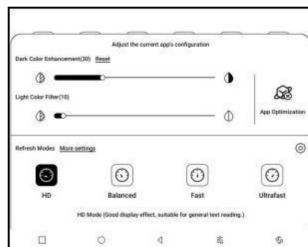

Inkjet devices. When called at the application interface,

the optimized configuration will only be applied to this

application. Recovery modes

You can preset different modes for different applications

restore or change them later.

HD: Good display effect, suitable for general text reading.

Balanced: Stronger spirit, suitable for quick image browsing

and text.

Fast: Strong loss of detail, suitable for browsing websites.

Ultrafast: Stronger loss of detail, suitable for video playback.

Dark color enhancement


This function will change darker colors to

black and is generally used for

highlighting foreground colors, or

pages of bright colors, such as colorful icons, and

Poor quality scanned PDF files.

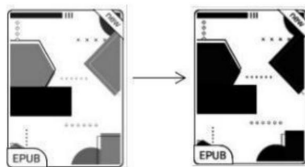


Light color filter

This feature changes the light colors of the page

white and commonly used for bleaching

background colors.

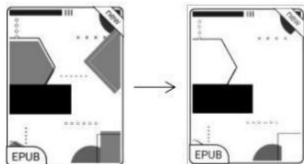

More settings


Customize other optimization settings for better user experience

experience. Go to E Ink Center/App Optimization or long press

press the application icon and select "Optimize".

Display

DPI: Adjust the overall size
interface and its default value
is 350.

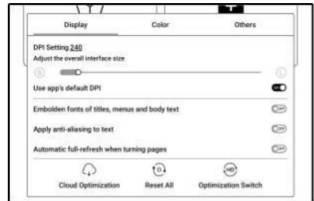

If some apps (such as Kobo)

adjusted to the minimum value and the edges are still cropped, switch

Please return to the original DPI value of the applications.

Anti-aliasing: Sharper text edges

Cloud Optimization: Some applications have been optimized for better
performance. Get optimization with just one click after connecting to the Internet.

Reset All: All optimization settings will be reset.

Master Switch: When turned off, some optimization effects will be
canceled, but the configuration will not be reset.

Color

Add strokes to text

Some text may be invisible due to background discoloration.

By adding strokes to the text, you can make the text visible again.

Recommended value: 1.

Background color

This is a bleaching of a large area of background color. This setting is recommended to use together with text enhancement and icon colors.

Otherwise, the text and small icons in the background will not be visible.


Icon color

Generally, this involves darkening the colors of some small colored icons on offer.

Cover color

Generally, this is a darkening of colors

large icons in cover style.

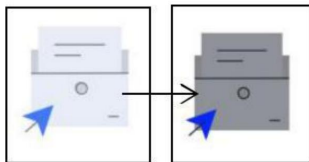

Web page text size

This is for the built-in WebView interface. If the DPI setting is invalid, you can try adjusting the font size of the website

Web page text color


When whitening doesn't work, you can try adjusting the website colors.

Embolden website text

If some fonts cannot be highlighted, you can try highlighting the text website.

Other

Stay active in the background This applies to applications that are continuously running in the background, such as Alarms, Notifications, Downloads. Running you can stop the application.

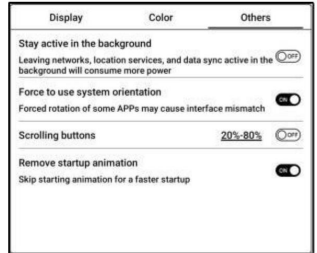

The force follows the direction of the system

Some apps will lock the direction. When the system rotates, if the APP cannot follow rotation, forced rotation can be used;

Forced rotation may cause some interfaces to not be displayed. display normally. For such APP, it is recommended to turn off forced rotation and use the original direction;

Scroll button settings

To the Scroll Settings page


button you can go from the Administration

applications (tap the menu bar

in the upper right corner of the homepage

Apps page) or from settings

Navigation balls.

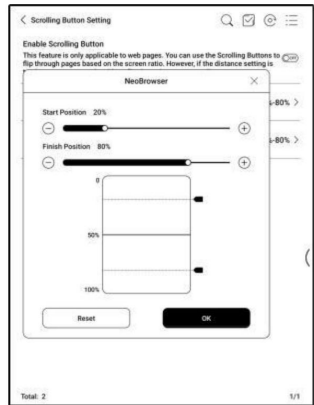

If this feature is enabled in third-party applications, you can

use the scroll buttons to turn pages. Based on the actual

situation on the page, you can set the desired initial and

end positions to avoid inconsistent or

partially duplicate content after page rotation.

It is recommended to set the start and end positions between 15% and 90

% of the screen. Too large a range can make it difficult to rotate effectively

pages, while too small a range can lead to excessive repeated content.

5. System functions

5.1 Screen recording

Long press the recording icon


screen, go to settings

screen recording. You can

adapt distinction, quality

recording, screen orientation, source

sound, frame rate, etc.

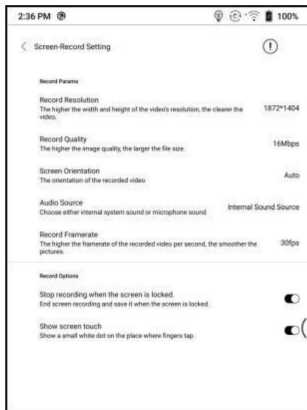

If you are using screen recording for the first time, we recommend first adjust the appropriate settings.

Tap the Screen Recording icon to open the widget for

recording. Tap the Start icon to begin recording and tap

Click the Close icon to stop recording.

Once the recording is complete, a thumbnail will appear, allowing you to
Play or share the recorded video.

Tap and hold the recording widget to drag it. Widget

The recording will not be recorded in the video.

Once you activate screen recording, the recording widget will be constantly

float on the screen. You can create various recordings. Tap

X close it completely.

The recording format is MP4. The save path is Storage/Movies/Captures

6. Library


The library only displays

supported formats.

All e-books are sorted by

creation time.

In the upper right corner

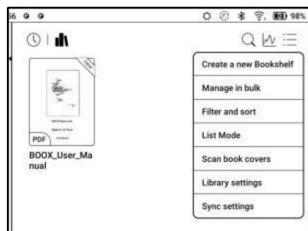

Library, you can search for books, create shelves, manage books

in bulk, check reading statistics, filter and sort, switch between

Cover and List modes, scan book covers, manage synchronization and

library settings.

Library mode

Tap the icon to switch

Directory mode that will be displayed

all supporting documents according to

directory structures in the Repository.



Cloud storage

After establishing cloud storage

you can download third parties


documents from cloud storage

to your device, but recording

documents from your device to

cloud storage in the current

is not supported at this time.

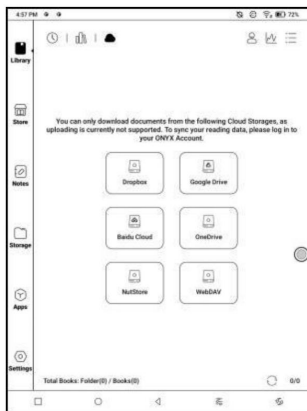

After inserting data into PDF documents, you can edit PDF documents

upload back to the original folder in the cloud storage. Other formats in

currently do not support this feature.

To sync your reading data, log in to your ONYX account.

Account management

You can link Cloud Storage accounts

and cancel in Settings/Accounts

(Other accounts)


If you unlink a Cloud account

Storage, downloaded books already

will not be available in

Library. However, after re-linking the same account, it is

you can continue to use it.

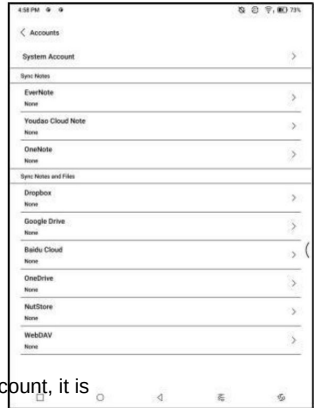

Bind WebDAV


Regarding account linking

WebDAV, please read the introduction

the process of binding to websites

pages of each cloud

storage. Different

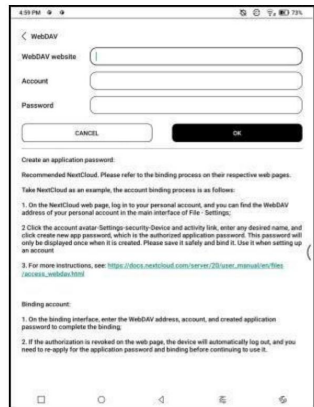

Cloud Storage can use different login methods.

For example, with NextCloud, you have to request an application password

on the website and use it to authorize login

instead of using the account password.

Cloud storage settings

PDF documents can be automatically

upload after documents

you leave. The sending speed is

limited by network and cloud speed


Storage speed limitation. It is not recommended to upload large files frequently.

documents. Instead, you can upload them manually if necessary

by long pressing the cover and selecting manual upload.

After logging into Cloud Storage, you can set the size

automatic uploading of PDF documents in the Cloud

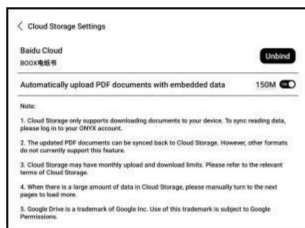

Storage settings with a default size of 150 MB and maximum size 300 MB.

Some cloud storage services may have monthly quota limits.

If you encounter errors such as inability to download or recording, first check for network problems, then contact

Check with cloud storage providers to see if they have a quota limit.

Filter and sort

By default, use on

all e-books and sort by

recent reading times in descending order

order;

Filter and sort	
Filter	Sort by
All Books ☒	Reading Time ☒
Local Books ☐	Time Added ☐
Purchased Books ☐	Name ☐
Finished Books ☐	Authors ☐
Unread Books ☐	Size ☐
Ascend ☐	Descend ☒
CANCEL OK	


Library settings

You can choose to display the subtitle

instead of file name, enable/disable

reading statistics or choose a path

scanning.

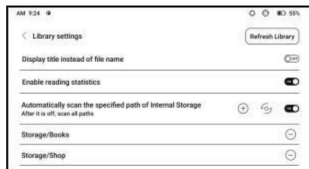

The default scan path is: Books and shop in Storage. The path

you can customize the scan and choose to automatically scan the specified

roads.

Note: In the following case, some documents will be

library are removed from the library. You can restore the source files

check from the save path.

1. Documents opened directly from another non-scan path in the Repository.

2. Documents that are not in the default scan path after

changing the default scan path.

Synchronization settings


Over Onyx Cloud you can

synchronize reading progress and data

across devices. This feature is in

enabled by default. If

you don't want to synchronize

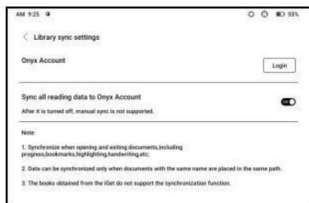

reading data from all documents, you can turn this function off.

If you don't want to synchronize the reading data of some documents,

long press on their book covers, go to Settings

sync and turn off their syncing individually.

Note: Currently, you can sync to the cloud

read-only data. The source document cannot be synchronized to

cloud. To synchronize, you need to add documents to the same

routes on different devices.

Reserve a property

Long press on the book cover

you can check information

related to the book, including the title,


author, format, size, course

reading, book details, Open

using, Lock, Rename,

Move, Custom Cover, Delete and


Share.

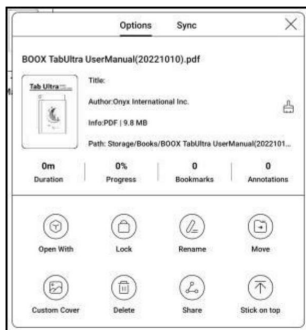

Save path: tap the save path to navigate to

actual storage location.

Clear settings

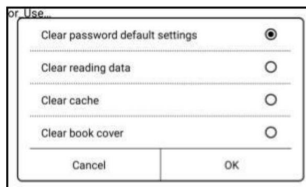

You can clear the password, read data,
cache and book cover.

Clear default password settings

Clear only the default settings of locked documents or

documents with their own passwords, you will not delete the corresponding passwords.

Clear reading data

All personal data for the selected book will be deleted. After

data cannot be recovered after deletion. Please perform this action with caution!

Lock

Add locks to documents (passwords for reading) to protect personal data reading. The password is used to open books in NeoReader. When



documents are exported or copied to other devices

or other applications, the password will no longer be valid.

The digital password only supports setting one password. After the first you do not need to set the digital password again if you use the digital password for other documents. For other documents you just need to add locks.

The read password cannot be retrieved. If you forget the read password, you can only reset your password through your Onyx account (only mobile phone login methods are supported) e-mail).

If you use this password by default, you can change the password add it directly to other documents after it is first set up. In this In this case, you don't need to add locks every time.

Reading statistics

This summarizes your personal statistics reading, including today's reading time, books read, books finished, total reading time, marks, and annotations.



The average reading time this week is based on 7 days and calculates the average daily reading time this week.

Tap Tags & Notes to go to the My page

notes and tapping any book in the Recent section

Completed books open the book.


If you don't want to use read statistics, you can turn it off in

Library settings. After it is turned off, the reading statistics icon in will no longer be displayed in the library.

7. NeoReader

Tap the center of the screen to bring up the reading menu. You can

Switch between multiple documents and select related functions.

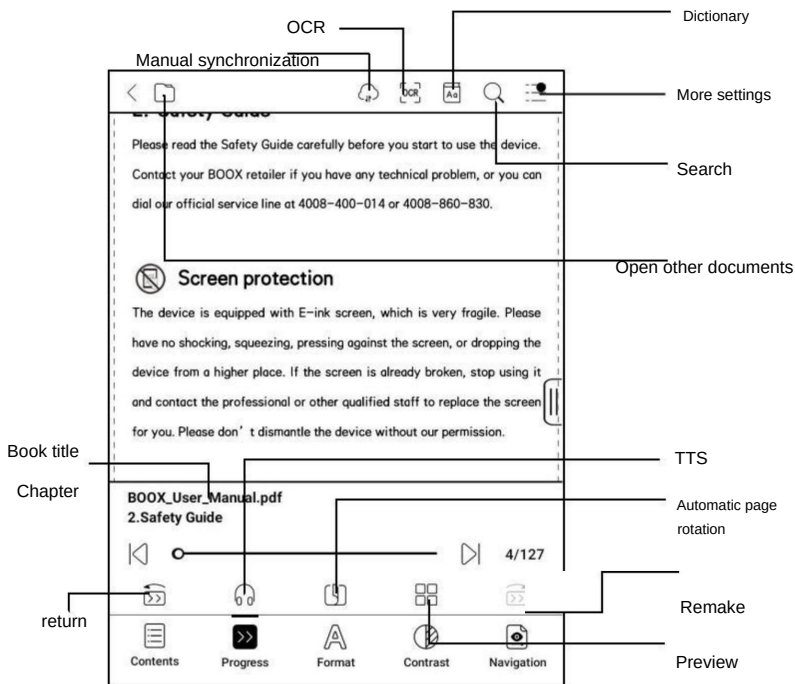

Floating toolbar

By default it is floating

toolbar collapsed to the right

When it is unpacked, it is long


press the toolbar and drag it

anywhere on the screen. You can

spread it out to the sides to prevent

covering the text while reading. When

need,

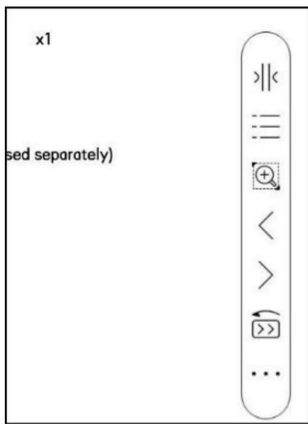

Swipe left or right from the edges of the screen to bring it up.

Automatically add an icon when using zoom and columns in PDF

Scrolling and Refresh icon (both are disabled by default),

to help you manage the enlarged document.

When the page is divided into multiple columns, a single click rotate each column and tap the virtual buttons to rotate the entire page

Long press to select a word

Long press on a word to bring up the dictionary dialog. You can


switch between different dictionaries. Select the one you want from the drop-down list.

which one you want.

This feature requires the installation of dictionaries. If you do not have them installed

dictionary, you cannot search for words. Tap any area outside the

to exit the dictionary dialog box.

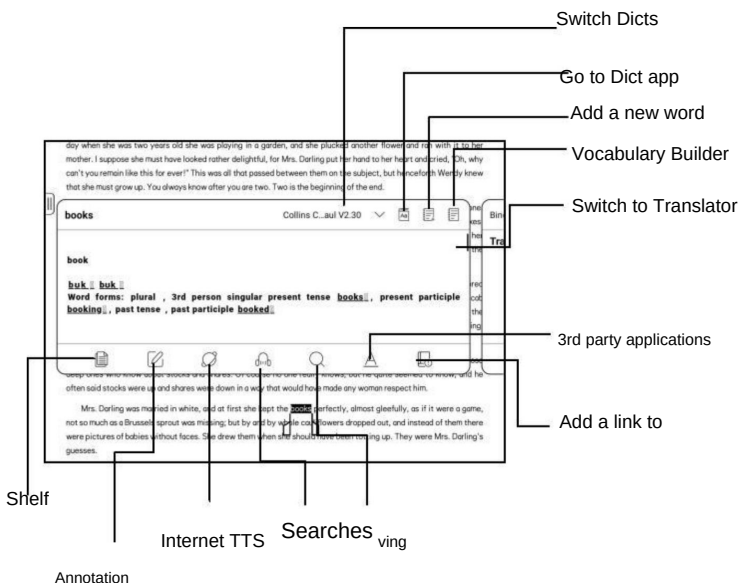

OCR

Only support images in formats including PDF

, CBR , CBZ

DJVU , PNG

Recognize one page at a time.


Choosing the right layout

(horizontal or vertical

layout) can

improve recognition accuracy. After recognition, long press

Add tags or look up dictionaries to any text.

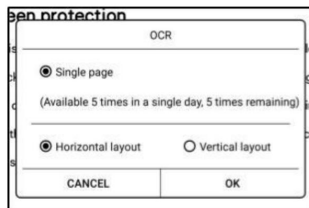

You are not logged in to your Onyx account, it is available 5 times a day

Log in to your Onyx account, it is available 10 times a day

If any of the recognized text is inaccurate, you can correct the text in

the notes dialog box (this will not change the original text in the image)

On pages that used OCR, you will see in the upper right corner
OCR icon. Check all recognized pages from
contents/bookmarks where you can quickly find relevant pages and go to
Click the OCR icon in the upper right corner to clear the content.
OCR.

Reading menu below (PDF)

The menu includes Content, Progress, Format, Contrast, Navigation.

Contents

This section includes a TOC,

Bookmarks, Annotations.

TOC supports 3-level

structure. The current page is in the table of contents

underlined. Click on each content

you will go to the corresponding page.

Click on any

BOOK Level	1
Contents	2
1 Standard Assessment	3
2 Safety Guide	4
3 Product View	5
4 User Interface	6
5 Library	76
6 Reader	97
7 Home	67
8 Storage	76
9 Apps	74
10 Settings	78

area outside the content interface for termination.

Bookmarks

While reading a book, you can tap the Bookmark icon in the upper right corner corner to bookmark the current page. To delete the page, tap the icon again.

Check all bookmarks in Contents/Bookmark. Click individual tabs will take you to the corresponding page.

Annotation

All highlighted, underlined, and annotated content will appear in

Contents/Notes. Here you can review, edit and delete

all relevant content.

Click on each content to go to the corresponding page. All

The content within the Annotation can be exported in txt format. Default path

to save the exported content, the file Storage/note/ is

same name as the original

document. You can also export the content to a third-party note application

To link third-party apps, go to Settings

system/Accounts (Dropbox is currently supported).


Highlight in colors

After selecting the text, you can choose

colors for highlighting and underlining.

This function is more suitable for

E Ink color models.

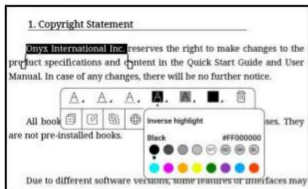

Black and white models cannot distinguish colors, but color highlights and underlines may display their own when exported to other devices original colors.

Some darker colors may completely obscure the text. Select

Please choose suitable colors for highlights.

Progress


The chapter name of the current document is displayed here (if not already chapter name is given, document name is displayed), number continuing pages, previous/next chapter, page number, automatic page turning, repeat and back, etc.

Click on the page number to view

Go to Page dialog box.

Enter the page number you want.

to go to the appropriate page.

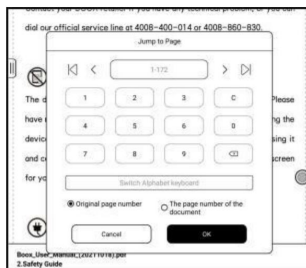

Format


Zoom: You can zoom in/out the entire

page, zoom in

border area or by downloading

fingers to enlarge any area,

which one you want.

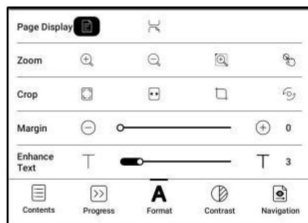

Crop: Tap the relevant functions to automatically crop

all empty areas or empty areas only on the left and right

or boundary area.

Margin: This is for the margin you want to keep for automatic

cropping. You can adjust it to the desired size.

In zoom state, when the zoomed page exceeds the area

screen, you can drag the page to check different areas.

A single tap rotates only the subpages. Tapping the virtual buttons to turn the entire page.

Contrast

Embolden: only embolden text

in PDF

Sharpen Img: Image blur

sharper

watermark: Bleach


images or backgrounds in light colors on the page

Dark Color Enhancement: Adjust settings for the entire page

or for text only, which darkens the display;

Image decomposition : Optimizes the image display effect using

color gradients;

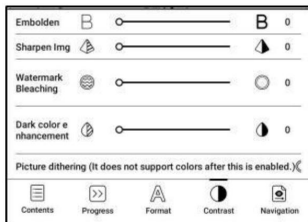

Navigation

This section contains Comic Mode, Article Mode, Reflow and other custom settings. You can crop the scanned PDF, divide it into columns, and set its browsing order.

Navigation / More

Crop: You can manually crop

blank margin in a single-page spread


or two-page mode.

Columns: Split current

doc into different columns

Direction: Set the order

reading split columns

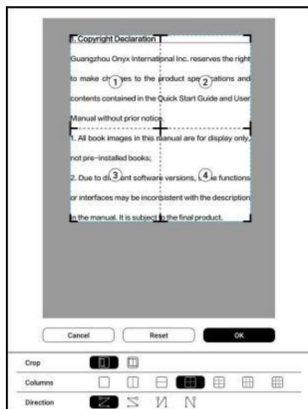

Reformat

Valid


only

for

PDF\DJVU\CBR\CBZ

in

scanned version

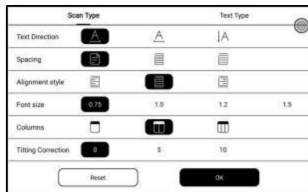

and


text version.

Reformat scanned documents

You can adjust the direction of the text,

Spacing, alignment, font size,

Columns, tilt correction.

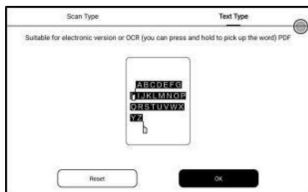

Reformat text documents

Apply to digital or OCR'd PDF. After reformatting, it can document using the flow-document function.

Reading menu at the bottom (Free-flow documents)

The menu includes content, progression, format, contrast, and split display and supports free-flow formats such as EPUB\TXT\MOBI\AZW3

V2 engine

Some formats with free flow, like is ePub\Mobi\azw3\txt\word\jeb\html, they use by default

V2 Engine. To switch to NeoReader, go to

Settings / Additional settings.


V2 Engine supports the original document layout, including font, line spacing, margins, graphic type, indentation, etc. When switching to V2

The document will be automatically closed by the Engine. The next time you open the document again open, the V2 Engine will be used. If you want to switch to NeoReader, you can deactivate the V2 Engine and reopen the document.

Progress



After switching, the document needs to be re-opened.
paginate




on V2 engine or modified font
and spaces. You can check

paging progress in Menu/Reading Progress. After loading the indicator progress, this means that the paging is complete. When it is complete you can drag the progress bar to move between pages or to another page page.

Format

Fonts: You can import your own fonts and use them. Save your fonts to the repository/font. When you open document, there will be fonts

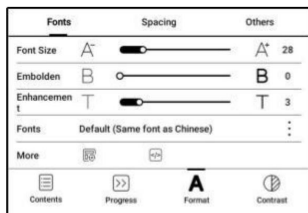

detected. Settings such as font size, font type, contrast, bold font, spaces only work for newly opened documents, but do not work on documents opened before settings .


If you want to restore the original document format, you can click the Restore original format icon.

Screenshot

Click on the two corners (shown on image) on the screen simultaneously take a screenshot (format PNG). This feature is only available on the reading page.

The screenshot can be saved to local storage and share it


QR code scanning and other means. Local storage path is Storage\Screenshots

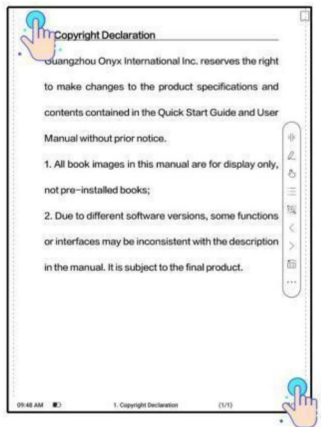

Restore

Tap the hamburger menu in the top right corner select Update settings.

When dragging the page, default settings use speed mode.

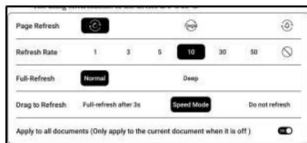

Deep full recovery is recommended for documents with large

with a lot of images and a darker background to reduce distractions while reading

creating ghosts.

Settings

Tapping the hamburger menu in

in the upper right corner to go to


reading-related settings such as

Global Settings, PDF Settings

Touch settings, TTS settings,

Export Settings, Screenshot Settings, Settings

floating toolbars, Additional settings, and Version number.

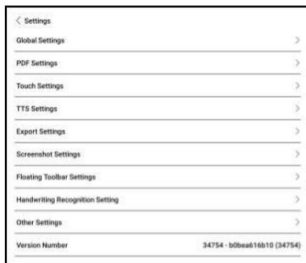


Dictionary settings

When looking up words in the Dictionary

ONYX and ONYX dictionary is used

Translate

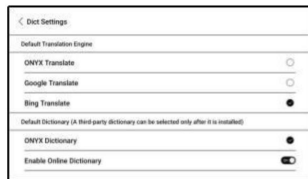

in the default state.

You can choose a different Translator app as your default.

or Third-party dictionary (third-party apps require first installation).

If you choose a third-party dictionary, the interface for word search will instead use a third-party dictionary interface

You cannot use other functions provided by the function.

ONYX word search.

Online dictionary

When the device is connected to the Internet, you can directly use an online dictionary to look up words.

You can use it without installing local dictionary files and It currently supports Chinese and English.

Different network environments will affect overall speed

word search. If the network is consistently bad, you can turn off Online Dictionary in the Dictionary settings and use local dictionaries instead.

RTL (Right to Left) Page rotation direction

This function is applicable for


some vertically oriented

books and comics. When

the page rotation direction cannot be determined automatically, the rotation direction

You can enable RTL (right-to-left) pages in your reading settings

Settings-Next.



Please note that by enabling this mode you will enable the direction

RTL page rotation for all documents. So choose

use according to your actual needs.

8.Shop

In a language other than Chinese Business

offers free publications E-books from

the internet.



Category

Books can be screened _ according to different

categories.



Book detail

Click on the book cover to open

book detail. Specific book

information. Click on "Full Edition"

Download " to download the file

book, then you can see it

book cover in the library.



9.Storage

Recent files

Here you will find the representative and the latest files. The latest files are sorted by time by default in descending order and automatically grouped by date.



Storage space

Here it contains the repository path and document categories. All files are automatically sorted into different categories by type, but the original file storage location is




does not change.

External OTG flash drives

This device supports flash drives

Type-C OTG. After inserting the flash drive
flash drive



will be automatically recognized and loaded as storage. OTG device
require power and will increase battery consumption

Low storage warning

Make sure you leave at least 300 MB of storage space for
normal system operation and storage of relevant data. When the storage is
less than 300 MB, a notification icon will appear in the system tray
"lack of storage".


10.APPS

Long press application

to see the Uninstall options,

Manage, Optimize and Add to

groups

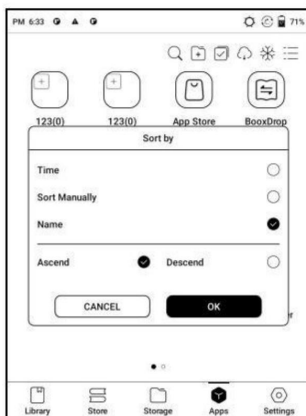

Application management

This page contains debug mode

USB, application

Information, Location settings,


automatic start, Restore

Mode settings, Freeze settings

Update automatically —

Configuring application optimization

third parties, Fill in available

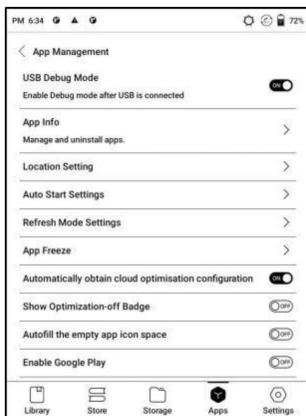

instead of automatically, enable Google Play.

Refresh app optimization tutorial

When you open third-party apps for the first time, a tutorial will appear

Application optimization. To view the tutorial again,

reset app optimization tutorial here.

Navigation ball

Click on NavigationBallto

expand or shrink. Its default setting

The display style is fan-shaped. You

can change other styles


(Horizontal style and Vertical

Style) from the settings. You can


also set its opacity to _ percent. You can

pin any

buttons that will always appear at the top.

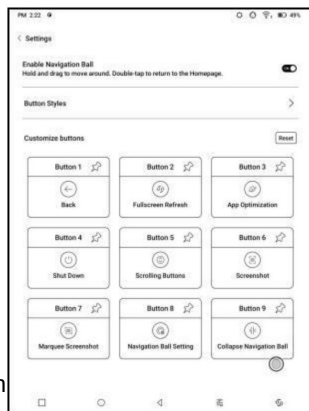


Everyone you can adapt
button function. Available
functions include some system
functions, switching applications and
application optimization.

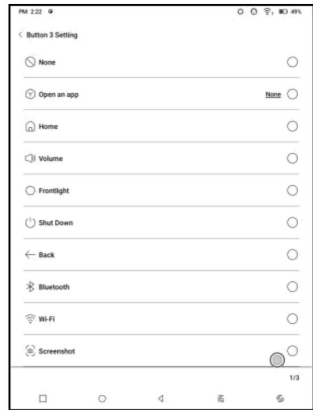

Dictionaries

When you open the dictionary for the first time and no dictionary is installed, a notification will appear that will take you to a local download that requires Wi-Fi connection. Word pronunciation requires dictionaries with voice files and TTS is not currently supported.

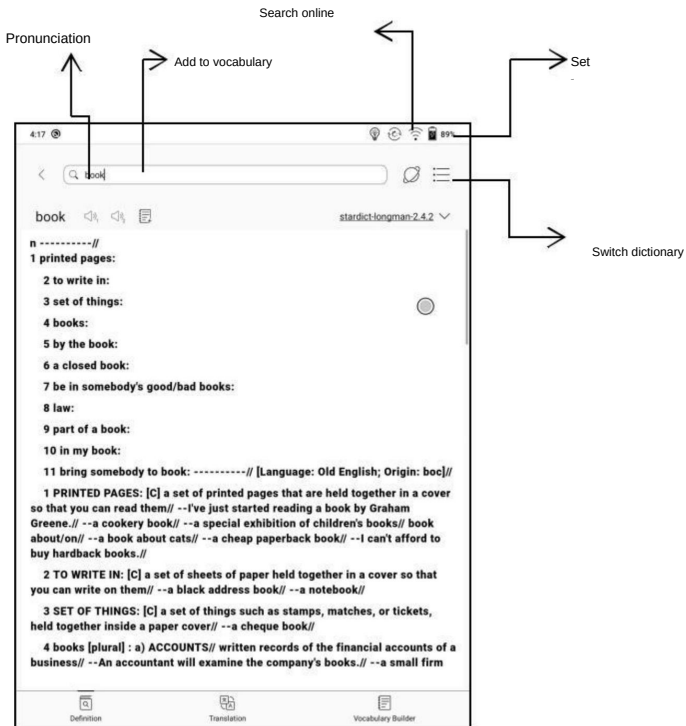

You can import your own dictionary files and save them in a designated storage paths: `sdcard\dicts\XXX;`

Each dictionary has a corresponding folder. For example, `dicts\Advanced Chinese Dictionary`

In Dictionary Settings/Preferred Dictionary Settings you can check all available dictionaries. Up to 20 are supported dictionaries.

If dictionaries are installed, you can look up words in search field. Search results are subject to the words contained in the dictionary. If you cannot find the word, go to another dictionary.

You can add the words you find to the Vocabulary Builder and manage them in bulk.

BOOXDrop

Connect your BOOX to your PC or mobile phone. Files

you can send to your BOOX from your computer or from the app

BOOX Assistant or save files from BOOX to your computer or

mobile phone. How to:

1. Open BooxDrop from the Apps page or Control Center.

2. Open a browser on your computer


- 2.1 No login required: Make sure you

your BOOX and PC are on the same network. Enter the IP address

displayed on the BooxDrop interface to the browser in


computer and connect.

BooxDrop will not disconnect automatically. If you want it to disconnect, disconnect it manually or on the BooxDrop interface.

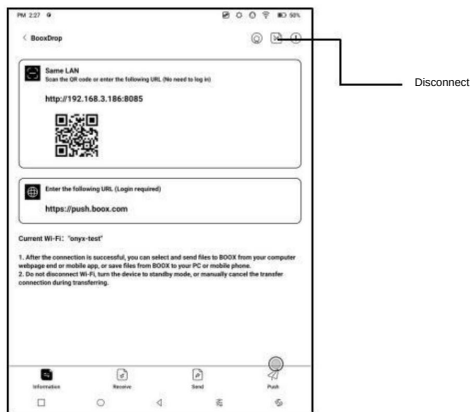

2.2 Log in to your Onyx account: open push.boox.com.

You can view connected devices and click open any device.

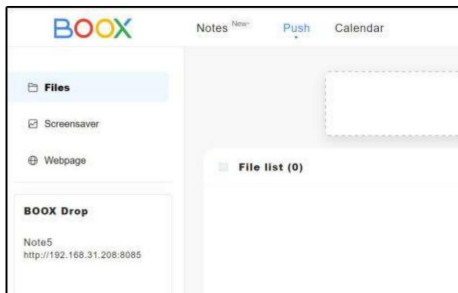

3. When you open the connected device, it will automatically recognize, whether your BOOX and your computer are on the same network. If are not on the same network, you cannot open the page. Change please on the same Wi-Fi.
4. When the connection is successful, you can load all the folders and files from your BOOX.
5. Send files to BOOX: You can select files on your PC and send them to BOOX. All sent files are grouped into corresponding folders on based on file formats.

Recent files: all files are sorted by time and just like Storage/Recent Files Library:

Books/xxx.epub (including all supported formats files)

Image: Pictures/xxx.png

Music: Music/xxxx.mp3

Sounds: Movies/xxxx.mp4

Download: Download/xxx.xxx (including

other than books, pictures, mp3, mp4, etc.) Storage:

Sends files to the selected repository.



6. Saving files to PC: when you select a file from your

BOOX on your PC, you can choose the save path you want

you want to save to your PC.

Push History

You can only view the send and receive history on your BOOX.

PushRead

In addition to Onyx Push, you can use RSS and OPDS in PushRead

Onyx Push

You can send web pages to your

BOOX over Push in

push.boox.com or BOOX

Assistant and read on your BOOX.


If you are using PushRead for the first time,

you must log in to the same Onyx

account on either push.boox.com or


BOOX Assistant, so on your

BOOX.

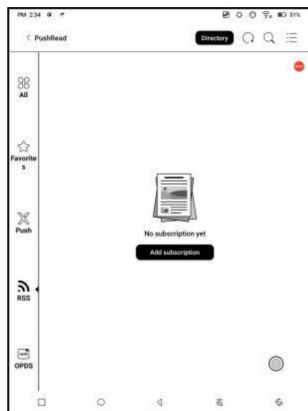

RSS\OPDS Subscription

You can add subscriptions from the list public resources. You can also adapt yours subscription RSS/OPDS. For first time addition you must create RSS subscription sources group to enable the source of the subscription add to the appropriate group.

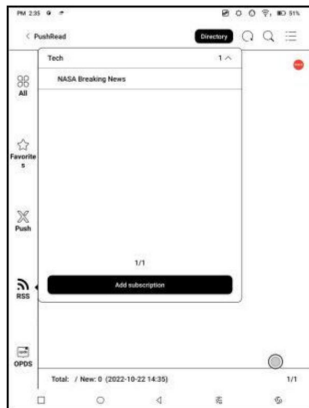

Web pages in PushRead require internet access to load for the first time. After The download can be read offline.

The default layout is Web Mode (the original web page layout). Tap the center of the screen to display a menu where you can switch to reading mode, change font size and completely reset screen.

Calendar note

The calendar note displays today's notes and today's reading.

Tap to open notes or books. You can add to each day note and set the note as screensaver. Please contact on

Screensaver / Calendar Screensaver settings screen.

Currently, calendar notes do not support cloud syncing.



After logging into your Onyx account, you can email notes in the format
PDF to the specified email address.

11.Settings

ONYX account

You can manage multiple accounts and switch between them

between them. Select accounts from the list.

Only account information is stored and

login status is not maintained



After switching to a different account, you must sign in again.

If you are logging into different accounts with different servers, change the

switching accounts also server.

ONYX account included: BooxDrop, Reading Statistics,

PushRead, Send to email.

Account link:

After logging in to the main account

you can connect two more

login methods share the same

ONYX account.Mobileand

< Account Link

Nickname Wing Drops	Modify
Mobile 138****1849	Unbind
Email Unbound	Bind
Wechat Unbound	Bind 

Email accounts support unlinking, and WeChat accounts

they do not support the lifting of the bond.

About the device

Contains model name, version

Android, MAC address and version

firmware.

Click on the model number to view

additional information, including capacity

touch versions, VCom, Other

information, Factory reset

settings etc.



Note: Running the factory reset function would

deleted all user data. Please back up your data first.


Languages and input

Users can on this page

set the system language, keyboard, and

input method and TTS;

Users can set languages

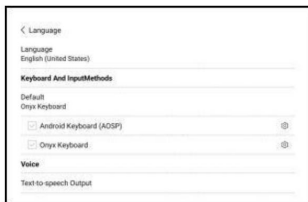

system and virtual keyboard. The system has a default

Android keyboard. Users can install third-party apps

pages for multiple input methods.

ONYX keyboard

Supports keyboard input, handwriting, and voice input.

You can activate it when you use it for the first time. Chinese system by default

settings use Chinese script. Other languages use

English handwriting by default. Other languages require download

the relevant language pack.

Switching support

between different languages.

Supported languages can be found at

Keyboard Settings page.



When an external

keyboard and device detects

keyboard, and




the option to configure the physical keyboard will appear in the notification area

center. Tap the notification to go to the settings page

keyboard.

With an external keyboard, you can

manually change the keyboard layout.

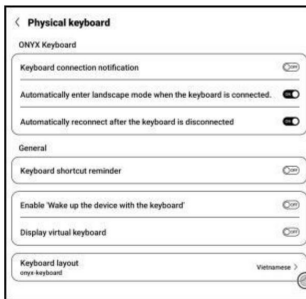

Meeting time

Users can choose between automatic or manual settings

date and time. When the device is connected to the Internet, it automatically sets the date and time according to the local time zone. Manual setting requires time zone, date and time settings and users can choose preferred time and date display format;

Power supply

Users can set the auto sleep timeout screen, power off timeout, disconnection delay when device goes to sleep mode, battery usage battery percentage automatic sleep mode when the cover is closed, etc.

Network

This is for Wi-Fi\VPN\Bluetooth settings. When Wi-Fi is connected, users can browse websites and download books over the internet to device.

Wi-Fi settings

Slide Wi-Fi On to display

list of available networks. Users can

they can select a network and then enter the password

for internet connection.



After Wi-Fi connection

successfully for the first time, the device will automatically save the Wi-Fi information.

Users only need to turn on Wi-Fi from the notification bar if

that they use the same WIFI next time.

By clicking the button " + " in the upper right corner of the Wi-Fi page

users can manually connect to another network that is not listed, such as

802.1x EAP.

Bluetooth settings

Turn on Bluetooth, you can search for nearby Bluetooth devices and then send requests to connection.



Bluetooth needs to be paired before use. Currently only supports eReader for receiving documents, sending documents from Boox eReader to other devices is not supported.

VPN settings


When you turn on the VPN for the first time, the system requires you to set a password. This password only needs to be used to unlock the screen or when restoring factory settings.

Other accounts

You can manage other accounts including

Google, DropBox, OneNote, etc.

These accounts are used only for sync notes.

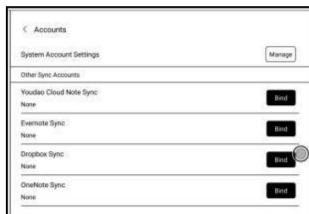

Password

You can set 4-16 digital passwords screen lock.

Android 11 models not supported password reset, keep your password correctly themselves.



System display


System font size

Support system size adjustment

font, default is standard size

font, a total of 4 sizes can be set:

small, standard, large, extra large;

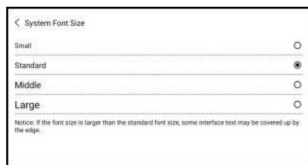

Custom homepage

The default home page is Library. As your home page

you can set any of the other function pages. On

You can return to the home page by tapping the home icon.

page in the drop-down notification center.

Full screen system refresh rate

The system will perform one full update every 5 operations

Library and Notes will automatically refresh once again due to the loading list and the actual number of operations will be one less than the set number;

Only icons display the functional area


The text below the Function icon can be hidden.

Enable Book Store

The built-in bookstore can be disabled, but cannot be uninstalled nor remove.

Gesture Manager


You can choose the navigation method system, either using gestures or using the navigation bar. For Gesture there are 3 bottom gestures and 2 side gestures

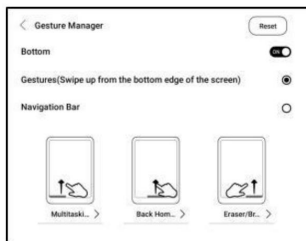

method. The navigation bar has two combinations of navigation buttons.

Side gestures

Swipe up and down gestures used to adjust brightness, volume, etc. by dragging the slider up and down.

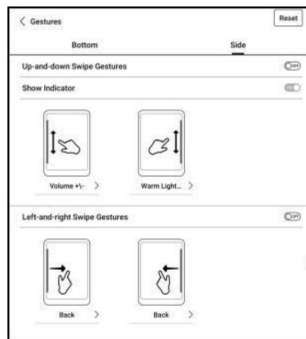

The swipe left and right gestures are used to performing custom functions by dragging from the sides inward.

This gesture may overlap with swiping left to turn pages and right. It is therefore recommended to choose appropriate gestures based on real needs so as not to affect the use of the main gestures.

Firmware update

Users can get the model number

Android version number

build and check for updates.

The upgrade will first check the local package and then the online package is network connection. Pause upgrade and download breakpoints are allowed. Please ensure


the device has more than 20% power before the update, and sufficient capacity.



Feedback

FAQ


If you have any problems, you can directly find questions in the FAQ, quickly find and solve problems.

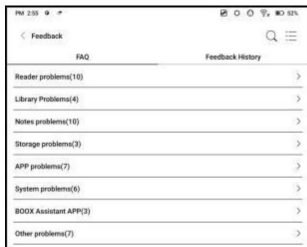

Send feedback

We welcome you to send us any technical problem or advice. This function collects the system information for assessing the problem.

Onyx will never disclose information about users' devices.

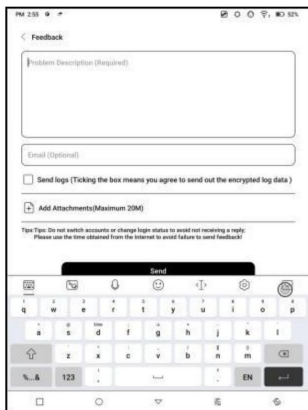

When the device is turned off, the related logs will be deleted. If you need to send feedback after the device is turned off, please enable Save logs locally in Feedback so you can Send related logs after device restart.

12. Thank you for your support

Thank you very much for your support.

More information about the products can be found on our official website: www.boox.com

If you have any questions, please contact us by email:

support@boox.com